

Custom WaveView User Guide

Version F-2011.09-SP1, December 2011

SYNOPSYS®

Copyright Notice and Proprietary Information

Copyright © 2011 Synopsys, Inc. All rights reserved. This software and documentation contain confidential and proprietary information that is the property of Synopsys, Inc. The software and documentation are furnished under a license agreement and may be used or copied only in accordance with the terms of the license agreement. No part of the software and documentation may be reproduced, transmitted, or translated, in any form or by any means, electronic, mechanical, manual, optical, or otherwise, without prior written permission of Synopsys, Inc., or as expressly provided by the license agreement.

Right to Copy Documentation

The license agreement with Synopsys permits licensee to make copies of the documentation for its internal use only. Each copy shall include all copyrights, trademarks, service marks, and proprietary rights notices, if any. Licensee must assign sequential numbers to all copies. These copies shall contain the following legend on the cover page:

“This document is duplicated with the permission of Synopsys, Inc., for the exclusive use of _____ and its employees. This is copy number _____.”

Destination Control Statement

All technical data contained in this publication is subject to the export control laws of the United States of America. Disclosure to nationals of other countries contrary to United States law is prohibited. It is the reader's responsibility to determine the applicable regulations and to comply with them.

Disclaimer

SYNOPSYS, INC., AND ITS LICENSORS MAKE NO WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, WITH REGARD TO THIS MATERIAL, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

Registered Trademarks (®)

Synopsys, AEON, AMPS, Astro, Behavior Extracting Synthesis Technology, Cadabra, CATS, Certify, CHIPit, CoMET, Confirma, CODE V, Design Compiler, DesignSphere, DesignWare, Eclipse, EMBED-IT!, Formality, Galaxy Custom Designer, Global Synthesis, HAPS, HapsTrak, HDL Analyst, HSIM, HSPICE, Identify, Leda, LightTools, MAST, METeor, ModelTools, NanoSim, NOVeA, OpenVera, ORA, PathMill, Physical Compiler, PrimeTime, SCOPE, Simply Better Results, SiVL, SNUG, SolvNet, Sonic Focus, STAR Memory System, Syndicated, Synplicity, the Synplicity logo, Synplify, Synplify Pro, Synthesis Constraints Optimization Environment, TetraMAX, UMRBus, VCS, Vera, and YIELDirector are registered trademarks of Synopsys, Inc.

Trademarks (™)

AFGen, Apollo, ARC, ASAP, Astro-Rail, Astro-Xtalk, Aurora, AvanWaves, BEST, Columbia, Columbia-CE, Cosmos, CosmosLE, CosmosScope, CRITIC, CustomExplorer, CustomSim, DC Expert, DC Professional, DC Ultra, Design Analyzer, Design Vision, DesignerHDL, DesignPower, DFTMAX, Direct Silicon Access, Discovery, Encore, EPIC, Galaxy, HANEX, HDL Compiler, Hercules, Hierarchical Optimization Technology, High-performance ASIC Prototyping System, HSIM^{plus}, i-Virtual Stepper, IICE, in-Sync, iN-Tandem, Intelli, Jupiter, Jupiter-DP, JupiterXT, JupiterXT-ASIC, Liberty, Libra-Passport, Library Compiler, Macro-PLUS, Magellan, Mars, Mars-Rail, Mars-Xtalk, Milkyway, ModelSource, Module Compiler, MultiPoint, ORAengineering, Physical Analyst, Planet, Planet-PL, Polaris, Power Compiler, Raphael, RippledMixer, Saturn, Scirocco, Scirocco-i, SiWare, Star-RCXT, Star-SimXT, StarRC, System Compiler, System Designer, Taurus, TotalRecall, TSUPREM-4, VCSi, VHDL Compiler, VMC, and Worksheet Buffer are trademarks of Synopsys, Inc.

Service Marks (sm)

MAP-in, SVP Café, and TAP-in are service marks of Synopsys, Inc.

SystemC is a trademark of the Open SystemC Initiative and is used under license.

ARM and AMBA are registered trademarks of ARM Limited.

Saber is a registered trademark of SabreMark Limited Partnership and is used under license.

All other product or company names may be trademarks of their respective owners.

Contents

1. Introduction to Custom WaveView	1
Supported Platforms and Operating Systems	1
Installing Custom WaveView	1
Using Private Color Maps	2
<hr/>	
2. Getting Started	3
Starting Custom WaveView	3
Setting Environment Variables	5
Application Overview	6
GUI Conventions	8
Using Mouse Buttons	8
Selecting Browser Items	8
Drag-and-Drop Operations	9
Numerical Values	9
Terminating the Application	9
Changing the Default Log File Directory	10
<hr/>	
3. Using the Waveview Window	11
Displaying Waveview Windows	12
Stack Mode	12
Row and Column Mode	14
Vertical Row and Column Mode	14
Horizontal Row and Column Mode	14
Tiled Row and Column Mode	15
Adding New Waveviews	15
Docking and Undocking Waveviews	15
The Active Waveview	16
Refreshing Waveviews	16
Deleting Waveviews	16

Contents

Renaming Waveviews	16
Undoing Waveview Operations	17
Toggling the Hierarchy and Signal Browser Displays	17
Displaying Waveview Titles	17
Clearing Waveview Contents	17
Changing the Order of Tabbed Waveviews	17
Synchronizing Waveviews	18
Dumping the Waveview Contents	18
Toggling the Console Window Display	18
<hr/>	
4. Loading and Displaying Waveforms	19
Opening Waveform Files	19
Using the Output View Browser	21
Filtering Signals	26
Displaying Signals	27
Updating Waveforms	27
Waveform Marching (Automatic Update)	28
Clearing Waveforms	28
Grouping Waveform Files	28
Adding Waveform Files to the Bookmark List	30
Finding Signals	30
<hr/>	
5. File Format Support	33
Supported Formats	34
Reading Compressed Waveform Files (UNIX Only)	34
Synopsys WDF Format	35
Importing .err* Error Files	35
Converting Existing Output Files	35
Lossless Compression	36
Lossy Compression	36
WDF Data Reduction	36

Direct WDF Output from Synopsys HSPICE	37
Required Netlist Parameters	37
Direct WDF Output from Synopsys NanoSim	37
Specifying WDF as the Default in .epicrc	38
-out Command-Line Options	38
*NanoSim cfg Command	38
Configuration Command	39
Direct WDF output from Cadence Spectre or UltraSim	39
Direct WDF output from Cadence Verilog-XL/NC-Verilog	39
Reading Textual Data	40
Tabulated Data in Real Numbers	40
Tabulated Data in Complex Numbers	41
2-Dimension Sweep Data in Real Numbers	42
2-Dimension Sweep Data in Complex Numbers	43
Measured Data without Name Header	44
SPICE PWL sources	44
Loading Multiple Files in Virtuoso	45
Virtuoso dcOp Parametric Analysis	45
Special Note for the ELDO COU Format	45
Special Note for the ADMS/ELDO WDB Format	46
Special Note for the PSF Format	46
Special Note for the WDF and fsdb Formats	47

6. Displaying Waveforms	49
X-Y Panel	49
Logic Panel	50
Mnemonic Mapping for Bus Signals	50
Smith Chart Panel	51
Polar Plot Panel	52
3-D Sweep Panel	52
2-D Sweep Panel	52
Displaying Multi-trace Waveforms	53
Eye Diagram Panel	54
Histogram Panel	54

Contents

Separator Panel	54
Changing the X-axis Variable.	55

7. Panel Operations	57
Basic Operations	57
Selecting Panels	58
Moving or Copying Panels	59
Deleting Panels	59
Pasting Deleted Panels	59
Grouping Panels	59
Ungrouping Panels.	60
Zoom Operations	60
X/Y (Box) Zoom	61
X Zoom.	61
Y Zoom.	61
X Zoom to Fit	61
Y Zoom to Fit	62
Un-zoom.	62
Undo or Redo Zoom.	62
Using Sliders in Zoomed Panels	62
Setting Zoom Ranges Manually	62
Panel Settings	63
Displaying Data Points	63
Controlling the Grid	64
Adjusting Logarithmic Scales	64
Using Fixed X-axis (or Y-axis) Full Scale	64
Changing Axis Font Size	65
Dual Y-axes	65
Setting Axis Attributes	65
Adjusting Panel Height.	66
Fitting Panels to Full Window Height	66
Setting Vector Radix.	67
Setting Vector Length.	67
Setting Waveform Display Preferences	67
Setting the Plot Mode for Complex Signals	67
Setting Panel Attributes	68

8. Waveform Operations	69
Working with Signals and Waveforms	69
Highlighting Waveforms	69
Ungrouping Highlighted Waveforms	70
Grouping Highlighted Waveforms	70
Deleting Highlighted Waveforms	70
Finding the Source of a Waveform	70
Getting Signal Information	70
Adding Signal Alias	71
Scanning Waveforms	71
Scan Configuration	71
Waveform Color Schemes	72
Local Mode	72
Global Mode (default)	72
Custom Waveform Colors	72
Modifying Waveform Attributes	73
Adding Text Labels	73

9. Measurements	75
Working with Cursors	75
Adding Cursors	75
The Active Cursor	76
Moving a Cursor	76
Jumping Cursors	76
Locking Pairs of Cursors	77
Horizontal Cursors	77
Cursors in Smith Charts and Polar Plots	78
Cursors in 2-D Sweep Panels	78
Cursors in 3-D Sweep Panels	78
Deleting Cursors	78
Working with Monitors	79
Adding Monitors	80
Deleting Monitors	80
Reconfiguring Monitors	80
Linking Monitors to Cursors	80
Using the Measurement Tool	81

Contents

Supported Measurements	81
General Measurements	84
Time Domain Measurements	87
Frequency Domain Measurements	97
Statistical Measurements	99
Level Measurements	102
S Domain Measurements	104
RF Measurements	104
Adding or Removing Measurement Favorites	105
Setting the Precision of Measurements	106
Exporting Measurements	106
<hr/>	
10. Multi-Trace Sweep Waveforms	109
Reading Multi-Trace Data	109
Loading Multi-File PSF Sweep Analysis Result	110
Creating a File Set from Multiple Files	110
Displaying Multi-Trace Signals	110
Breaking Multi-Trace Signals	111
Calculating Waveforms for Multi-Trace Signals	111
Selecting the Sweeping Parameter	112
Filtering Multi-Trace Waveforms	112
Using Multi-Trace Signals as X-Axes	113
Viewing or Modifying Sweep Signal Attributes	113
<hr/>	
11. Eye Diagrams	115
Unfolding Eye Diagrams	115
Tracing Waveform Points in Eye Diagrams	116
Configuring Eye Diagrams	116
Generating Jitter Histograms	117
Automatic Eye Measurement	117
Adding User-Defined Masks	118
Mask File Syntax	118
Incorporating Mask Files	118
On UNIX Platforms	118
On Windows 95/98 Platforms	119

On Windows NT Platforms	119
On Windows XP/2000 Platforms	119
On Windows Me Platforms	119
Mask File Example	119

12. Using the Equation Builder	123
Adding Signals to the Equation Builder	123
Assigning Aliases to Equations	124
Viewing the Result Stack	124
Adding .MEASURE Statements to Expressions	125
Defining Macros	125
Modifying Equations	126
Calculating Multi-trace Waveforms	126
Special Note Regarding FFT/DFT	126
Supported Equation Builder Functions	127
Supported Operators	127
Supported Mathematic Functions	128
Supported RF Functions	129
Supported Logic Operations	130
Supported Waveform Functions	131
Supported Measurement Functions	135

13. Waveform Post Processing	143
FFT/DFT Conversion	143
Viewing the Spectrum Panel	146
Calculating SNR/THD Using FFT	146
FFT of Complex Signals	147
Changing the FFT Axes Scale	147
A to D Conversion	147
Single-Bit A/D Conversion	148
Multi-Bit A/D Conversion	148
D to A Conversion	150
Applying .MEASURE Commands	150
Reducing Data Points	152

Contents

Generating Parametric Plots	153
Built-in Parametric Tool for HSPICE .ALTER Simulations	153
Jitter-vs-Time Tool	153
Selecting Reference Signals	154
Specifying the Target Signal.	154
Selecting Reference Edges	154
Target Signal Edges.	154
Jitter Types	155
Jitter Output Options	155
Exporting Waveform Data	156
Comparing Waveforms	156
Comparing Waveforms in Batch Mode.	157
Sampling and Converting Waveform Data.	158
Creating a Waveform Compare Control File	158
Adding Comments	158
Defining Parameters.	159
a2d_threshold.	160
bus	160
delay.	160
file_path	160
ignorex	160
ignorez	160
map	161
mapfile, map_hier.	161
match_type.	161
mean_range	162
mean_step	162
mean_tol.	162
ref_clock	162
report_style	163
report_type.	163
signal	163
start, stop, step.	163
t_tol.	163
v_abstol, i_abstol, v_reltol, i_reltol	164
when.	164
x_absmgn.	164
x_chkrange.	164
Controlling X- and Z-Level Constraints	165
Defining Aliases	165
Defining Rules	166

Checking Waveforms	167
Waveform Check Example	168
Checking Waveform Monotonicity	168
Checking Waveform Bounds	169
Checking the Waveform Envelope	169
Rules Section Example	169
Saving Waveform Comparison Results	170
Converting Signals to the Time Domain	170
Back-Annotating Signals to CustomExplorer	171

14. Using the PWL Editor	173
File Operations	173
Source Operations	174
Point Operations	174

15. Using the ADC Toolbox	177
Generic Versus Coherent ADC Toolbox	177
Overview of the ADC ToolBox	178
Input Signal of ADC Toolbox	178
DC DNL/INL Analysis	179
Sine Input	180
Ramp Input	180
Number of Sample Points and INL/DNL	180
Sampling Frequency and INL/DNL	181
AC Analysis: Coherent Sampling Versus Window Sampling	181
Coherent Sampling	181
Window Sampling	183
Exporting the DNL/INL/FFT Results as Waveform Data	184
Saving or Loading an Analysis Setup	184
ADC Toolbox Display Controls	184
Sampled Signal Window	184
Histogram, DNL, and INL Windows	185
Power Spectrum (Sine Input Only)	185
AC Dynamic Characteristics	186

Contents

DC Static Characteristics	186
Running Batch-mode ADC Analyses	187
<hr/>	
16. Using the Coherent Sample Only (CSO) ADC Toolbox	189
Input Signal Requirements	189
Preparing the Input Waveform	189
Sampling the Input Waveform	191
Preparing Test Benches for the CSO ADC Toolbox	191
Input Signal Strength	192
Input Sine Wave Frequency	192
CSO ADC Toolbox User Interface	192
Input Parameters	192
Selecting Sampling Parameters	195
Sine Input	195
Ramp Input	195
Exporting DNL/INL/FFT Results as Waveform Data	196
Saving or Loading an Analysis Setup	196
ADC Toolbox Display Controls	196
Sampled Signal Window	196
Histogram, DNL, and INL Windows	197
Power Spectrum (Sine Input Only)	197
AC Dynamic Characteristics	198
DC static Characteristics	198
<hr/>	
17. Analysis Command Environment (ACE)	199
Using ACE Commands in Custom WaveView	199
<hr/>	
18. Printing Waveforms	201
PostScript Print Layout	201
Printing on UNIX Platforms	202
Printing on Windows Platforms	202

19. Advanced Controls	203
Saving and Restoring Job Sessions	203
Saving a Job Session	203
Restoring a Job Session	204
Loading Setup from Other Viewer Tools	204
Customizing Bind Keys	204
Bindkey Functions	205
Top Menu-operated Bind Key Functions	205
Waveview Toolbar Bind Key Functions	209
Other Bind Key Functions	210
Preference Settings	212
Configuring Custom WaveView Manually	212
Customizing File Browser Filters	213
Configuring "Send To" in the Windows Environment	214

20. Troubleshooting	215
Linux Platforms	215
Screen Refresh	215
Alternative Methods for Backing-store Setup	216
Locate the XServers File	216
Enable Backing-store for Your Xserver	216
Restart Your Xserver to Enable the Changes	217
With GNOME	217
Program Crashes During Startup on Linux Platforms	217
X-Window Font Warnings	217
XmTextField Font Warning	218
Cannot Change FlexIm License File	219

A. Preference Settings	221
Custom WaveView Preference Settings	221
General Settings	221
Waveview Settings	223
Panel Settings	226
Signal Settings	229

Contents

Color Settings	231
Threshold Settings	232

Index	235
------------------------	------------

Introduction to Custom WaveView

This chapter contains introductory information for Custom WaveView.

Custom WaveView is a graphical waveform viewing and analysis program for analog/mixed-signal IC design simulations, which can help you to use simulation tools more effectively with:

- High-performance waveforms database I/O to access large amount of simulation data efficiently.
- Extensive mixed-signal display functions and analysis capabilities to extract design parameters from simulation result.

Supported Platforms and Operating Systems

See the *CustomExplorer and Custom WaveView Release Notes* for information on the latest supported platforms and operating systems. The release notes are available on SolvNet (<http://www.solvnet.com/>) in the Download Center.

Installing Custom WaveView

See the *CustomExplorer and Custom WaveView Installation Guide* for installation information, which is available from <http://www.synopsys.com/install>.

Using Private Color Maps

On X Windows platforms, Custom WaveView automatically searches for usable colors from the shared public color resource. A private color map is usually not needed even if you have color-intensive applications such as a web browser running. Should Custom WaveView fail to obtain the needed color resource, you can force the use of private color map with the `-priv` option. Using a private colormap ensures proper color display when the mouse pointer moves into any of the Custom WaveView windows.

Getting Started

This chapter provides information on how to invoke and use Custom WaveView.

This chapter contains the following major sections:

- [Starting Custom WaveView](#)
- [Application Overview](#)
- [GUI Conventions](#)
- [Terminating the Application](#)
- [Changing the Default Log File Directory](#)

Starting Custom WaveView

Before starting Custom WaveView, consider any environment options you might want to set. See [Setting Environment Variables](#) for more information.

On UNIX and Linux platforms, enter `cx -w` or `wv` at the command line to start Custom WaveView.

The following command-line options are available:

Option	Action
<code>-ace_perl_gui</code>	Starts ACE Perl in GUI mode.
<code>-ace_perl_no_gui</code>	Starts ACE Perl in batch mode.
<code>-ace_no_gui</code>	Starts an ACE Tcl script in batch mode.
<code>-ace_gui</code>	Starts an ACE Tcl script in GUI mode.

Chapter 2: Getting Started

Starting Custom WaveView

Option	Action
-m	Opens the ACE command console and shell.
-h	Help message.
-c	Batch mode WDF conversion (see -r, -ri, -rv, -w).
-compare rule_file [out_file] [-x sx_file]	Batch mode waveform comparison.
-display host:screen	Starts 'wv' by displaying the window to host.
-v	Reports software revision.
-priv	Enables a private colormap.
-k	Quick start without the greeting window.
-load	Preloads waveform data to memory. fsdb and NPX-SDIF files cannot be preloaded. Just the sweep results from tr0 and NW files can be preloaded.
-r mode	Performs a reduction for WDF conversion. 0:default, loss-less, 1:medium reduction, 2:high reduction (see -c).
-replay_delay time	Sets the delay time in milliseconds when replaying a log file.
-ri itol	Reduction current tolerance (see -c, -r).
-rv vtol	Reduction voltage tolerance (see -c, -r).
-spxrc pref_file	Starts Custom WaveView using the preference settings specified in the pref_file.
-x session_file	Loads a session file.
-y session_file	Applies a session file to existing waveform files.
file1, file2, ...	Loads waveform files.
-64	Invokes the 64-bit binaries for Sun, HP, and Linux platforms.

Setting Environment Variables

When starting Custom WaveView, you might want to set one or more of the following environment variables:

- `SW_SX_QUEUE_LIC` (not supported on Windows platforms)
Set to 1 to enable Synopsys license queuing. FlexIm license queuing is not yet supported.
- `SW_SX_FAST_COU`
Set to 1 to enable the fast COU file reader. Defaulted to 0. Fast COU reader reads multi-run COU files much faster.
- `SW_SX_FAST_JWDB`
Set to 1 to enable the fast WDB file reader. Defaulted to 1. Fast WDB reader does not require the Java server.
- `SW_SX_HELP` (UNIX only)
Points to the directory that contains the Custom WaveView online help.
- `SW_SX_INIT`
Defines the location of the `spxinit` file for top menu customization.
- `SW_SX_INIT_DIR`
Defines the Custom WaveView initial startup directory.
- `SW_SX_LOG_DIR` (UNIX only)
Defines the output directory for the log file `sxcmd.log`. Default location is the current working directory.
- `SW_SX_MASKFILE`
Points to user-defined mask files for eye diagrams.
- `SW_SX_ORG_ADC`
Set to 1 to use the old version of the ADC Toolbox.
- `SW_LIC_TIMEOUT`
Sets the amount of time that Custom Waveview holds on to a license when idle. Once the set time is expired, a dialog asks you to either reclaim the license or exit and save the session. The minimum value is 30 (minutes).
- `SW_SX_TK_LIB`

Chapter 2: Getting Started

Application Overview

Points to the Tk runtime library for running ACE

- `SW_SX_TMP_DIR` (UNIX only)
Points to the temporary directory for reading a compressed (gzipped) waveform file. Default directory for temporary uncompressed files is the current working directory.
- `SW_SX_USE_AMAP` (UNIX only)
Set to 1 to use the map files in the Artist amap/ directory to map signal names.
- `SW_WLF_READER`
Points to the wlf2sx executable for reading the ModelSim WLF format.
- `SX_HOME` (UNIX only)
Defines the Custom WaveView home directory. Custom WaveView searches for the .spxrc file in \$SX_HOME if SX_HOME is defined.
- `SW_SX_64`
Set to 1 to point to the 64-bit binaries.

Application Overview

The following figure shows the Custom WaveView main window.

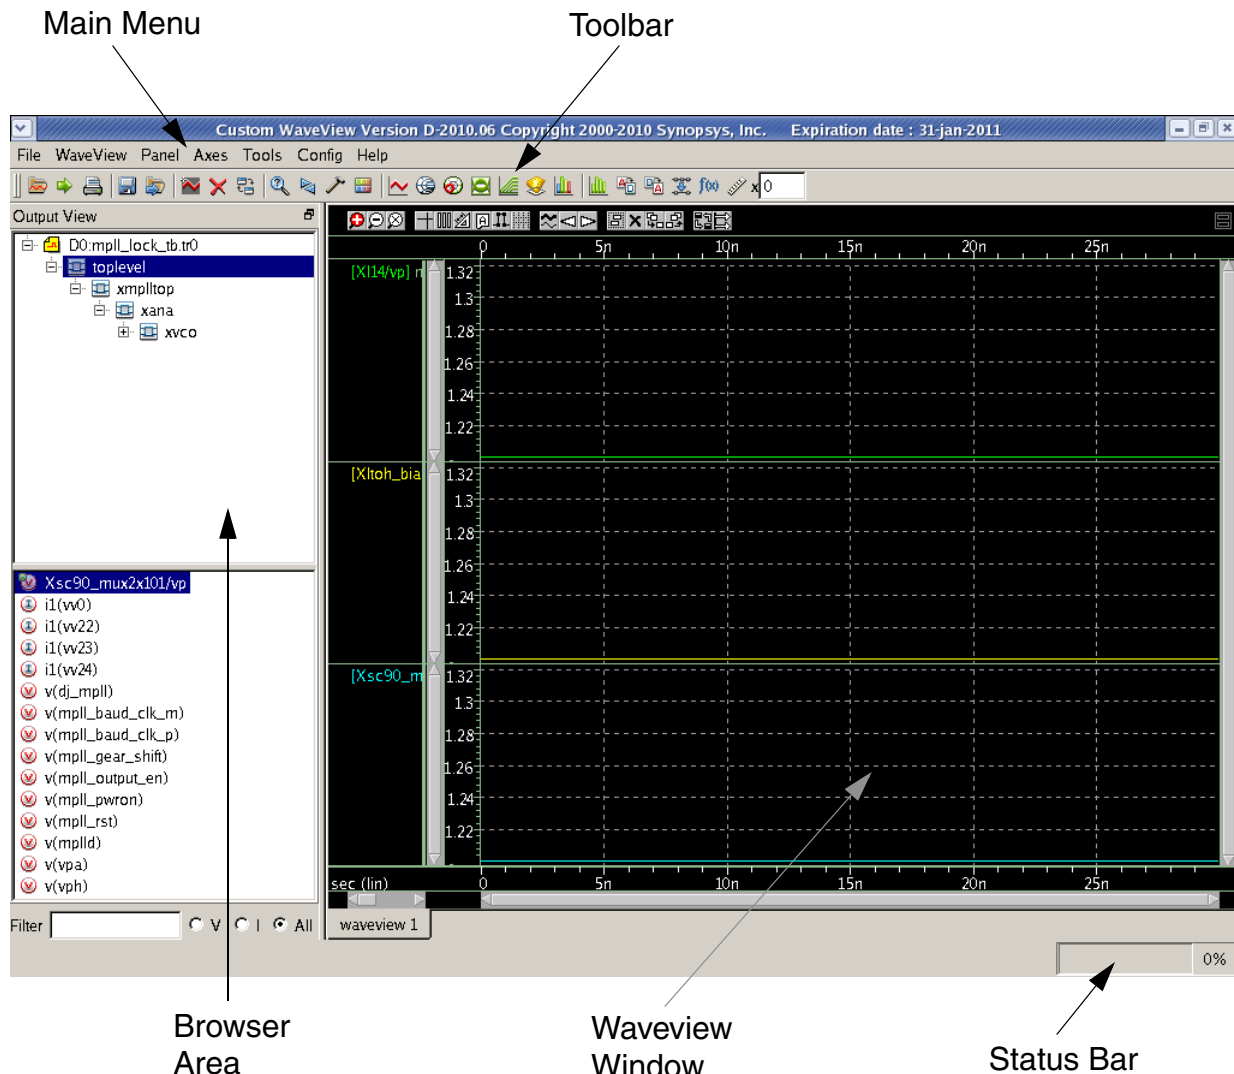


Figure 1 Custom WaveView main window

The main window is comprised of the following parts and associated functions:

- Main Menu: The top application menu bar.
- Toolbar: The toolbar shortcuts to some of the top menu entries.
- Status bar: The status bar reports progress of operations such as waveform loading and signal searching.
- Browser area: The Browser area contains the Output View browser including the top hierarchy browser and the bottom signal list window.

- OutputView browser: displays waveform data hierarchies.
- Waveview window: The waveview window is the waveform viewing area. Multiple waveviews can be opened inside the waveview window.
The width of the browser area and the waveview window can be adjusted using the vertical pane bar in between the Browser and the waveview area.

GUI Conventions

The following sections explain the conventions used in the Custom WaveView GUI.

Using Mouse Buttons

To maximize GUI compatibility between the X-Windows and the MS-Windows environment, Custom WaveView uses only two mouse buttons: the right and the left mouse buttons. The middle mouse button is not used.

The left mouse button is used in selecting an action button, a browser item, zooming range and moving a slider bar. The right mouse button is used to invoke the popup context menu for a selected item/area.

The mouse wheel is supported on both the Windows and the UNIX platforms.

Selecting Browser Items

To select a single browser item, click the left mouse button on an item. To make multiple selections, click the left mouse button while pressing and holding the **Shift** key a second item to select all items in between, or click the left mouse button while pressing and holding the **Ctrl** key on an item to toggle the selection state of the item.

In a hierarchy browser, you can expand an item to browse its child items. Left click the + icon box to the left of a closed item or double-click the item to open it. Left click the - icon box to the left of an opened item or double-click the item to close it.

Drag-and-Drop Operations

Items from the OutputView browser can be dragged and dropped to waveview windows. Items can be dragged and dropped inside or between the waveview windows.

To start a drag-and-drop operation, hold down the left mouse button over an item, drag it over to a drop-site and release the button to complete the operation. If the dragged item is a member of a multiple selection set, all selected items are involved in the drag-and-drop operation.

Numerical Values

All GUI dialog fields accept values in the scientific number format (1.00E+02) or numbers with scale unit such as nano (n) and micro (u).

The following scale units are supported:

- T - 1E12
- G - 1E9
- M (upper case) - 1E6
- MEG - 1E6
- x - 1E6
- k - 1E3
- m (lower case) - 1E-3
- u - 1E-6
- n - 1E-9
- p - 1E-12
- f - 1E-15

Terminating the Application

To exit Custom WaveView, select **File > Exit** from the top menu. Press **Q** in any waveview window to exit the application.

Changing the Default Log File Directory

Custom WaveView by default outputs log files in the working directory. Use the `SW_SX_LOG_DIR` environment variable if you want to save the log file to a different directory.

Using the Waveview Window

This chapter contains information on how to use the waveview window.

The waveview window is the waveform display area in Custom WaveView. Left click over the corresponding tab area of a waveview to bring it to foreground.



Displaying Waveview Windows

A waveview window can have one or more non-overlapping Panels. Panels in a waveview can be arranged in two modes: vertical stack or independent row/column. In the vertical stack mode, panels stack top down and share a common horizontal axis. In the independent row/column mode, panels are arranged from left to right in a row. Panels in the row/column mode are independent from each other. A small icon at the upper-right corner of the waveview indicates the waveview orientation.

The following display modes are available:

- [Stack Mode](#)
- [Row and Column Mode](#)
- [Vertical Row and Column Mode](#)
- [Horizontal Row and Column Mode](#)
- [Tiled Row and Column Mode](#)

Stack Mode

To view waveviews in vertical stack mode, right-click a waveview tab and choose **Stack Layout** from the menu that opens. Custom WaveView displays waveviews in this mode by default.

Figure 2 shows the vertical layout display.

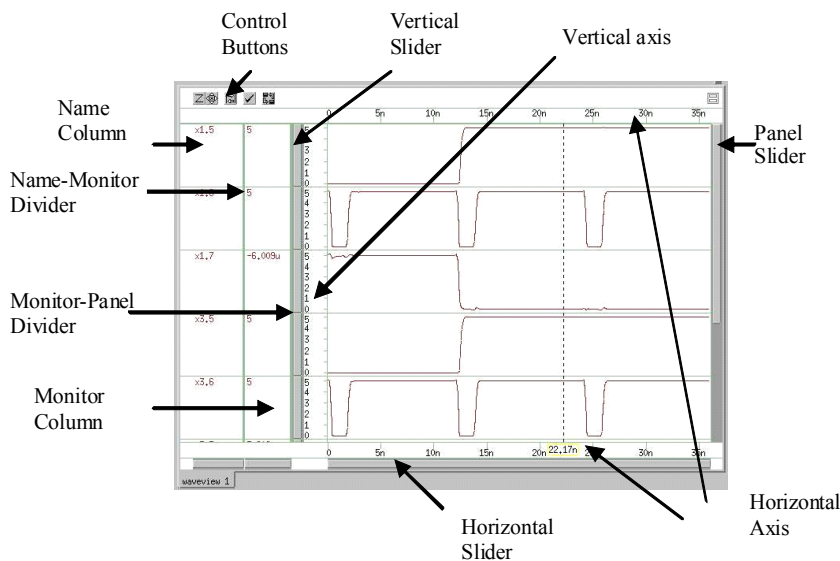


Figure 2 The Vertical Stack mode

The vertical layout has the following display components:

- **Control Buttons:** Provides shortcuts to some of the commonly-used waveview functions.
- **Vertical Slider:** Panes zoomed waveforms vertically. It is not displayed for logic panels.
- **Vertical Axis:** The vertical axis of a panel. For a logic panel, it displays the vector width and radix.
- **Panel Slider:** Panes the entire panel stack vertically when the waveview height is too small to show all panels. Mouse wheel can be used to scroll this sidebar.
- **Horizontal Axis:** The common x-axis of all panels, which appears at both the top and the bottom of a vertical waveview.
- **Horizontal Slider:** this slide bar is used to pane zoomed waves horizontally.
- **Monitor Column:** Displays waveform or cursor related values. Multiple monitors can be added. A horizontal slide bar at the bottom scrolls long value strings horizontally.
- **Monitor-Panel Divider:** Defines the left boundary of the waveform plotting area. Left-click and drag over the divider to resize the width of monitor columns.

Chapter 3: Using the Waveview Window

Displaying Waveview Windows

- **Name-Monitor Divider:** Defines the border between the name and monitor area. Left-click and drag the divider to resize the width of name and monitor columns.
- **Name Column:** Displays waveform names. A vertical slide bar scrolls name list vertically. A slide bar at the bottom scrolls long name strings horizontally.

Row and Column Mode

To view waveviews in row and column mode, right-click a waveview tab and choose **Row/Column Layout** from the menu that opens.

Vertical Row and Column Mode

To view waveviews in vertical row and column mode, right-click a waveview tab and choose **Single Column Layout** from the menu that opens.

Horizontal Row and Column Mode

To view waveviews in horizontal row and column mode, right-click a waveview tab and choose **Single Row Layout** from the menu that opens.

Figure 3 shows the independent row and column display.

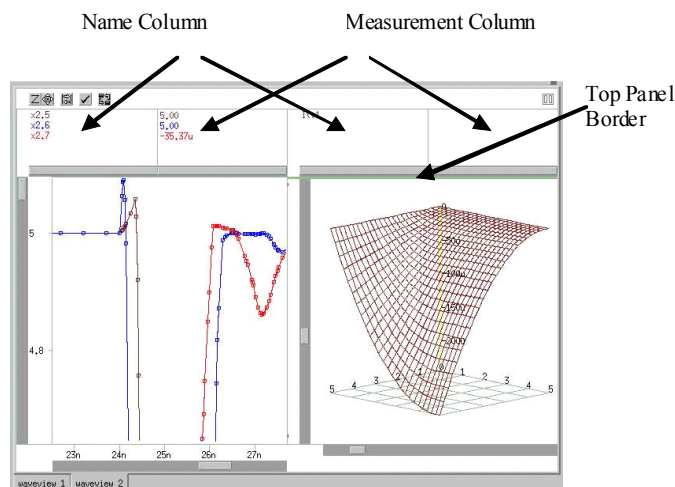


Figure 3 Horizontal Row and Column mode

Panels in the independent row/column layout are arranged in a similar way to the Vertical Stack mode, except for the following differences and additional display components:

- Name column: The name column is located at the top of each panel. The vertical and horizontal slide bars can be used to scroll long list or long name strings.
- Monitor column: The monitor column is at the top of each panel. A horizontal slide bar at the bottom scrolls long value strings horizontally.
- Top Panel border: The top border can be moved to redefine the top boundary of the waveform plotting area. Drag the divider and move it vertically to resize name/monitor height.

Each waveview window is associated with a waveview context menu that can be invoked from the upper right corner of the window, or from the WaveView tab area. Choose an item from the waveview context menu to rename, delete or refresh a waveview, or edit the waveview title.

Tiled Row and Column Mode

To view waveviews in tiled row and column mode, right-click a waveview tab and choose **Tile Row/Column Layout** from the menu that opens.

Adding New Waveviews

Custom WaveView opens an empty waveview initially when the application starts. To add more waveviews into the Wave window, click the **New Waveview** toolbar button or select the top menu **WaveView > New**. The newly-created waveview is placed on the top of the waveview stack.

Docking and Undocking Waveviews

Overlapping (docked) waveviews in the WaveView window can be undocked into individual pop-up windows. Choose **WaveView > Dock/Undock** from the main menu to toggle all waveviews between the docked and undocked modes. All waveviews must be docked or undocked together. Custom WaveView does not allow WaveViews to be docked or undocked individually.

Waveviews can also be docked or undocked using the waveview docking control button located at the top of each individual waveview window.



Figure 4 Waveview docking control button

The Active Waveview

In the dock mode, the top Waveview is considered the active Waveview. In the undock mode, the topmost Waveview or the selected Waveview is the active Waveview. Select a Waveview window from the top menu **WaveView > Select**, or click the left mouse button over the window frame or tab. The selected Waveview becomes the active waveview.

Refreshing Waveviews

Select the top menu **Waveview > Refresh** to refresh the display content of the active waveview.

Deleting Waveviews

To delete the active waveview, click the **Delete Waveview** toolbar button or choose **WaveView > Delete** from the main menu. Choose **WaveView > Delete All** to delete all waveviews.

Renaming Waveviews

Choose **WaveView > Rename** from the main menu to rename the active waveview. To rename a waveview directly, right-click the name tab area (or the upper right corner) of a waveview and select **Rename WaveView**.

Undoing Waveview Operations

To undo a waveview operation, choose **WaveView > Undo** to undo the previous waveview operation. You can undo object insertions and deletions; axis, radix, and display settings; and zoom operations. Some waveview operations, such as adding or deleting a waveview or relocating a signal, cannot be undone.

Toggling the Hierarchy and Signal Browser Displays

To toggle the Hierarchy and Signal Browser displays, choose **WaveView > Hide/Show Browser** from the main menu bar or press **Ctrl-H** on your keyboard.

Displaying Waveview Titles

To hide or display the title of a waveview, right-click a waveview tab and choose either **Show Title** or **Hide Title** from the menu that opens.

Clearing Waveview Contents

To clear the contents of a waveview window, right-click inside a waveview and choose **Clear Waveview** from the menu that opens.

Changing the Order of Tabbed Waveviews

If you have multiple waveviews open at the same time, you can change the order of those waveviews by moving the associated tabs left or right.

To change the order of tabbed waveviews, right click the tab of the waveview you want to move, and choose **Move to Left** or **Move to Right** and **1 tab**, **2 tab**, **3 tab**, **4 tab**, or **5 tab**.

Synchronizing Waveviews

A stack-mode waveview can be synchronized with other stack-mode waveviews. Cursors and the X-axis of a synchronized waveview are updated automatically when the X-axis display range or the active cursor location changes in other synchronized waveviews. Choose **WaveView > Sync/Unsync** to toggle the sync state of the active waveview, or choose **WaveView > Sync/Unsync All** to toggle the sync states of all waveviews.

Dumping the Waveview Contents

All waveforms in a waveview can be included when performing a screen dump, even if the waveforms are scrolled above or below the currently visible portion of the waveview window.

To include all off-screen waveforms, choose **WaveView > Dump Screen** from the main menu. Click the **Use Maximum WaveView Height** check box, and click **OK**.

On Microsoft platforms, you can copy and paste the waveview contents to any application that has access to the clipboard. To copy the screen bitmap of a waveview window to the clipboard, choose **Copy to Clipboard** from the WaveView context menu. To export a waveview in the vector-based Windows EMF (Enhanced Meta File) format, choose **Screen Dump to EMF**.

On UNIX platforms, you can dump the waveview contents to the JPEG, PNG, or EMF formats. Choose **Dump Screen** from the waveview context menu to dump the display content.

Toggling the Console Window Display

To toggle the display of the Console window, choose **WaveView > Hide/Show Console** from the main menu bar.

Loading and Displaying Waveforms

This chapter contains information on how to load and display waveform files.

This chapter contains the following major sections:

- [Opening Waveform Files](#)
- [Using the Output View Browser](#)
- [Displaying Signals](#)
- [Filtering Signals](#)
- [Displaying Signals](#)
- [Updating Waveforms](#)
- [Clearing Waveforms](#)
- [Grouping Waveform Files](#)
- [Adding Waveform Files to the Bookmark List](#)
- [Finding Signals](#)

Opening Waveform Files

Custom WaveView automatically detects waveform format when a file is open. To load a waveform file, click the **Import Waveform File** toolbar button or choose **File > Import Waveform File**.

Select a waveform data file (or multiple files) and click **OK** to open the selected waveform files, or click **Apply** to load more files without closing the dialog window.

You can open waveform files with the following options:

- **Preload all waveforms to RAM**

When you open a waveform file, only the signal names and hierarchy directory is loaded into the system memory by default. The actual waveform data is loaded only when needed. By enabling this option, all waveform data is preloaded into the system memory when a waveform file is opened. Use caution when selecting this option and opening large data files—you might exhaust system RAM resources.

Note: fsdb and NPX-SDIF files cannot be preloaded. Just the sweep results from tr0 and NW files can be preloaded.

- **Read multi-run data as multi-trace waveforms**

Some output formats, such as the Berkeley raw and ELDO COU format, might combine results from multiple simulation runs into a single output file. You can either load the multiple runs as a sweep analysis of the same design, thus displaying each signal as a multi-trace sweep waveform, or you can read each run as a separate alter simulation run. Each run is independent from other runs as if they are read from separated files.

- **Automatically connect to subsequent split files**

The WDF and fsdb formats support split files. When a file is open, Custom WaveView automatically searches for subsequent files in the same directory. Disable this option if you do not want to connect waveforms from multiple split files. Split PSF files are always connected because subsequent PSF files contain waveform data only without signal names information; they cannot be opened as independent PSF files.

- **Convert to WDF**

The WDF format is a Synopsys compression format that reduces the file size and offers fast access for large data files. Enable this option to convert the selected files into the WDF format. See [Synopsys WDF Format](#) for more information.

- **Load Data within Range Only**

Load waveform data based on the specified x-axis range (for limited formats only).

The **File Filters** option menu can be customized in the Preferences Setting dialog, or the .spxrc configuration file.

Clicking **Home** resets the directory path to the working directory—the directory in which the program started, for example.

Note: Most application controls (except toolbar and main menu) are still functional during a waveform loading session. This feature allows tool operations in parallel to a lengthy waveform loading process.

Waveform files can be also loaded from command line as arguments. The usage is:

```
wv wdf1 wdf2 wdf3 ...
```

To load multiple output files in different sub-directories, (a directory structure commonly seen in Cadence Artist environment), click **Apply** to load files from different directories or load files from the command line as:

```
wv */*.tran
```

Using the Output View Browser

Once a waveform file is loaded, its signal name directory is displayed hierarchically in the Output View browser.

The Output View browser consists of an upper hierarchy browser and a lower signal list window. The lower list window displays signals under the selected hierarchy in the upper browser. Only one item can be selected in the upper hierarchy browser, while multiple signals can be selected in the signal windows for drag-and-drop operations.

To distinguish waveform data with the same file names from different directories, in the root entries of the upper Output View hierarchy browser, directory paths of loaded waveform files are displayed using directory prefix **DX** where X is the sequential index of different directories. To find out the original full paths of directory entries, select from the main menu **File > Show Directory Table** to display the table that maps directory identifiers to full file paths.

Chapter 4: Loading and Displaying Waveforms

Using the Output View Browser

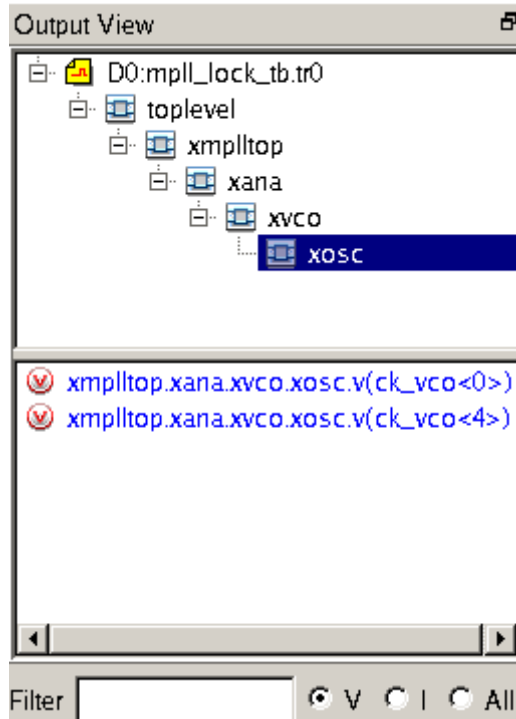


Figure 5 The output view window

Right-clicking a filename in the Output View hierarchy browser invokes the wdf context menu for the associated waveform file. The following items are available from the context menu:

- **Update WDF:** Reload the waveform file. The same update operation can also be invoked globally from the main menu (**File > Update Waveform Files**) for all waveform files.
- **Close This File:** Close the target waveform file. A dialog appears and asks you to confirm the action. Closing a waveform file also removes all associated waveforms from waveviews.
- **Close Selected Files:** Select from the list of all files to close multiple files together.
- **Close All:** Close all waveform files.
- **Open New Browser:** Open a standalone floating signal browser for the target file. Each waveform file can have one standalone browser.
- **File Grouping:** Group waveform files.
- **Create File Set:** Create a link file for a multi-member file set.

- **Sweep Display Filter:** Appears only with sweep result files. Allows users to select the active traces for the drag-and-drop and double-click display operations from the Output View.
- **2nd Sweep Variable:** Appears only with sweep result files. Defines the default 2nd sweeping variable for the parametric() function and Plot Y vs X2 function for cursors in a 2d-sweep panel.
- **Show/Hide Title:** Show/hide the title of a file.
- **Edit Title:** Edit the title text of a file.
- **Apply Measure:** Apply HSPICE .MEASURE commands (batch application).
- **HSPICE Measure Tool:** Start interactive HSPICE measurement tool.
- **Plot Graph:** Some formats (such as ELDO COU) contain display layout information. Select this item to extract the information and display waveforms accordingly.
- **Add Bookmark:** Add the waveform file to the bookmark list.
- **WDF Properties:** Display properties of the selected waveform file.
- **Hierarchy Filter:** Set a filter for the children of the node. When any hierarchy node is filtered out, "more with filter off" is displayed with the hierarchy to indicate that some nodes are currently hidden.

If multiple files are loaded, to allow simultaneous signal browsing on these multiple target files, the **Open New Browser** context menu function opens multiple signal browsers for each waveform file respectively.

Chapter 4: Loading and Displaying Waveforms

Using the Output View Browser

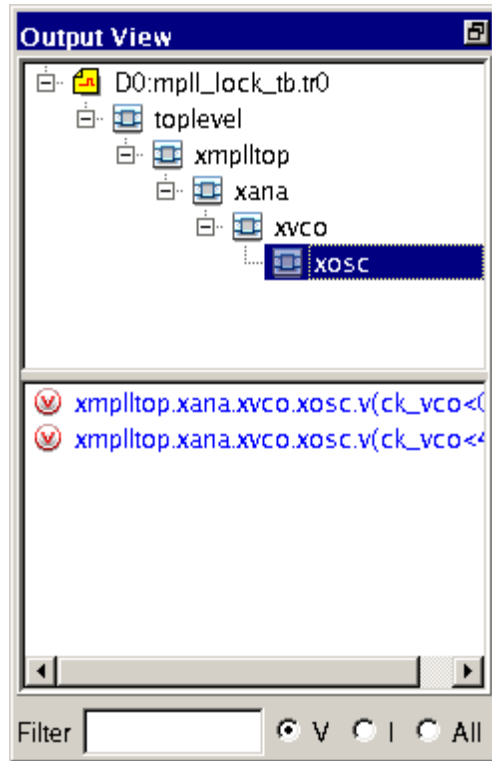




















Figure 6 Stand-alone floating signal browser









Right-clicking items in the Output View lower signal list window invokes the signal context menu. The following items are available from the signal context menu:









- **Signal Filter:** Select this item to filter the items in the browser based on their voltage/current type, hierarchy scope, alias name, or name pattern.
- **Show Signal:** Switch the signal list between all signals or filtered signals.
- **Name Preference:** Switch among the original database name, net name only by stripping off hierarchy path, or a user-defined alias.
- **Name Sorting:** Switch among no sort, alphabetic sort, sort by name length, then alphabetically, or V()/I() signals first.
- **Signal "NAME":** Edit an alias, add to the equation of equation builder, use as the X-axis-variable, delete (for selected derived signals), modify (for a derived equation), or Display/Export dcop values from Spectre parametric analyses.

The following tables summarize different waveform types and icons:

Icon	Analog Waveform Type	Icon	Analog Waveform Type
	Real Voltage		(Real,Imaginary) Complex Generic
	Real Current		(Magnitude,Degree) Complex Generic
	Real Generic		(Magnitude,Phase) Complex Generic
	(Real,Imaginary) Complex Voltage		Real Voltage Alias
	(Magnitude,Degree) Complex Voltage		Real Current Alias
	(Magnitude,Phase) Complex Voltage		Real Analog Alias
	(Real,Imaginary) Complex Current		Sweeping Parameter
	(Magnitude,Degree) Complex Current		Derived Data Top Level
	(Magnitude,Phase) Complex Current		Wire Type

Chapter 4: Loading and Displaying Waveforms
 Filtering Signals

Icon	Digital Waveform Type	Icon	Digital Waveform Type
	Logic Integer		Logic Register
	Logic Supply		Logic Alias
	Logic Parameter		Logic Variable
	Logic Wire		(Magnitude,Phase) Complex Generic

Icon	Icon Type	Icon	Icon Type
	Waveform Data File (no signal displayed, not linked)		Generic signal alias name
	Linked Waveform Data File (linked wto netlist)		Voltage signal alias name
	Data file with some of its signals displayed		Current signal alias name
	An old data file that has been overridden by new result		Logic signal alias name

Filtering Signals

To filter the list of signals in the Signal Browser, enter the name or name pattern of the signal name you want to find into the Filter text box, which is just below

the Signal Browser. Any signals that do not match those characters are filtered from the list.

Displaying Signals

Signals from the Output View browser can be loaded into a waveview with the drag-and-drop operation. If a hierarchy (or file) entry is dragged from the upper hierarchy browser of Output View, all signals in the selected hierarchy level (or a file) are loaded. If a signal (or multiple signals) is dragged from the signal list window of Output View, only the selected signals are loaded. Double-click action can also be used in the lower signal window to add an individual signal.

Depending on the signals being dragged, drop hints appear when signals are dragged over a waveview area. If the waveview is empty, hint boxes indicate available initial waveview modes. If the waveview contains existing panels, insertion hint or drop-in box indicates the drop location.

If any signal from a waveform file is being displayed in a waveview window, the file icon changes, and the signal name is displayed in blue.

Updating Waveforms

Custom WaveView supports reading growing waveform data files during a simulation job. Click the **Update Waveforms** toolbar button or choose **File > Update Waveform Files** to update all displayed and derived signals.

If you restart a new simulation to override the old waveform data file, the update function automatically detects recreated data files and prompts you to select between keeping the old result or updating to new result.

If you keep the old data file, only the signals that are loaded are available from the old data file (because the old file is overwritten). An old data file is indicated by its blue file icon. To update an old data file to the new result, right-click the file in the Output View Browser and choose **Update WDF** from the context menu.

To display signals from both the new and the old data file, choose to keep the old result. Custom WaveView keeps the old result file and automatically opens the new data file.

If you need to update the WDF signal list, you can right-click the name of a file in the Output View browser and choose **Reload WDF Signal List** from the menu that appears.

Waveform Marching (Automatic Update)

To automatically update waveforms from a running simulation job, choose **File > Waveform Marching ...** from the main menu. Enter the desired update interval and the abort trial limit and click the **Start** button to start waveform marching. Automatic update is stopped if the waveform file is not growing after the retrial limit. The automatic update function can be manually stopped at anytime by clicking the **Stop** button in the same dialog window.

If the automatic waveform marching is enabled, it is indicated with an icon in the main application toolbar.

Clearing Waveforms

To clear all currently displayed waveforms, right-click on a waveform and choose **Clear Waveforms** from the menu that opens. All displayed waveforms are cleared.

Grouping Waveform Files

Multiple waveform files can be collected into a group. When signals are loaded from a member in the grouped waveform files, Custom WaveView automatically loads the same signals from other waveform files in the same group.

The grouping function is useful for loading signals from corner/alter simulations that usually involve multiple output files. To group multiple waveform files, choose **File Grouping** from the wdf context menu. The Waveform File Grouping dialog appears.

Select waveform files in the list to group/ungroup them. For waveform formats that have associated sweeping parameters (such as the COU and the PSF format), click **Select...** to filter files based on their parameter value conditions.

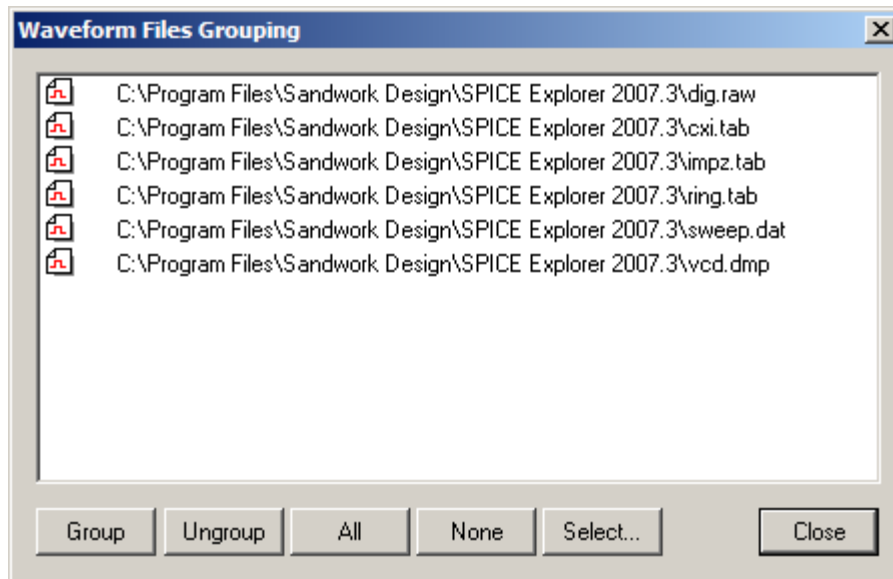


Figure 7 The waveform grouping dialog window

The **File Grouping** function only ties multiple files into a group. It does not assign any parameter condition to each individual file. As a result, parametric analysis is not possible on these grouped files. To add corner parameter conditions to files, the files must be grouped into a file set using a link file (similar to the runObjFile approach). The link file not only specifies which files to be grouped, it also defines the associated parameter conditions for each file in the group. Grouped files using the link file are processed as a single file as if the result is from a sweep analysis. Since the link file provides sweeping parameter conditions, parametric analysis is also supported.

To create the link file, right-click a file name and choose **Create File Set** from the context menu. To add parameter conditions to a file, enter the value in the (name=value) format, multiple values are delimited by comma (for example, temp=0,vdd=3.3). Click **Add** to add the parameter values to a file and the new values are indicated in the file list. Note that each of the files in a file set must have the same number of the same parameters. Finally, enter the path to the link file and click **Ok** to create the link file. Once a link file is generated, it can be opened directly as a regular waveform file.

Adding Waveform Files to the Bookmark List

A waveform file can be added to the bookmark list. Choose **Add Bookmark** from the waveform file context menu in Output View. To reload a waveform file from the bookmark list, choose **File > Load/Manage Bookmarks**.

Finding Signals

The Signal Finder dialog can be used to search signals from all (or selected) loaded waveform data files and hierarchies. Click the **Signal Finder** toolbar button or select from the top menu **Tools > Signal Finder** to invoke the Signal Finder dialog.

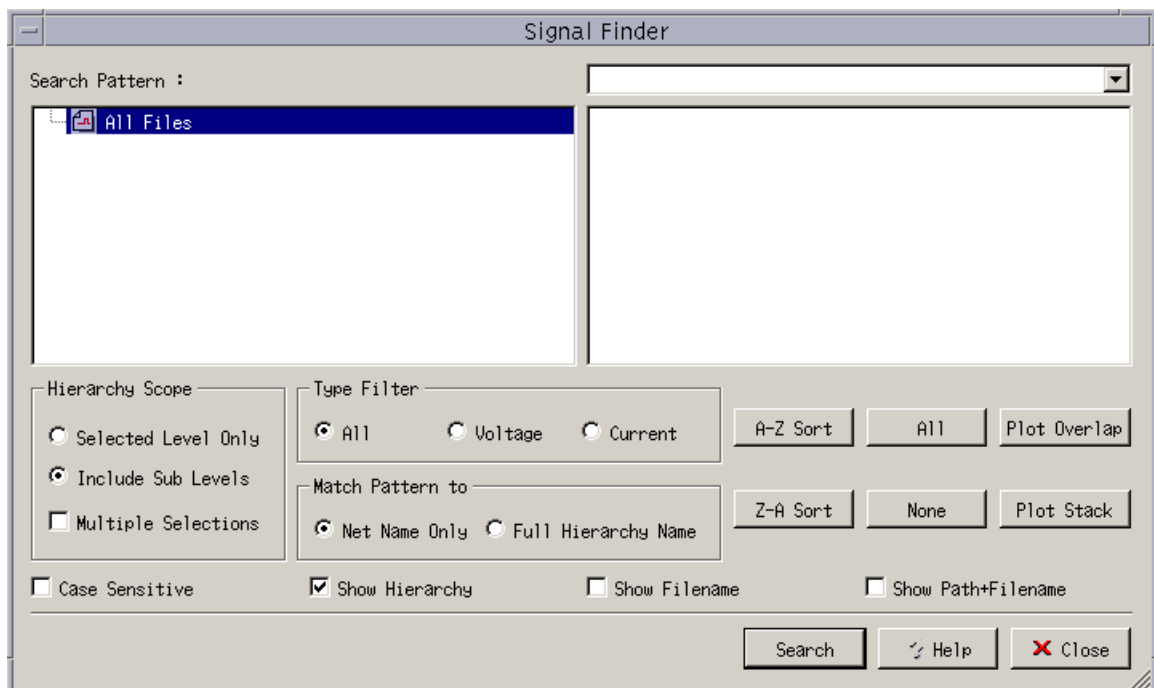


Figure 8 The signal finder dialog window

The signal finder supports name patterns matching with the asterisk (*) and question mark (?) wildcards. Enter a search pattern and hit the return key or click **Search** button to commence a search. The search results are displayed in the right signal list window. Click a signal from the list window to highlight the

signal source in the OutputView browser. Drag-and-drop operations are also supported from the signal finder result window into any waveview window. You can sort the results alphabetically by clicking the **A-Z Sort** and **Z-A Sort** buttons.

The search target signals can be refined to Voltage/Current signals only or All Signals by clicking one of the **Type Filter** option radio buttons. To limit the search to a file or a hierarchy level, select the corresponding entry from the left file/hierarchy browser. If the **Selected Level Only** option is selected, the target signals are those in the selected hierarchy/file only. If the **Include Sub Levels** option is selected, the target signals are those in and below the selected hierarchy/file.

On UNIX platforms, select the **Multiple Selection** option to select multiple hierarchy entries as the search target.

The **All** and the **None** buttons are used to select/de-select all items in the right signal list window for the drag-and-drop operations.

Click **Plot Overlap** or **Plot Stack** to plot selected signals from the result window in overlap or stack mode.

The **Case Sensitive** option controls the signal name case sensitivity, while the **Net Name Only** and the **Full Hier Name** options control which part of the signal names to be used in the search process.

The **Show Hierarchy**, **Show Filename**, and **Show Path+Filename** options can be used to control the name appearance in the search result browser.

Chapter 4: Loading and Displaying Waveforms
Finding Signals

File Format Support

This chapter contains information on the supported file formats.

This chapter contains the following major sections:

- [Supported Formats](#)
- [Reading Compressed Waveform Files \(UNIX Only\)](#)
- [Synopsys WDF Format](#)
- [Importing .err* Error Files](#)
- [Converting Existing Output Files](#)
- [WDF Data Reduction](#)
- [Direct WDF Output from Synopsys HSIM](#)
- [Direct WDF Output from Synopsys NanoSim](#)
- [Direct WDF output from Cadence Spectre or UltraSim](#)
- [Direct WDF output from Cadence Verilog-XL/NC-Verilog](#)
- [Reading Textual Data](#)
- [Loading Multiple Files in Virtuoso](#)
- [Special Note for the ELDO COU Format](#)
- [Special Note for the ADMS/ELDO WDB Format](#)
- [Special Note for the PSF Format](#)
- [Special Note for the WDF and fsdb Formats](#)

Supported Formats

Custom WaveView supports the following waveform formats:

- Cadence Spectre PSF, WSF (binary/ASCII), runObjFile
- Cadence PSPICE DAT (binary), Allegro SIM (ASCII)
- Verilog VCD (ASCII), ModelSim WLF (binary)
- Synopsys HSPICE tr0, sw0, ac0, mt0, hb0, nw0, mc0, mct0, listing file (Binary/ASCII)
- Synopsys StarSim wdb, wv, xp (binary)
- Synopsys HSIM/NanoSim/XA wdb (binary)
- Synopsys HSIM/NanoSim/TimeMill/Powermill out ,vector, .mt file (ASCII)
- Synopsys Saber AI/PL (binary/ASCII)
- Synopsys VCS/Magellan/DVE VPD (binary)
- Synopsys XA .err, .errz, and .errt files
- Mentor Graphics ELDO/ADMS COU, WDB (binary), AdiT TR0/TB0.
- SPICE3/SmartSpice raw format (binary/ASCII)
- Agilent ADS .ds format (binary), TouchStone S-parameters (ASCII)
- CSDF (Common Simulation Data Format) (ASCII)
- Novas fsdb files (binary, v4.3)
- Text file, CSV (comma separated values) format
- Other in-house simulator formats (SDIF, MICS, TI-punch)
- Synopsys WDF format (binary)
- Binary scope data (Tektronix, Agilent, Lecroy)
- IBIS models, Synopsys Liberty® files

Reading Compressed Waveform Files (UNIX Only)

On UNIX platforms only, compressed (.Z) or gzipped (.gz) waveform files can be directly open in Custom WaveView. The tar.gz waveform files are not readable directly since a tar file can potentially contain multiple files.

By default the current working directory is used as the temporary directory to store the decompressed files. Decompressed files are automatically cleaned up when a the compressed file is closed in WaveView. Set the `SW_SX_TMP_DIR` environment variable to redirect the temporary directory to a different location.

Synopsys WDF Format

The WDF (Waveform Data File) format is a Synopsys proprietary waveform storage format. The WDF format not only compresses analog and logic waveform data, it also facilitates fast waveform access for large data files. The compression scheme can be lossy or loss-less (default). Waveform data files in other formats can be converted into WDF files on demand.

The WDF format is directly supported by a number of simulators including HSIM, NanoSim, UltraSim, Spectre, AMS-Designer, and TimeMill/PowerMill.

You can extract signal files as a group. For example, you can create the following Tcl script file to extract signal files:

```
set f1 [sx_open_sim_file_read ./group.grp]
sx_current_sim_file $f1
set sig [sx_signal x1]
set sig2 [sx_signal x2]
set f2 [sx_open_sim_file_write ./save2d.wdf]
sx_save_signal $f2 "$sig $sig2"
sx_close_sim_file $f2
sx_close_sim_file $f1
```

Importing .err* Error Files

To open an .err file, choose **File > Import .err File** from the main menu bar. The errors are displayed in the .err File viewer dialog box.

Converting Existing Output Files

One or more output files can be converted (in batch mode) to Synopsys WDF files using the `-c` command-line option.

Lossless Compression

With lossless compression, all original simulation output data points are preserved.

```
wv -c file1 file2 ... filen
```

Lossy Compression

You can use the `-r` command-line option to turn on data reduction for the compression process. Use `-r 1` for moderate reduction or `-r 2` for a more aggressive reduction.

```
wv -c -r (1 or 2) <-rv 0.001> <-ri 10n>
```

WDF Data Reduction

The data reduction option removes redundant data points from straight waveform segments based on user-specified error tolerances. Data points are removed if the error between the original data points and the reduced PWL segments are smaller than the user-specified tolerance. The following figure depicts the scheme used in WDF data reduction.

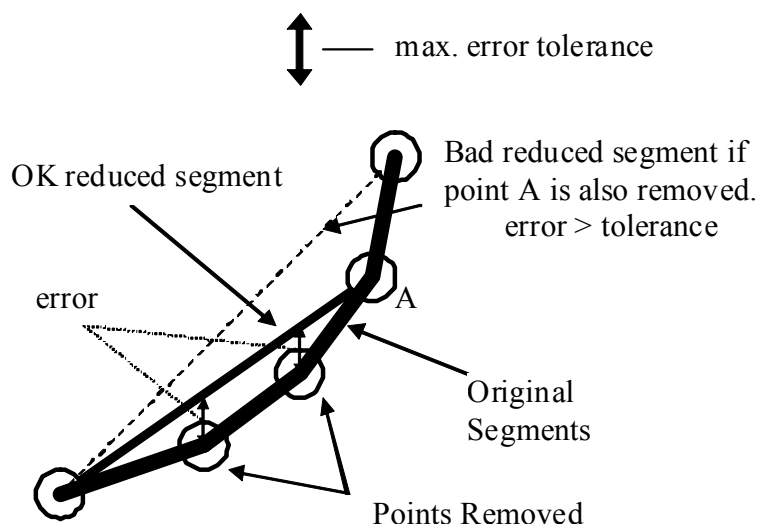


Figure 9 WDF data reduction scheme

The moderate reduction setting keeps at least 1 point out of four (4) original data points, while the more aggressive reduction mode keeps 1 out of ten (10) points. The `-rv` and `-ri` options are used to specify the reduction tolerance for voltage (or generic) waveforms and current waveforms respectively. The default setting is 5mV for voltage waveform and 1nA for current waveforms.

Direct WDF Output from Synopsys HSIM

In order to generate output files in the Synopsys WDF format using HSIM, you need to execute HSIM in association with the dynamic runtime library `libWDF.so`. If you are running HSIM 2.0, the runtime library is included with HSIM release. If you are running HSIM 1.3, please contact your HSIM vendor to get a copy of the runtime library.

Required Netlist Parameters

HSIM uses two netlist parameters to specify the output format: `HSIMOUTPUT` and `HSIMCOILIB`. `HSIMOUTPUT` specifies the format type, while `HSIMCOILIB` specifies the path to the dynamic runtime library used to generate the output. To create output files in the Synopsys WDF format, add the following parameters to your netlist. The parameter `HSIMCOILIB` setting can be omitted if the runtime library is in the same directory with HSIM binary.

```
.PARAM HSIMOUTPUT=WDF  
.PARAM HSIMCOILIB=<full_path_to_libWDF.so>
```

Example:

```
param HSIMOUTPUT=WDF  
param HSIMCOILIB=/usr/local/lib/libWDF.so
```

Direct WDF Output from Synopsys NanoSim

The `libwdf.so` runtime library is required to generate the Synopsys WDF output directly from NanoSim.

Chapter 5: File Format Support

Direct WDF Output from Synopsys NanoSim

You can customize your simulation environment with one of the following ways to select the WDF format as your output format:

- [Specifying WDF as the Default in .epicrc](#)
- [-out Command-Line Options](#)
- [*NanoSim cfg Command](#)
- [Configuration Command](#)

Specifying WDF as the Default in .epicrc

To configure WDF as the default output format, add (or modify) the following commands in your .epicrc environment file:

```
print_format:wdf
output_postfix:wdf
output_custom_library_name:libwdf.so
output_custom_library_path:/path/to/libwdf.so
```

The .epicrc file is located in your home directory, your current working directory, or the installation directory, as defined by \$EPIC_HOME.

-out Command-Line Options

To configure WDF locally as the output format for a simulation job, add the following options to your command line:

```
-out wdf
-outpostfix wdf
-outclname libwdf.so
-outclpath /path/to/libwdf.so
```

Only the -out option is necessary. The -outpostfix, -outclname, -outclpath options are not required. Their default value is wdf, libwdf.so, and ./, respectively.

*NanoSim cfg Command

To configure WDF as the output format for a design, add the following comment line in your SPICE netlist file:

```
*Nanosim cfg="set_print_format for=wdf lib_name=libwdf.so path=/path/to/libwdf.so postfix=wdf
```

The command needs to be added in a single comment line. Default value for lib_name, path and postfix is libwdf.so, ./, and wdf, respectively.

Configuration Command

Use the `set_print_format` configuration command directly to specify WDF as the output format. For example:

```
set_print_format for=wdf lib_name=libwdf.so path=/path/to/libwdf.so postfix=wdf
```

Default value for lib_name, path, and postfix is libwdf.so, ./, and wdf, respectively.

Direct WDF output from Cadence Spectre or UltraSim

Add the following netlist command to generate WDF files from UltraSim (6.0 or newer revision):

```
.usim_opt wf_format=wdf
```

Add the following option to a Spectre netlist to output WDF files directly from Spectre (5.1.41 or newer revision):

```
options rawfmt=wdf
```

Direct WDF output from Cadence Verilog-XL/NC-Verilog

Runtime library libvpi.so is required to generate Synopsys's WDF output directly from Cadence Verilog-XL/NC-Verilog simulators. Please contact Synopsys support to get a copy of the runtime library.

Make sure that the directory path to the runtime library libvpi.so is included in the LD_LIBRARY_PATH environment variable.

Chapter 5: File Format Support

Reading Textual Data

The following WDF system tasks can be used in Verilog initial blocks to control the WDF output:

System Task	Description
<code>\$wdf_open("output_filename")</code>	<code>\$wdf_open</code> is used to specify the output file name.
<code>\$wdf_probe(list of modules)</code>	<code>\$wdf_probe</code> is used to enable WDF dump for the specified modules.
<code>\$wdf_close()</code>	<code>\$wdf_close</code> is used to close the open WDF file.

Reading Textual Data

Custom WaveView supports data input in regular text format. Scaling factors (e.g. 1ns) and scientific formats (e.g. 1.0e-9) are both supported in the textual data files.

To distinguish Custom WaveView text data files from regular text files, the first line of a text data file is reserved for the format specification and must appear in the following form, where format-type is the format type keyword:

```
#format format-type
```

Lines beginning with a number sign (#) are treated as comments.

The following sections describe how to prepare textual input for

- [Tabulated Data in Real Numbers](#)
- [Tabulated Data in Complex Numbers](#)
- [2-Dimension Sweep Data in Real Numbers](#)
- [2-Dimension Sweep Data in Complex Numbers](#)
- [Measured Data without Name Header](#)
- [SPICE PWL sources](#)

Tabulated Data in Real Numbers

Syntax:

```
#format table
```

```
xvar signal1 signal2 ....  
valuex value1 value2 ...  
...
```

`xvar` and `signalN` are variable names and `valuen` are numeric values. As a special-case exception, the first line can be omitted if the name of `xvar` is `TIME`.

Example 1:

```
#format table  
VGATE Ichannel  
0.0 0.0  
1.0 1u  
2.0 5u  
3.0 5.2u  
...
```

Example 2:

Custom WaveView can recognize the following data file without the `#format` line:

```
TIME V(1) V(2)  
0.0 5.0 2.5  
1n 4.8 2.6  
...
```

If the data file does not contain the x-value column, (commonly seen in measurement data), add keyword `#dataonly` to the `#format` line. Custom WaveView reader automatically assigns a 0-based row index as the x-axis value.

If the signal names are embedded in the last '#' comment line before the actual waveform data values, add keyword `#cmt_name` to the format line.

Tabulated Data in Complex Numbers

Format for complex numbers in (real, imaginary) form.

Syntax:

```
#format complex-ri  
xvar signal1 signal2 ....  
valuex value1-real value1-imag value2-real value2-imag ...  
...
```

Format for complex numbers in (magnitude, angle [0-360]) form.

Syntax:

```
#format complex-ma
xvar signal1 signal2 ....
valuex value1-mag value1-angle value2-mag value2-angle ...
...
```

Format for complex numbers in (magnitude, phase [0-2]) form:

Syntax:

```
#format complex-mp
xvar signal1 signal2 ....
valuex value1-mag value1-phase value2-mag value2-phase ...
...
```

Example:

```
#format complex-ri
Freq vout
100meg 0.0 0.0
200meg 1.0 0.1
300meg 1.1 0.2
400meg 1.4 0.4
...
```

2-Dimension Sweep Data in Real Numbers

Syntax:

```
#format 2dsweep xvar2
xvar signal1 signal2 ....
#sweep value1-x2
valuex value1 value2 ...
...
#sweep value2-x2
valuex value1 value2 ...
...
```

where xvar2 is the name of the second sweep variable.

Example:


```
#format 2dsweep vgs
VDS Ichannel
#sweep 0.0
0.0 0.0
1.0 1u
2.0 5u
3.0 5.2u
#sweep 0.1
0.0 0.0
1.0 2u
2.0 6u
3.0 6.2u
...
```

2-Dimension Sweep Data in Complex Numbers

Format for complex numbers in (real, imaginary) form

Syntax:

```
#format 2dsweep-ri xvar2
#sweep value1-x2
xvar signal1 signal2 ....
valuex
value1-real value1-imag value2-real value2-imag ...
...
#sweep value2-x2
xvar signal1 signal2 ....
valuex value1-real value1-imag value2-real value2-imag ...
...
```

Format for complex numbers in (magnitude, angle [0-360]) form.

Syntax:

```
#format 2dsweep-ma xvar2
#sweep value1-x2
xvar signal1 signal2 ....
valuex value1-real value1-imag value2-real value2-imag ...
...
#sweep value2-x2
xvar signal1 signal2 ....
valuex value1-real value1-imag value2-real value2-imag ...
...
```

Format for complex numbers in (magnitude, phase [0-2]) form.

Syntax:

```
#format 2dsweep-mp xvar2
#sweep value1-x2
xvar signal1 signal2 ....
valuex value1-real value1-imag value2-real value2-imag ...
...
#sweep value2-x2
xvar signal1 signal2 ....
valuex value1-real value1-imag value2-real value2-imag ...
...
```

Example:

```
#format 2dsweep-ma temp
freq gain
#sweep 50
100meg 1.0 0
200meg 1.0 90
300meg 1.1 120
400meg 1.4 150
#sweep 75
100meg 1.0 0
200meg 1.0 80
300meg 1.2 110
400meg 1.3 140
...
```

Measured Data without Name Header

To import text measure data that does not have name header line or the x-axis value column, choose **File > Import Text/PWL Data** from the main menu bar. The Text/PWL Data Table window opens.

Select the desired options and click **Ok** to load the data file.

Note: When you open a Touchstone or SC0 file, the Z and Y parameters from the S parameters are generated and listed in the signal list.

SPICE PWL sources

To import SPICE PWL sources into Custom WaveView, click the top menu **File > Import Text/PWL Data...** to open the Text/PWL Data Table dialog window.

Choose the **SPIEC PWL Source Data** option and click **Ok** to load the data file. The SPICE PWL sources must not use any variable parameters.

Loading Multiple Files in Virtuoso

Parametric simulations in the Virtuoso environment can generate multiple output files in multiple directories. The locations and associated sweeping variables of these files can be found in the runObjFile log file.

The runObjFile can be opened directly in WaveView to access these waveform files.

Virtuoso dcOp Parametric Analysis

A dcOp analysis from a Virtuoso parametric run can also generate multiple result files. Each of these corner files contains a single-point operating point result for each device parameter. A special function is added in the Output View signal browser context menu to display or export these single-point values together with their sweeping variable conditions. Right-click a signal in the signal browser, and choose **Signal 'NAME' > Display Values** or **Signal 'NAME' > Export Values**.

Special Note for the ELDO COU Format

The COU format from ELDO simulator can contain multiple simulation runs. Before loading a COU file, COU reader in Custom WaveView needs to scan the entire file in order to determine how many runs the COU file contains.

For very large COU files, the detection process might take very long time since the reader has to sequentially examine all data in the COU files.

To speed up this COU file loading process, Custom WaveView has an alternative built-in search algorithm that can cut the file loading time significantly. To invoke the fast read option, set the SW_SX_FAST_COU environment variable to any value in your shell (ex. `setenv SW_SX_FAST_COU`). Due to the nature of the COU format, the fast search algorithm has a trade-off that might potentially determine the number of runs of a COU file incorrectly. Although the possibility is very low, the user can always

Chapter 5: File Format Support

Special Note for the ADMS/ELDO WDB Format

choose to disable the fast search algorithm by unset the environment variable with `(unsetenv SW_SX_FAST_COU)`.

Special Note for the ADMS/ELDO WDB Format

Custom WaveView by default uses a built-in WDB file reader to load data from WDB files generated by ADMS and ELDO. However, for small amount of simulation waveform data, the WDB writer in these simulators might buffer waveform data in the WDB Java server without writing them to a disk file. To work around this problem, you can take one of the following actions:

1. For ELDO, set the `-isaving` option to a smaller value to force more frequent incremental saving to disk files. The file size specified in the `-isaving` option is in MB. For ADMS, set the `JwdbSpillThreshold` option in `$HOME/.vams_setup` to a smaller value to lower the buffer size.
2. Enter `setenv SW_SX_JWDB_API 1` at the command line to use the vendor-provided WDB API to load data directly from the Java WDB server. The API + Java WDB server operation, however, can be very slow for large WDB files.

Special Note for the PSF Format

PSF format assigns a unit for each signal in a simulation output file. For noise analysis, in order to display different waveforms using proper scales, signals with V^2/Hz unit are automatically converted to V/\sqrt{Hz} by taking the square root of the loaded value during the waveform loading process.

The PSF format splits large output data (> 2GB) into multiple 2GB PSF files. The subsequent PSF files are hidden in the same directory (for example, the hidden file name starts with a period). Custom WaveView automatically looks for the subsequent files in the same directory and loads waveform data from these files.

Special Note for the WDF and fsdb Formats

The WDF and the fsdb format both support split files. When Custom WaveView opens a WDF or fsdb file, it automatically looks for subsequent files in the same directory. For example, if the loaded file is output.wdf, Custom WaveView automatically looks for output.wdf.1. If the output file is output.fsdb.1, Custom WaveView looks for output.fsdb.2. If you do not want to load the subsequent split files, disable the **Automatically connect to subsequent split files** option in the Loading Waveform Files dialog window.

Chapter 5: File Format Support
Special Note for the WDF and fsdb Formats

Displaying Waveforms

This chapter contains information on how to display different types of waveforms.

Panels are created automatically when signals are dropped into a waveview window. Default panel type is selected based on the signal type. To manually add a specific type of panel into the active waveview window, choose **Panel > New** from the main menu.

The following panel types are available:

- X-Y Panel
- Logic Panel
- Smith Chart Panel
- Polar Plot Panel
- 3-D Sweep Panel
- 2-D Sweep Panel
- Eye Diagram Panel
- Histogram Panel
- Separator Panel

X-Y Panel

An X-Y panel is designed to display analog waveforms. It is the only panel type that is allowed in both vertical stack and row/column waveviews. The X-Y panel accepts signals that are represented in (valuex,valuey) pairs, (x,y) data points, for example), where valuex can be the default sweeping variable of a signal, or

the signal value of a regular signal; valuey can be either the value of a real-signal or the magnitude/phase/real/imaginary part of a complex signal. The zoom operation is supported along both axes, and the logarithmic scale is also supported along both axes.

Waveforms in linear X-Y panels can be displayed with different plotting options including PWL (piece-wise-linear) line-type, PWC (piece-wise-constant) line-type, bar chart and data-point only mode. Choose **Panel > Display Preference** to change the plotting mode.

Logic Panel

A logic panel displays signals using digital timing diagram. It is permitted only in vertical stack waveviews. Logic panels accept signals that are represented in (time, logic) pairs. Various logic states including logic strength levels are supported. Zoom operation is supported along the x-axis direction.

Logic panels cannot be manually added from the application top menu. They are automatically created when logic signals are dropped into a vertical waveview.

Current vector width (number of bits) and radix setting of a logic panel are indicated in the left column of each panel (B: binary, O: octal, D: decimal, H: Hex-decimal, A: ASCII). The width digits are red color-coded for bus signals formed from originally separated bits, or yellow color-coded for a single bit extracted from an originally grouped bus signal.

Logic panels can be arbitrarily mixed with linear X-Y panels in a vertical stack waveview.

Mnemonic Mapping for Bus Signals

WaveView supports mapping bus values to pre-defined text strings. The translation table can be provided in an external file.

Syntax:

```
# comment lines start with '#'
value1 name1
value2 name2
...
```

The values are the bus values to be mapped.

The following formats are supported:

- 2400
- 0xAF32
- 'hAF32
- 'b1001_0100_0101
- 'd2400
- 'b110110111100
- 'o371

The names are the text strings to be mapped to. A text string must be quoted if the name contains spaces.

You can load the translation table by choosing **Config > Bus Mnemonic Map ...**. Once a translation table is loaded, choose **Radix > Mnemonic On/Off** from the panel context menu to toggle the mapping settings.

Smith Chart Panel

Smith charts display complex normalized impedance, admittance and scattering parameters (S-parameters).

The Smith chart accepts signals that are represented in (real, complex) pairs. The normalized impedance is defaulted at 50 ohms and can be modified in Preference Settings (see the smith_char_impedance option in the .spxrc configuration file).

Smith charts are allowed only in horizontal waveviews and the zoom operation is not supported.

You can configure a Smith chart in the Smith Chart Settings dialog box. Choose **Configure Smith Chart** from the panel context menu to open the dialog.

Enter the desired setting preferences and click **Apply** to apply the changes.

Cursors (up to two) in a Smith chart can be used to trace Gamma (the reflection coefficient), SWR (standing wave ratio), impedance (Z) or admittance (Y) at the location where the cursor hairs cross.

Polar Plot Panel

Polar plots display data on a complex plane. They are allowed only in horizontal waveviews. The Polar plot accepts signals that are represented in (real, complex) pairs. The zoom operation is supported only along the radial direction.

3-D Sweep Panel

The 3-D Sweep panel displays 2-dimensional sweeping data on a 3-dimension coordinate. It is allowed only in horizontal waveviews. The 3-D Sweep panel accepts signals that are represented in ((x1, x2), value) pairs, where x1 and x2 are the first and second independent sweeping variable respectively, and value can be either the value of a real signal or the magnitude/phase/real/imaginary part of a complex signal. The viewing angles of the 3-dimension coordinate can be interactively adjusted from the two sliders in the panel. The zoom operation is not supported. Logarithmic scale is supported only along the vertical axis.

2-D Sweep Panel

The 2-D Sweep panel displays 2-dimensional sweeping data on a flat X-Y plane. It is allowed only in horizontal waveviews. Similar to the 3-D Sweep panel, the 2-D Sweep panel accepts signals that are represented in ((x1, x2), value) pairs. Zoom operation is supported along both axes. Logarithmic scale is also supported along both axes (the x1 direction and the y direction, for example).

Both 2-D and 3-D sweep panels support sweep filters that display the selected sweep traces. Choose **Sweep Line Filter** from the panel context menu, and highlight traces in the Sweep Line Filter dialog.

Enable the **Display Trace Value** option to display value label next to each sweep trace. If a 2D/3D sweep panel contains more than one signal, the first signal or the first highlighted signal is used as the filter target.

In 2-D sweep plot, the min/max Y-value bounds and the average Y-value of a multi-trace signal can be automatically extracted (for example, waveform envelop from statistical simulation result). To invoke this function, choose **Find**

Envelope Bound from the panel context menu of a 2-D sweep panel. Custom WaveView scans all data points from all traces and creates three new waveforms representing the min/max bounds and the average waveform.

Displaying Multi-trace Waveforms

A multi-trace signal contains multiple waveform traces. Each trace has a set of associated sweeping parameters (or sub X-variables). For example:

```
Trace1: Temp=0 Vdd=3.3
Trace 2: Temp=0 Vdd=5
Trace 3: Temp=100 Vdd=3.3
Trace 3: Temp=100 Vdd=5
```

By default, a multi-trace signal is plotted with respect to its main independent sweeping variable (time, for example). In this case, the sweep line filter function in a 2D-sweep panel can be used to selectively display some of the traces.

The 2D-sweep panel also supports plotting a multi-trace signal with respect to one of its sweeping parameters. To change the default X-axis of a 2D-sweep panel to a sub X-variable, choose **Change X Variable** from the panel context menu. Drag and drop a sweeping parameter from the Output View browser to the Setting X Variable dialog window. Choose **Sweep Line Filter** from the panel context menu to open the Sub X-Variable Plotting Filter dialog window.

Note: The filter setup is different between using the default X-axis and sub X-Variable X-axis. This is because in the sub X-Variable plot mode, based on the selected sub X-variable, the number of traces might vary depending on the number of unique combinations among other sweeping parameters. Custom WaveView automatically finds out the number of traces, and sorts the order of the sub X-Variable values to display waveforms.

A multi-trace signal must have equal number of points in each of its original traces in order to be plotted in the sub X-variable mode.

The current version of Custom WaveView does not support plotting a multi-trace signal with respect to another multi-trace signal.

Eye Diagram Panel

The Eye diagram panel is allowed only in horizontal waveviews, although more than one eye diagram with differing triggers can be plotted on a single panel. Please see [Configuring Eye Diagrams](#) for detailed descriptions on how to use the Eye Diagram functions in Custom WaveView.

Histogram Panel

The Histogram panel can be placed in horizontal waveviews only. To create a Histogram, an empty Histogram panel must be created first by choosing **Panel > New > Histogram** from the main menu. Signals can then be dragged from the Output View browser and dropped into the Histogram.

A histogram plots an individual histogram for each signal in the panel. The average value and standard deviation can be annotated on top of each histogram and the number of bins and data bounds can be reconfigured. Custom WaveView can also calculate the distribution percentages of regions divided by user-defined markers from the histogram mean center.

To reconfigure a Histogram, use the Histogram Settings Dialog by choosing **Configure Histogram** from the panel context menu. Choose **Show Average Line** to enable the average bar. By default, the histogram plots. Choose **Show Single Histogram of all Signals** to plot a single histogram of all signals in the panel. Click the **Show normal distribution curve** check box to display the normal distribution curve over the histogram.

Separator Panel

The Separator panel can be used to assign panel groups. All panels after a separator panel and before the next separator panel are considered a panel group. A group name can be assigned to a separator panel. Right-click a separator panel, and choose **Edit Label** to modify name. Use the left "+"/"-" icon in a separator panel to expand/collapse the panels in a panel group.

Changing the X-axis Variable

By default, signals in X-Y panels are plotted with respect to their internal X variables defined in the original waveform data file. The X variable can be replaced with a signal so that other signals are plotted as functions of the selected signal.

In a vertical waveview, if the waveview contains no logic panel, you can assign a signal as the common X variable so that all signals are plotted against the selected X variable. In a horizontal waveview, the same operation can be applied individually to all selected X-Y panels.

To select a signal as the new X variable, choose **Axes > X Variable** from the main menu to open the Setting X Variable dialog window.

With the dialog open, right click a signal in the Output View signal list window and choose **Use as X Variable**. The drag-and-drop operation is also supported from the Output View browser to the Setting X Variable dialog window. The name of the newly selected signal is entered in the read-only X Variable dialog window. Click **Apply** to apply the change to an active vertical waveview or all the selected panels in an active horizontal waveview.

To restore to signals' internal X variables, select the **Use Internal X Variable** option in the dialog and click **Apply**.

The drag-and-drop operation can be also used to set the X variable. Drag a signal from the Output View browser and drop it in the lower X-axis of a stack waveview, or the X-axis of a X-Y panel in a row/column waveview.

Chapter 6: Displaying Waveforms
Changing the X-axis Variable

Panel Operations

This chapter contains information on the basic panel operations.

This chapter contains the following major sections:

- [Basic Operations](#)
- [Zoom Operations](#)
- [Panel Settings](#)

Basic Operations

Panels in a waveview can be moved, combined, split and deleted. These actions are invoked from the panel context menu or by choosing **Panel > Actions** from the main menu. The following table summarizes the default bind keys for panel actions:

Bind Key	Function
B	Move the active cursor backward
C	Copy (Panel, Signals)
D	Data point toggle
F	Move the active cursor forward
G	Grid toggle
H	Horizontal zoom/unzoom

Chapter 7: Panel Operations

Basic Operations

Bind Key	Function
N	Scan forward
P	Scan backward
Q	Quit
S	Signal select/highlight
T	Fit/unfit panel height to full window height
V	Vertical zoom/unzoom
X	Unzoom (reset)
Z	Box zoom/unzoom
Delete or Backspace	Delete panel/signal
Esc	Deselect all panels
Up Arrow	Scroll up a waveview
Down Arrow	Scroll down a waveview

Selecting Panels

Panels can be selected (highlighted) for further actions. To select a panel, left click over the name/monitor area of a panel. Selected panels appear with their name area background highlighted in gray. Multiple panels can be Shift-selected or Ctrl-selected.

To select all panels in a waveview, choose **Panel > Select All** from the main menu. To deselect all panels, choose **Panel > Unselect All** from the main menu.

You can also use the Panel Select control button to toggle between the Select-All and the Unselect-All operations.

Moving or Copying Panels

To move or copy a panel, click and hold the left mouse button on a name or value area of a panel. Drag the panel to a new location and release the mouse button. If the source panel is selected, all selected panels are moved/copied.

During the dragging process, a drop hint appears to indicate the drop location.

Panels can be moved/copied from a waveview window to another waveview window. Use the preference settings to select between the **Move** and the **Copy** operations. Panels can also be copied and pasted using the corresponding menu entries in the panel context menu.

Deleting Panels

To delete a panel, choose **Cut** from the panel context menu. If the target panel is selected, all selected panels are deleted.

The panel delete action can also be invoked from the Delete control button.

Pasting Deleted Panels

Deleted panels can be pasted back to any waveviews by choosing **Paste** from the panel context menu. The deleted panels are always pasted after the current panel in which the mouse pointer resides.

Grouping Panels

Selected panels can be grouped into one panel. Choose **Group** from the panel context menu or **Panel > Actions > Group** from the main menu.

If the grouped panels are in a logic panel type, a new bus signal is formed. The Bus Configuration dialog allows you to configure the bus signal.

Panel grouping action can also be invoked from the Panel Group control button.

Ungrouping Panels

Signals inside a panel can be split so that each signal is placed into a new panel. Choose **Ungroup** from the panel context menu or **Panel > Actions > Ungroup** from the main menu.

Panel ungroup action can also be invoked from the Panel Split control button.

Zoom Operations

Zoom operations are supported in the following panel types:

- X/Y zoom in X-Y, 2D-Sweep and Eye-diagram panels
- X zoom in logic panels
- Radial zoom in Polar Coordinate panels

Depending on the default action type of the left mouse button in a waveview (default left mouse button action can be selected in **Preference Settings > Waveview > Left Button Default**), the zoom operation is invoked with:

- **Cursor mode:** You can invoke the zoom operation by first arming a waveview into the zoom mode. Click the **zoom** control button to activate the zoom mode.
- **Zoom mode:** The zoom operation automatically starts when you hold down and drag the left mouse button inside a waveform.

Default Bind Key: Press the **Z** key to arm the zoom mode and release it to unarm.

If the left mouse button is defaulted to cursor operations (see [Bindkey Functions](#)), continue clicking the zoom control button cycles the zoom mode in the following order: X/Y zoom (), X zoom (), Y zoom (), no zoom (). The current zoom mode is indicated with the different icons of the zoom control button. If the left mouse button is defaulted to zoom operations, continue clicking the zoom control button cycles the zoom mode among X/Y zoom (), X zoom () and Y zoom ().

X/Y (Box) Zoom

With a waveview armed in the X/Y zoom mode, click and hold the left mouse button at a corner of the area to be zoomed in and drag the mouse pointer to the diagonally opposite corner of the zoom area. Release the button to stop zooming.

If you arm the X/Y-zoom operation of a waveview with the **Z** bind key, releasing the **Z** bind key without any zoom action results in a 2x zoom out. The same 2x zoom out action can also be invoked using the **Zoom Out** control button.

X Zoom

With the zoom control button in X-zoom mode, indicated by zoom control button. Hold down the left mouse button and drag the mouse pointer along the horizontal direction to define the X-zoom range.

Default Bind Key: Press the **H** key to arm the horizontal zoom operation.

If you arm the X-zoom operation of a waveview with the **H** bind key, releasing the **H** bind key without any zoom action results in a 2x x-axis zoom out.

Y Zoom

With the zoom control button in Y-zoom mode, indicated by zoom control button. Hold down the left mouse button and drag the mouse pointer along the vertical direction to define the Y-zoom range.

Default Bind Key: Press the **V** key to arm the vertical zoom operation.

If you arm the Y-zoom operation of a waveview with the **V** bind key, releasing the **V** bind key without any zoom action results in a 2x y-axis zoom out.

X Zoom to Fit

Select one or more panels, and press the **I** bind key. The zoom to fit is applied to the selected panel axes. If no panel is selected, the zoom to fit is applied to all panels.

Y Zoom to Fit

Select one or more panels, and press the **Y** bind key. The zoom to fit is applied to the selected panel axes. If no panel is selected, the zoom to fit is applied to all panels.

Un-zoom

To restore all selected panels to their full plotting ranges, click the un-zoom control button.

Default Bind Key: **X**

Undo or Redo Zoom

The undo/redo zoom functions allow you to traverse up/down a zoom operation sequence. Use the undo-zoom function to undo a zoom step and redo-zoom function to redo a zoom operation.

Default bind keys: **U** for undo-zoom, **R** for redo-zoom.

Using Sliders in Zoomed Panels

In a zoomed panel (X-Y, logic or 2D-Sweep), the zoomed area can be interactively shifted using the horizontal and vertical slide bars. The waveview is redrawn at real time when the slide bar is moved. This graphic intensive operation can become noticeably slow especially when you work from a remote host.

The real-time screen redraw can be disabled for the slide bar to avoid the slow graphic operation. To disable real-time redraw, disable the **Real-time waveview scroll** option in **Preference Settings > Waveview**. With the real-time waveview scroll disabled, only the grid rulers are interactively redrawn during slide bar movement.

Setting Zoom Ranges Manually

The zoom operations can be also performed by manually specifying the X-axis and Y-axis ranges. Choose **Axes > Axes Range > Set Zoom** from the main

menu, and enter the zoom range parameters. Then click **Ok** to set the zoom level on all panels or selected panels of the active waveview. Note that the Y ranges are in db (or db10) if the target panel Y-axis is in db (or db10) scale.

Panel Settings

The following panel settings are available:

- [Displaying Data Points](#)
- [Controlling the Grid](#)
- [Adjusting Logarithmic Scales](#)
- [Using Fixed X-axis \(or Y-axis\) Full Scale](#)
- [Changing Axis Font Size](#)
- [Dual Y-axes](#)
- [Adjusting Panel Height](#)
- [Fitting Panels to Full Window Height](#)
- [Setting Vector Radix](#)
- [Setting Vector Length](#)
- [Setting Waveform Display Preferences](#)
- [Setting the Plot Mode for Complex Signals](#)
- [Setting Panel Attributes](#)

Displaying Data Points

Custom WaveView displays waveform by plotting piece-wise-linear (PWL) lines between data points. To display the actual data points, click the Data Point control button to toggle on/off the data point markers.

Default bind key: **D**.

Controlling the Grid

You can toggle the grids of selected panels on or off with the Grid control button.

Grid settings are toggled through the X-Y grid; X-grid only; Y-grid only; and No grid cycle.

Default bind key: **G**.

You can also choose **Axes > Grid** from the main menu to turn X/Y grids on or off directly.

Grids parameters of XY panels can be redefined. Choose **Grid Settings** from the panel context menu or **Axes > Grid > User Settings** from the main menu to open the Grid Settings Dialog.

User-defined grids start from the Start value and repeat over the Step interval in both directions away from the start point.

Adjusting Logarithmic Scales

The X-Y, 2D-Sweep, and 3D-Sweep panels support the logarithmic scales. Choose **Axes > X-Log Setting** or **Axes > Y-Log Setting** from the main menu to switch X/Y-axis of all selected panels among: linear, logarithmic, db20, and db10 modes. Axis scales can be also changed directly using the axis context menu by right clicking over the X/Y axis in a panel.

Logarithmic Y-axis has a range limit of six decades. If a linear Y-axis ranges from a negative minimum to a positive maximum, three decades are allocated for the positive and negative half respectively with the negative part coded in different color.

Using Fixed X-axis (or Y-axis) Full Scale

Fixed plotting ranges can be assigned to the X-axis of X-Y panels. Choose **Axes > X/Y Full Scale > Set X Full Scale** from the main menu and enter the X-axis range parameters. Click **Ok** to apply the change to selected panels of the active waveview. The default Y-axis range can be changed by choosing **Axes > X/Y Full Scale > Default Y Full Scale** from the main menu.

Changing Axis Font Size

Choose **Axes > Axis Font** and either **Normal** or **Large** from the Custom Waveview menu bar to change the font size.

Dual Y-axes

Dual Y-axes are supported in X-Y and the 2D-sweep panels. To display (or disable) the 2nd Y-axis in a X-Y panel, choose **Dual Axis > Show/Hide Right Axis** from the panel context menu. Choose **Dual Axis > I-Signals to Right Axis** to display all current signals of a panel using the right axis. Arbitrary signals can be also attached to (or detached from) the right axis by choosing **Signal "Name" > Right/Left Axis**. Signals that are attached to the right axis are indicated with the icons in front of the signal names.

Setting Axis Attributes

To set axis attributes:

1. Double-click on an axis.
The Axis Attributes window opens.
2. Choose an axis from the Axis menu.
All axes in the active waveview window are available.
3. Click one of the zoom level buttons to change the display:
 - Zoom In increases magnification to show detail.
 - Zoom to Fit displays the maximum number of data points to show the entire range of a signal. The entire range is determined by the minimum and maximum values entered in the Full Scale Range text boxes at the bottom of the Axis Attributes window.
4. Enter values for the zoom level in the Min and Max text boxes.
These values specify the range you want to display.
5. (Optional) Click the **Use Waveform Range** check box to specify the range of a signal, and enter the Min and Max values for that range.
6. (Optional) Click the **Grid On** check box to display the grid for the selected axes.

Chapter 7: Panel Operations

Panel Settings

You can click the **Auto Grid** check box and enter Start and Stop values for the gridding. You can only turn this option off for linear axes.

7. Choose the axis label font size from the Font menu.

Normal and Large font sizes are available.

8. Choose an axis type from the Type menu.

Axis types include **Linear**, **Log**, **dB20**, **dB10**, and **dBm10**.

9. Click **Apply** to save your changes.

Adjusting Panel Height

Panel heights in a vertical stack waveview are calculated automatically based on the following preference settings:

- Maximum number of visible panels
- Minimum X-Y panel height

You can adjust the height of a panel by dragging the bottom edge of the left Y-axis area. If the panel in action is a selected panel, the height of all selected panels is changed. To restore selected panels to their default auto height, choose **Panel > Height > Default**.

Individual panel height adjustment is available for analog panels only. To adjust the height of all logic panels, change the value of Logic Panel Height in the preference settings.

Fitting Panels to Full Window Height

In a vertical stack waveview, height of selected panels can be automatically adjusted to fit to the full window height. Choose **Panel > Height > Fit** to fit all selected panels to the total window height, or use the default bind key 'T' to toggle selected panels between fit and unfit modes. If the selected panels are separated into multiple groups, each group is fitted respectively. If there are too many panels in a group and the panel height becomes too small, the height is limited to the user-defined minimum height.

Choose **Panel > Height > Fit All** to fit all panels of a waveview to the total window height.

Setting Vector Radix

Logic vector values by default are displayed in binary. The following radix selections are supported:

- binary
- octal
- decimal
- hex-decimal
- ASCII

Select from the top menu **Panel > Radix** to select a radix setting for all selected panels. You can also choose **Radix** from the panel context menu to select a radix setting for the panel in action.

Setting Vector Length

Logic vector values by default are displayed in their shortest possible form. Select from the top menu **Panel > Display Preference > Full Logic Value** to display vector values in full length.

Setting Waveform Display Preferences

Analog signals can be displayed as PWL, PWC, Bar, or Data Point Only waveforms. Choose **Panel > Display Preference** from the main menu to select preferred display mode of a panel.

Setting the Plot Mode for Complex Signals






When complex signals are plotted on non-complex panels (X-Y, 2D-sweep, and 3D-sweep), the signals are by default plotted using the magnitude value of the complex data. You can switch it to the phase, real part, or imaginary part of the complex data.

Choose **Plot Complex** from the panel context menu to select the preferred complex setting. All signals inside a panel are plotted using the same complex

Chapter 7: Panel Operations

Panel Settings

mode. The following icons are placed before the signal names to indicate the current complex mode:

- (no icon) real-value waveform
-  magnitude
-  phase
-  real part
-  imaginary part
-  group delay

To configure how complex signals should be displayed, choose **Config > Preferences > Panel tab** and select the preferred **Default AC Signal Display** setting. The following settings are available:

- **Complex**: Displays a single waveform using the magnitude value of the complex signal.
- **M/P**: Displays the magnitude and the phase of a complex signal respectively in two panels in stack mode.
- **R/I**: Displays the real part and the imaginary part of a complex signal respectively in two panels in stack mode.
- **M+P**: Displays the magnitude and the phase of a complex signal in the same panel.

Setting Panel Attributes

To set the attributes for a panel, right-click a panel and choose **Attributes** from the menu that opens. The Panel Attributes window opens with the options for the type of panel (analog, digital, or bus).

Waveform Operations

This chapter contains information on how to work with and modify waveforms.

This chapter contains the following major sections:

- [Working with Signals and Waveforms](#)
- [Waveform Color Schemes](#)
- [Custom Waveform Colors](#)
- [Modifying Waveform Attributes](#)
- [Adding Text Labels](#)

Working with Signals and Waveforms

Signals in a panel can be deleted, highlighted, or re-paneled. These actions can be invoked from the signal context menu by right-clicking the name or monitor area of a panel with the **Signal Mode** control button armed. Without arming the signal mode control button, right-clicking the same area opens the panel context menu.

The signal mode control button is red when armed.

Default Bind Key: Press the **S** key to arm the signal mode and release it to unarm.

Highlighting Waveforms

With the signal check control button armed, left-click the name of a signal to toggle its highlight state on and off.

You can also toggle signals highlight by left-clicking the waveforms, which toggles the highlight states of all signals that intersect the mouse pointer.

Ungrouping Highlighted Waveforms

Right-click a highlighted signal, and choose **Ungroup** from the signal context menu to split each of the highlighted signals into a new panel.

Grouping Highlighted Waveforms

Right-click a highlighted signal, and choose **Group** from the signal context menu to group all highlighted signals into a new panel.

Deleting Highlighted Waveforms

Right-click a highlighted signal and choose **Cut** from the signal context menu to delete all highlighted signals.

You can also move highlighted signals in a panel with a drag-and-drop operation. With the signal mode control button armed, follow the steps in (Moving/Copying panels) to move highlighted signals between panels or waveviews.

Finding the Source of a Waveform

Right-click the name of a signal, and choose **Source of "Signal"** from the signal context menu to highlight its source location in the Output View signal browser. Note that only the Output View signal browser is used to show the signal source. The floating browsers of individual files, if open, are not used to show the signal source.

Getting Signal Information

To view the name, file ID, and full path of a signal, move your mouse pointer over the name of a signal. The signal information is displayed in the button status bar.

Adding Signal Alias

Alias names can be added to signals in waveview windows. To define a new alias to a signal, choose **Signal "name" > Edit Alias** from the signal context menu. Enter an alias name, and click **Ok** to set the alias. To reset the name of a signal to its original name, follow the same sequence and enable the **Use Original Signal Name** option to reset the signal name.

Scanning Waveforms

Once signals are loaded onto a waveview. You can scan signals from the same files using the **Scan** control buttons. This feature can be used to compare signals from different data files.

Clicking the **right arrow** button advances signals from all selected panels to their corresponding next signals from the same waveform data files. Clicking the **left arrow** scans signals in the reverse direction.

Please note that scanning signals might require reloading data if the next/previous signals are not currently loaded. To speed up the scan process by avoiding data reloading, you might choose to load all waveform data to memory when waveform data files are initially opened (see [Opening Waveform Files](#)).

Default Bind Key: **N** (next) or **P** (previous).

Scan Configuration

You can configure the scan function into two different modes:

- **Direct Scan:** With the Direct mode, Custom WaveView scans signals according to their order in the waveform data file.
- **Smart Scan:** In the Smart mode, with a master waveform data file selected, Custom WaveView scans signals from the master waveform data file according to their order in the file, while automatically searches other waveform data files for signals with matched names.

To reconfigure the current scan settings, choose **Config > Scan Settings...** from the main menu, or click the **Scan Config** toolbar button to open the Scan-Control Settings dialog window.

Select a scan mode and a master file and click **Apply** to make the change. The **Lock Scope** option controls if the scan is limited within the current hierarchy scope.

Waveform Color Schemes

Custom WaveView provides two default waveform color schemes. Both methods repetitively assign eight (8) different colors to waveforms.

Local Mode

With the local mode, waveform colors start from the first color for each panel. Colors are then sequentially assigned to subsequent waveforms in a panel. Depending on the order of waveforms in a panel, waveform colors might change while they are moved. You can set the local mode by choosing **Preference Settings > Waveview > Cycle Color By** and selecting the Panel mode.

Global Mode (default)

With the global mode, waveform colors start from the first color for each waveview. Colors are then sequentially assigned to each waveform in a waveview. The assigned colors stay with waveforms regardless of their locations even when they are moved to a different waveview. To select the global mode, choose **Preference Settings > Waveview > Cycle Color By**, and select the Waveview mode.

Custom Waveform Colors

Default waveform color choices can be added or deleted in **Preference Settings > Colors**. Up to 16 colors can be assigned as the default colors for waveforms.

Modifying Waveform Attributes

To modify waveform attributes for a waveform:

1. Double-click the signal name of the waveform, or right-click the signal name and choose **Signal '<signal_name>' > Attributes** from the menu that opens.

The Waveform Attributes dialog box opens.

2. Choose a signal from the Signal menu to which the attributes are applied.
3. Change any of the following waveform display attributes:
 - Line Color
 - Line Width
 - Dash Type
 - Marker Shape
4. For analog signals, change the following attributes as necessary:
 - Display Preference
 - Hide Signal
 - Axis (left or right)
5. For digital signals, change the following attributes as necessary:
 - Display Preference and type
 - Mnemonic On
 - Radix
6. For analog or digital signals, enter the marker frequency, which changes the display frequency of the data point markers.
7. (Optional) Click the **Turn on Alias** check box to change the alias of a signal.
8. Click **Apply** to save your changes.

Adding Text Labels

Text remarks can be added to a waveview window. Click the **Text Remark** control button to open the Remark Text dialog window.

Chapter 8: Waveform Operations

Adding Text Labels

The label function supports multi-line text. Use the backslash character (\) to break a text label into multiple lines.

A text remark can be moved within a waveview window. Left-click and drag a remark box to move the text label. Release the mouse button at a new location to reposition the text remark.

Text remarks can be anchored to a (x,y) value point in a waveview. An anchored text remark moves with waveforms when a waveview is panned. Two font sizes are available: small and large.

To delete a text remark, right-click the text box to invoke the text remark context menu. Choose **Delete Remark** to delete the remark or **Delete All Remarks** to delete all text remarks in the waveview.

Measurements

This chapter contains information on using cursors and measurements.

Custom WaveView provides the following ways to measure waveforms:

- **Cursors:** Used to trace waveform values. Unlimited cursors can be added. See [Working with Cursors](#) for more information.
- **Monitors:** Used to monitor global waveform properties such as minimum, maximum, average, RMS, and peak-to-peak values. Monitors can be associated with cursors to trace waveform values such as derivative and difference, or associated with the viewing ranges to display local minimum, maximum, average, RMS, and peak-to-peak values. See [Working with Monitors](#) for more information.
- **Measurements in the Measurement Tool:** Used to make interactive measurements on a waveform or between different waveforms. Various measure types are available including rise/fall time, frequency, width, and jitter. See [Using the Measurement Tool](#) for more information.

Working with Cursors

Cursors are used to trace waveform related values. Multiple cursors can be added to a panel. The X-axis position of a cursor is indicated underneath the cursor hair.

Adding Cursors

To add a cursor, choose **Add Cursor** from the panel context menu. A cursor can also be created using the Add-Cursor control button.

You can also add cursors for delta measurements by pressing the left- and right-bracket keys ([and]) while moving the cursor.

The Active Cursor

When multiple cursors are added to a panel, the last moved or added cursor becomes the active cursor.

Waveform values corresponding to the active cursor are displayed in the monitor. In an X-Y panel, distances from all non-active cursors to the active cursor are displayed next to the active cursor.

Moving a Cursor

Depending on the default action of the left mouse button in a waveview (default left mouse button action can be selected in **Preference Settings > Waveview > Left Button Default**), a cursor can be moved with:

- **Cursor Mode:** If the left mouse button is pressed with mouse pointer near a cursor, the cursor is grabbed. A grabbed cursor can be dragged to a new position. If the mouse pointer is not in the vicinity of any cursor when the left mouse button is pressed, the active cursor is grabbed regardless of its position.
- **Zoom-First Mode:** If the left mouse button is pressed and released without any mouse pointer movement. The active cursor is grabbed to the mouse pointer location when the button is released.

In a zoomed panel, cursors outside the plotting range are placed on the left (or right) boundary of the plotting area. They can be grabbed from the borders of the plotting area. The cursor that is outside but closest to the boundary is grabbed first.

Jumping Cursors

In an X-Y or logic panels, a cursor can be jumped forward (or backward) to the next (or previous) data point, peak, switching or crossing point using the cursor context menu. Right-click near the cursor to invoke the cursor context menu. Choose **Jump (F)orward "SIGNAL"** or **Jump (B)ackward "SIGNAL"** from the context menu to jump the cursor forward or backward on the target signal SIGNAL. The target signal is indicated by a cross marker on the signal

waveform at the intercept point with the cursor hair. To select a different target signal, move the cursor near a waveform (along the Y direction) and the cross marker snaps to the new target waveform.

To change the jump parameters, choose **Jump Settings** from the cursor context menu to invoke the Cursor Jump Parameters dialog window.

Enter a preferred jump type and associated parameters and click **Ok** to make the change. Click **Set as Default** to save the settings in ~/.spxlast as the default setting.

For digital panels, the cursor can be jumped to the next value change, the next match value, the next rise/fall edge, or the user-defined time.

Default Bind Keys: Press the **F** key to jump forward, and the **B** key to jump backward.

Locking Pairs of Cursors

A pair of vertical cursors can be locked to a fixed distance. Choose **Setup Locked Pair** from the cursor context menu. Specify the target cursor and the preferred distance to lock two cursors at a fixed distance. To unlock a pair of locked cursors, choose **Release Locked Pair** from the context menu.

Horizontal Cursors

Horizontal cursors are supported in analog X-Y panels. Choose **Switch to H-Cursor** from the cursor context menu to change a vertical cursor to a horizontal cursor. The horizontal cursors trace the x-axis values of the nearest intersect point with waveforms. The x-values are displayed in the monitor column.

To add a horizontal cursor directly, choose **Axes > Cursor > Add H-Cursor** from the main menu.

You can also click the **Add Cursor** control button to add an H-cursor by setting the **Add H-Cursor with Add Cursor Control Button** option in the preferences. To set this preference, choose **Config > Preferences** from the main menu and click the WaveView tab. Click the **Add H-Cursor with Add Cursor Control Button** check box, and click **OK**.

In an X-Y panel, labels can be annotated to all the signal crossing points of a horizontal cursor. To enable crossing value labels, choose **Configure H-Crossing Values** from the cursor context menu.

Note: H-cursor label positions are recorded when the total number of H-crossing labels stay the same during H-cursor movement. The modified cursor label positions are saved in the session file.

To hide the H-cursor hair, right-click an H-cursor and choose **Configure H-crossing Values** from the menu that opens. Click the **Hide Horizontal Cursor Hair** check box, and click **OK**.

Cursors in Smith Charts and Polar Plots

In Smith charts and Polar plots, a cursor consists of a circle hair and a radial hair. The cross point is the cursor location and its value is displayed. A cursor can be grabbed by clicking the left mouse button when the mouse pointer is near any of its two hairs. The cursor values in the monitor column trace the data points that are closest to the hair cross.

Cursors in 2-D Sweep Panels

You can use a cursor in a 2D-sweep panel to create a new 'Y vs X2' plot. Move the cursor to a preferred position, and choose **Plot Y vs X2** from the cursor context menu.

Cursors in 3-D Sweep Panels

In a 3D-sweep panel, a cursor consists of a vertical hair, and two crossing hairs lying in the base plane. To grab a cursor in a 3D-sweep panel, move the mouse pointer near the vertical hair base where the two crossing hairs meet.

Deleting Cursors

To delete a cursor, click the right mouse button near a cursor to invoke the cursor context menu. Choose **Delete** from the context menu to delete the cursor, or choose **Delete All** to delete all cursors.

Working with Monitors

Monitors are used to trace waveform related values. Multiple monitors can be added to vertical waveviews, or panels in horizontal. The following monitors for analog panels are available:

- **Cursor value (Y=)**: Traces waveform values that correspond to the current active cursor position. Logarithmic value is displayed if the corresponding panel has logarithmic Y-axis. To display the logarithmic of a negative value x , the format $-\log(\text{abs}(x))$ is used.
- **Derivative (S=)**: Traces waveform derivative values that correspond to the current active cursor position. Derivative of logarithmic values is displayed if the corresponding panel has logarithmic Y-axis.
- **1/Derivative (1/S=)**: Traces the reciprocal of waveform derivative values that correspond to the current active cursor position.
- **Delta value (D=)**: Displays difference between (1) waveform values that correspond to the active cursor position and (2) waveform values that correspond to the other cursor. Delta value is available only when a waveview (or panel) has two cursors.
- **Cursor Average (A=)**: Displays waveform average between the cursors. Cursor average value is available only when a waveview (or panel) has two cursors.
- **Minimum (MIN=)**: Displays waveform minimum values over full or zoomed signal range.
- **Maximum (MAX=)**: Displays waveform maximum values over full or zoomed signal range.
- **PP (PP=)**: Displays waveform peak-to-peak values over full or zoomed signal range.
- **Average (AVG=)**: Displays waveform average values over full or zoomed signal range.
- **RMS (RMS=)**: Displays waveform root mean square values over full or zoomed signal range.

The following radix options for logic panels are available:

- **Use Panel Setting**: Uses the panel default radix setting.
- **Binary**: Displays logic values in binary radix.

- Octal: displays logic values with octal radix.
- Decimal: Displays logic values in decimal numbers.
- Hex-decimal: Displays logic value with hex-decimal radix.
- ASCII: Decodes logic vector into ASCII text.

Adding Monitors

If a vertical waveview (or a panel in a horizontal waveview) has no existing monitor in the cursor value type, a cursor value type monitor is automatically added when a cursor is created.

To add a new monitor, click the Monitor control button to open the Monitor Settings dialog window. Select the preferred settings, and click **Ok** to create the monitor.

Deleting Monitors

To delete a monitor, right-click a monitor, and choose **Delete Monitor** from the context menu that appears.

Reconfiguring Monitors

To reconfigure a monitor, right click a monitor, and choose **Configure Monitor** from the context menu that appears. In the Monitor Setting dialog box that opens, reconfigure the monitor and click **Ok** to make the change.

Linking Monitors to Cursors

To link a monitor to a selected cursor, right-click a monitor and choose **Link Cursor** from the context menu that appears. In Cursor Selection dialog window that opens, link any desired monitors to cursors.

Using the Measurement Tool

To access the Measurement Tool, choose **Tools > Measurement** from the main menu.

Once one or more measurements are added to a waveview, you can drag those measurements with the left mouse button to take the measurement interactively. If a panel has multiple signals and you want perform a Width, Slew, Frequency, or Duty-Cycle measurement, the default measurement target is the first selected (highlighted) signal. The first signal is the default if no signal is selected.

The following topics are available in this section:

- [Supported Measurements](#)
- [Adding or Removing Measurement Favorites](#)
- [Setting the Precision of Measurements](#)
- [Exporting Measurements](#)

Supported Measurements

The following measurements are supported:

Measurement	Type	Description
AC Coupled RMS	Level	Calculates the RMS value of the AC component of a waveform.
Amplitude	Level	Calculates the difference between the topline and baseline reference levels.
Baseline	Level	Calculates the baseline level of a waveform.
Cpk	Statistics	Calculates an indicator of the process capability for a waveform relative to specified upper and lower limits.
Damping Ratio	S Domain	Calculates the damping ratio of a waveform as -real/mag.

Chapter 9: Measurements
Using the Measurement Tool

Measurement	Type	Description
Data(X,Y)	General	Displays the X-axis and Y-axis values of a point on a waveform.
Delay	Time Domain	Calculates the delay between the edges of two waveforms relative to the default or specified topline and baseline levels for both the measured waveform and the reference waveform.
Difference	General	Displays the following information for two points on one or two waveforms: X1, Y1; X2, Y2; and Delta X, Del Y, Slope.
Dpu	Statistics	Calculates the total number of defects per unit based on the points in a waveform.
Duty Cycle	Time Domain	Displays a duty cycle of a periodic waveform.
F VS T	Time Domain	Calculates all frequency, period, or duty cycle values for the edges crossing the threshold, and then creates new Frequency vs. time, Period vs. time, or Duty Cycle vs. time waveforms using the specified X range and Y level.
Frequency	Time Domain	Displays the frequency and period of a periodic waveform.
Frequency Value	S Domain	Displays the frequency value at the point of a complex waveform on a Nyquist (or Nichols) plot.
Highpass	Frequency Domain	Calculates the corner frequency of a waveform with a highpass shape.
IP2	RF	Calculates the second order intercept point.
IP3/SFDR	RF	Calculates the third order intercept point.
Jitter	Time Domain	Displays the histogram of crossing edges with a specified X range or Y range.

Measurement	Type	Description
Length	General	Calculates the length of a straight line that connects two points on a waveform or two points on two waveforms.
Lowpass	Frequency Domain	Calculates the corner frequency of a waveform with a lowpass shape.
Mean	Statistics	Calculates the mean value of a waveform.
Mean+3std_dev	Statistics	Calculates the (mean + 3 standard deviation) value of a waveform.
Mean-3std_dev	Statistics	Calculates the (mean - 3 standard deviation) value of a waveform.
Natural Frequency	S Domain	Calculates the natural frequency of a waveform as the absolute value of an argument.
Overshoot	Time Domain	Calculates the overshoot of a waveform relative to a default or specified topline.
P1dB	RF	Calculates the 1dB compression point.
Quality Factor	S Domain	Calculates the quality factor of a waveform.
Rise/Fall Time	Time Domain	Calculates the risetime and falltime between specified upper and lower levels of a waveform.
RMS	Level	Calculates the RMS (Root Mean Square) value of a waveform.
Settle Time	Time Domain	Calculates the settle time of a waveform with respect to a default or specified settle level and a specified settle band.
Slew Rate	Time Domain	Calculates the slew rate of a waveform relative to the default or specified topline and baseline levels.
Std_dev	Statistics	Calculates the standard deviation of a waveform.

Measurement	Type	Description
Stopband	Frequency Domain	Calculates the stopband, low, high, or center frequency level or the level at which the measurement is calculated for a stopband-shaped waveform.
Topline	Level	Calculates the topline level of a waveform.
Undershoot	Time Domain	Calculates the undershoot of a waveform relative to a default or specified baseline level.
Width	General	Calculates the pulse width of a waveform.
Y Diff	General	Displays the Delta Y at a X value between two points on two waveforms.
Y Range	General	Displays the following information for a waveform: Waveform name, peak-to-peak Y range; Minimum Y value, Maximum Y value; and Average Y value, RMS value.
Yield	Statistics	Calculates the ratio of the number of data points between the Y-axis levels Upper and Lower relative to the total number of data points.

General Measurements

The following general measurements are available:

- [Data\(X,Y\)](#)
- [Difference](#)
- [Length](#)
- [Width](#)
- [Y Diff](#)
- [Y Range](#)

Data(X,Y)

Displays the X-axis and Y-axis values of a point on a waveform.

Note: This measurement is supported only in Analog X-Y and 2-D Sweep waveview panels.

The following parameters can be set for the Data(X,Y) measurement:

Parameter	Description
Locked Level	Locks the meter Y level at the specified percentage or level (in Y-axis units).
Target Signal	Uses the min/max Y levels from the signal you are currently measuring. This option is only available when specifying a meter Y level that is locked at a specified percentage.
All Signals	Uses the min/max Y levels from all signals that are currently open. This option is only available when specifying a meter Y level that is locked at a specified percentage.
User Specified	Uses the min/max Y values you specify in the Min and Max text fields.

Difference

Displays the following information for two points on one or two waveforms: X1, Y1; X2, Y2; and Delta X, Del Y, Slope.

Note: This measurement is supported only in Analog X-Y, Eye Diagram, and 2-D Sweep waveview panels.

The following parameters can be set for the Difference measurement:

Parameter	Description
Locked Level	Locks the meter Y level at the specified percentage or level (in Y-axis units).
Lock 2nd Point at	Locks a second meter Y-level point at the specified percentage or level (in Y-axis units). This option is only available when the Indep. P2 Lock Level option is selected.
Target Signal	Uses the min/max Y levels from the signal you are currently measuring. This option is only available when specifying a meter Y level that is locked at a specified percentage.

Chapter 9: Measurements

Using the Measurement Tool

Parameter	Description
All Signals	Uses the min/max Y levels from all signals that are currently open. This option is only available when specifying a meter Y level that is locked at a specified percentage.
User Specified	Uses the min/max Y values you specify in the Min and Max text fields.
Anchor First Point	Anchors the measurement at a single point; further dragging only moves the second point.
Gravity Snap	Snaps anchors to data points when moving.
Indep. P2 Lock Level	Uses different lock levels for the two specified points.

Length

Calculates the length of a straight line that connects two points on a waveform or two points on two waveforms. If two waveforms are selected, the two waveforms do not need to be the same type.

Width

Calculates the pulse width of a waveform.

Note: This measurement is supported only in Analog X-Y, Login, and Eye Diagram waveview panels.

The following parameters can be set for the Width measurement:

Parameter	Description
Locked Level	Locks the meter Y level at the specified percentage or level (in Y-axis units).
Target Signal	Uses the min/max Y levels from the signal you are currently measuring. This option is only available when specifying a meter Y level that is locked at a specified percentage.
All Signals	Uses the min/max Y levels from all signals that are currently open. This option is only available when specifying a meter Y level that is locked at a specified percentage.

Parameter	Description
User Specified	Uses the min/max Y values you specify in the Min and Max text fields.

Y Diff

Displays the Delta Y at a X value between two points on two waveforms.

Note: This measurement is supported only in Analog X-Y waveview panels.

Y Range

Displays the following information for a waveform:

- Waveform name
- Peak-to-Peak Y range
- Minimum Y value
- Maximum Y value
- Average Y value
- RMS value

Note: This measurement is supported only in Analog X-Y waveview panels.

Specifying the **Measure over Zoomed X-Range** option measures the zoomed area that is currently displayed on screen. If this option is not specified, the whole waveform is measured even if the waveform is zoomed and some of the X-range is not visible.

Time Domain Measurements

The following General measurements are available:

- [Delay](#)
- [Duty Cycle](#)
- [F VS T](#)
- [Frequency](#)
- [Jitter](#)

- [Overshoot](#)
- [Rise/Fall Time](#)
- [Settle Time](#)
- [Slew Rate](#)
- [Undershoot](#)

Delay

Calculates the delay between the edges of two waveforms relative to the default or specified topline and baseline levels for both the measured waveform and the reference waveform. The rising or falling edge on the reference waveform is assumed to cause the corresponding (rising or falling) edge on the measured waveform so that the reference edge occurs before the measured edge.

All rising or falling edges for the measured waveform are determined based on the Trigger setting in the Measure dialog box. From each edge, the corresponding previously-occurring edge on the reference waveform is determined. The difference between the two edges on the X-axis is the delay time.

The following parameters can be set for the Delay measurement:

Parameter	Description
Percentage	Locks the delay level at the specified percentages for the signal (L(%)) and reference signal (Ref. L(%)). In signal Y units.
Signal Level	Locks the delay level at the specified levels for the signal (L(V)) and reference signal (Ref. L(V)). In signal Y units.
Target Signal	Uses the min/max Y levels from the signal you are currently measuring. This option is only available when specifying a delay level that is locked at a specified percentage range.
All Signals	Uses the min/max Y levels from all signals that are currently open. This option is only available when specifying a delay level that is locked at a specified percentage range.
User Specified	Uses the min/max Y values you specify in the Min and Max text fields.

Duty Cycle

Displays a duty cycle of a periodic waveform, which is measured in one of two different ways:



The Duty Cycle is calculated as the percentage of:

$$\frac{t1}{t}$$

Note: This measurement is supported only in Analog X-Y and Login waveview panels.

The following parameters can be set for the Duty Cycle measurement:

Parameter	Description
Locked Level	Locks the meter Y level at the specified percentage or level (in Y-axis units).
Target Signal	Uses the min/max Y levels from the signal you are currently measuring. This option is only available when specifying a meter Y level that is locked at a specified percentage.
All Signals	Uses the min/max Y levels from all signals that are currently open. This option is only available when specifying a meter Y level that is locked at a specified percentage.
User Specified	Uses the min/max Y values you specify in the Min and Max text fields.

F VS T

Calculates all frequency, period, or duty cycle values for the edges crossing the threshold, and then create new Frequency vs. time, Period vs. time, or Duty Cycle vs. time waveforms using the specified X range and Y level.

Note: This measurement is supported only in Analog X-Y waveview panels.

The following parameters can be set for the F VS T measurement:

Parameter	Description
Locked Level	Locks the meter Y level at the specified percentage or level (in Y-axis units).
Target Signal	Uses the min/max Y levels from the signal you are currently measuring. This option is only available when specifying a meter Y level that is locked at a specified percentage.

Parameter	Description
All Signals	Uses the min/max Y levels from all signals that are currently open. This option is only available when specifying a meter Y level that is locked at a specified percentage.
User Specified	Uses the min/max Y values you specify in the Min and Max text fields.
Delta-P vs T Plot	Plots the delta period versus time. This option is available by right-clicking your mouse and choosing Delta-P vs T Plot from the menu that opens.

Frequency

Displays the frequency and period of a periodic waveform. The period is calculated as the difference in time between two consecutive edges of the same polarity of a waveform. The frequency is calculated as:

$$\frac{1}{\text{period}}$$

Note: This measurement is supported only in Analog X-Y and Login waveview panels.

The following parameters can be set for the Frequency measurement:

Parameter	Description
Locked Level	Locks the meter Y level at the specified percentage or level (in Y-axis units).
Target Signal	Uses the min/max Y levels from the signal you are currently measuring. This option is only available when specifying a meter Y level that is locked at a specified percentage.
All Signals	Uses the min/max Y levels from all signals that are currently open. This option is only available when specifying a meter Y level that is locked at a specified percentage.
User Specified	Uses the min/max Y values you specify in the Min and Max text fields.

Jitter

Displays the histogram of crossing edges with a specified X range or Y range. You must click the right mouse button menu on the measurement meter to complete the measurement.

Note: This measurement is supported only in Analog X-Y, Eye Diagram, and 2-D Sweep waveview panels.

The following parameters can be set for the Jitter measurement:

Parameter	Description
Locked Level	Locks the meter Y level at the specified percentage or level (in Y-axis units).
Target Signal	Uses the min/max Y levels from the signal you are currently measuring. This option is only available when specifying a meter Y level that is locked at a specified percentage.
All Signals	Uses the min/max Y levels from all signals that are currently open. This option is only available when specifying a meter Y level that is locked at a specified percentage.
User Specified	Uses the min/max Y values you specify in the Min and Max text fields.
Rising	Measures the rising edge jitter.
Falling	Measures the falling edge jitter.
H-Crossing	Measures edges that cross the horizontal range.
V-Crossing	Measures edges that cross the vertical range.
New WaveView	Plots the jitter histogram on a new waveview window.
Active WaveView	Plots the jitter histogram on the active waveview window.

Overshoot

Calculates the overshoot of a waveform relative to a default or specified topline. The overshoot is calculated as the difference between the maximum point on the waveform and the specified (or calculated) Topline value.

The following parameters can be set for the Overshoot measurement:

Parameter	Description
Percentage	Locks the rise/fall margin threshold at the specified high (H(%)) and low (L(%)) percentages. In signal Y units.
Signal Level	Locks the rise/fall margin threshold at the specified high (H(V)) and low (L(V)) signal levels. In signal Y units.
Target Signal	Uses the min/max Y levels from the signal you are currently measuring. This option is only available when specifying a rise/fall margin that is locked at a specified percentage range.
All Signals	Uses the min/max Y levels from all signals that are currently open. This option is only available when specifying a rise/fall margin that is locked at a specified percentage range.
User Specified	Uses the min/max Y values you specify in the Min and Max text fields.
Absolute	Specifies the result as "maximum value-high level value."
Percentage	Specifies the result as a percentage of "absolute value/(high level-low level)."

Rise/Fall Time

Calculates the risetime and falltime between specified upper and lower levels of a waveform.

Note: This measurement is only supported in Analog X-Y waveview panels.

The following parameters can be set for the Rise/Fall Time measurement:

Parameter	Description
Percentage	Locks the rise/fall margin threshold at the specified high (H(%)) and low (L(%)) percentages. In signal Y units.
Signal Level	Locks the rise/fall margin threshold at the specified high (H(V)) and low (L(V)) signal levels. In signal Y units.

Parameter	Description
Target Signal	Uses the min/max Y levels from the signal you are currently measuring. This option is only available when specifying a rise/fall margin that is locked at a specified percentage range.
All Signals	Uses the min/max Y levels from all signals that are currently open. This option is only available when specifying a rise/fall margin that is locked at a specified percentage range.
User Specified	Uses the min/max Y values you specify in the Min and Max text fields.

Settle Time

Calculates the settle time of a waveform with respect to a default or specified settle level and a specified settle band. The settle time is calculated by searching the waveform from right to left to find the first point that is outside of the settle band. The time that the waveform leaves the settle band is used as the settle time.

The following parameters can be set for the Settle Time measurement:

Parameter	Description
Percentage	Locks the settle level at the specified percentage level (Level(%)). In signal Y units.
Signal Level	Locks the settle level at the specified signal level (Level(V)). In signal Y units.
Target Signal	Uses the min/max Y levels from the signal you are currently measuring. This option is only available when specifying a settle level that is locked at a specified percentage range.
All Signals	Uses the min/max Y levels from all signals that are currently open. This option is only available when specifying a settle level that is locked at a specified percentage range.
User Specified	Uses the min/max Y values you specify in the Min and Max text fields.

Parameter	Description
% of SettleLevel	Calculates the band value as the specified band value percentage multiplied by the settle level (for example, 5*settle_level).
% of PeaktoPeak	Calculates the band value as the specified band value percentage multiplied by the peak to peak range of the signal (for example, 5*peak_to_peak_range).
Absolute	Calculates the band value as the specified value (in signal Y units).

Slew Rate

Calculates the slew rate of a waveform relative to the default or specified topline and baseline levels.

Note: This measurement is only supported in Analog X-Y waveview panels.

The slew rate is calculated using the difference between the upper and lower levels of a waveform divided by the risetime or falltime of the edge. You can select the upper and lower levels as a percentage of the topline or baseline.

The following parameters can be set for the Slew Rate measurement:

Parameter	Description
Percentage	Locks the rise/fall margin threshold at the specified high (H(%)) and low (L(%)) percentages. In signal Y units.
Signal Level	Locks the rise/fall margin threshold at the specified high (H(V)) and low (L(V)) signal levels. In signal Y units.
Target Signal	Uses the min/max Y levels from the signal you are currently measuring. This option is only available when specifying a rise/fall margin that is locked at a specified percentage range.
All Signals	Uses the min/max Y levels from all signals that are currently open. This option is only available when specifying a rise/fall margin that is locked at a specified percentage range.

Parameter	Description
User Specified	Uses the min/max Y values you specify in the Min and Max text fields.

Undershoot

Calculates the undershoot of a waveform relative to a default or specified baseline level. The undershoot is calculated as the difference between the minimum point on the waveform and the specified (or calculated) Baseline value.

The following parameters can be set for the Undershoot measurement:

Parameter	Description
Percentage	Locks the rise/fall margin threshold at the specified high (H(%)) and low (L(%)) percentages. In signal Y units.
Signal Level	Locks the rise/fall margin threshold at the specified high (H(V)) and low (L(V)) signal levels. In signal Y units.
Target Signal	Uses the min/max Y levels from the signal you are currently measuring. This option is only available when specifying a rise/fall margin that is locked at a specified percentage range.
All Signals	Uses the min/max Y levels from all signals that are currently open. This option is only available when specifying a rise/fall margin that is locked at a specified percentage range.
User Specified	Uses the min/max Y values you specify in the Min and Max text fields.
Absolute	Specifies the result as "maximum value-high level value."
Percentage	Specifies the result as a percentage of "absolute value/(high level-low level)."

Frequency Domain Measurements

The following Frequency Domain measurements are available:

- [Highpass](#)
- [Lowpass](#)
- [Stopband](#)

Highpass

Calculates the corner frequency of a waveform with a highpass shape. The highpass measurement is calculated relative to a default offset or a specified topline and a specified offset.

The corner frequency is calculated by searching from the right to the left until the waveform first falls below the measurement level, which is determined by the specified offset value (from the topline).

The following parameters can be set for the Highpass measurement:

Parameter	Description
Percentage	Locks the topline at the specified percentage (Topline(%)). In signal Y units.
Signal Level	Locks the topline at the specified signal level (Topline). In signal Y units.
Target Signal	Uses the min/max Y levels from the signal you are currently measuring. This option is only available when specifying a topline that is locked at a specified percentage range.
All Signals	Uses the min/max Y levels from all signals that are currently open. This option is only available when specifying a topline that is locked at a specified percentage range.
User Specified	Uses the min/max Y values you specify in the Min and Max text fields.
Offset	Specifies the offset in Y-axis units.

Lowpass

Calculates the corner frequency of a waveform with a lowpass shape. The lowpass measurement is calculated relative to a default or specified topline and a specified offset.

The corner frequency is calculated by searching from the left to the right until the waveform first falls below the measurement level, which is determined by the specified offset value (from the topline).

The following parameters can be set for the Lowpass measurement:

Parameter	Description
Percentage	Locks the topline at the specified percentage (Topline(%)). In signal Y units.
Signal Level	Locks the topline at the specified signal level (Topline). In signal Y units.
Target Signal	Uses the min/max Y levels from the signal you are currently measuring. This option is only available when specifying a topline that is locked at a specified percentage range.
All Signals	Uses the min/max Y levels from all signals that are currently open. This option is only available when specifying a topline that is locked at a specified percentage range.
User Specified	Uses the min/max Y values you specify in the Min and Max text fields.
Offset	Specifies the offset in Y-axis units.

Stopband

Calculates the stopband, low, high, or center frequency level or the level at which the measurement is calculated for a stopband-shaped waveform. This measurement is calculated relative to a default or specified topline level and a specified offset:

```
fcenter = square root of (flow*fhigh)
quality factor = fcenter/bandwidth
```


The following parameters can be set for the Stopband measurement:

Parameter	Description
Percentage	Locks the topline at the specified percentage (Topline(%)). In signal Y units.
Signal Level	Locks the topline at the specified signal level (Topline). In signal Y units.
Target Signal	Uses the min/max Y levels from the signal you are currently measuring. This option is only available when specifying a topline that is locked at a specified percentage range.
All Signals	Uses the min/max Y levels from all signals that are currently open. This option is only available when specifying a topline that is locked at a specified percentage range.
User Specified	Uses the min/max Y values you specify in the Min and Max text fields.
Offset	Specifies the offset in Y-axis units.

Statistical Measurements

The following Statistical measurements are available:

- Cpk
- Dpu
- Mean
- Mean+3std_dev
- Mean-3std_dev
- Std_dev
- Yield

Cpk

Calculates an indicator of the process capability for a waveform relative to specified upper and lower limits. Cpk is calculated using the following equation:

Chapter 9: Measurements

Using the Measurement Tool

$$\frac{\text{upper} - \text{mean}}{3(\text{std_dev})}$$

or

$$\frac{\text{mean} - \text{lower}}{3(\text{std_dev})}$$

In this calculation, `mean` represents the mean value of the scatter plot, `upper` and `lower` represent the specification limits you specify, and `std_dev` represents the standard deviations of the scatter plot. When both the `upper-mean` and `lower-mean` values are provided, the smaller result of these two calculations is displayed as the measurement.

The following parameters can be set for the Cpk measurement:

Parameter	Description
Percentage	Locks the upper/lower threshold at the specified high (H(%)) and low (L(%)) percentages. In signal Y units.
Signal Level	Locks the upper/lower threshold at the specified high (H(V)) and low (L(V)) signal levels. In signal Y units.
Target Signal	Uses the min/max Y levels from the signal you are currently measuring. This option is only available when specifying an upper/lower threshold that is locked at a specified percentage range.
All Signals	Uses the min/max Y levels from all signals that are currently open. This option is only available when specifying an upper/lower threshold that is locked at a specified percentage range.
User Specified	Uses the min/max Y values you specify in the Min and Max text fields.

Dpu

Calculates the total number of defects per unit based on the points in a waveform. Given one or both of an upper and lower specification limit, the Dpu is calculated as the area under a normal distribution that falls outside the specification limit(s). The mean and standard deviation of the normal distribution are equal to the mean and standard deviation of the points in the waveform.

The following parameters can be set for the Dpu measurement:

Parameter	Description
Percentage	Locks the upper/lower threshold at the specified high (H(%)) and low (L(%)) percentages. In signal Y units.
Signal Level	Locks the upper/lower threshold at the specified high (H(V)) and low (L(V)) signal levels. In signal Y units.
Target Signal	Uses the min/max Y levels from the signal you are currently measuring. This option is only available when specifying an upper/lower threshold that is locked at a specified percentage range.
All Signals	Uses the min/max Y levels from all signals that are currently open. This option is only available when specifying an upper/lower threshold that is locked at a specified percentage range.
User Specified	Uses the min/max Y values you specify in the Min and Max text fields.

Mean

Calculates the mean value of a waveform, which is calculated using the following equation:

$$\frac{1}{N} \sum_{j=1}^N W_j$$

In this calculation, N is the number of points, and array W_j contains the individual points of the waveform.

Mean+3std_dev

Calculates the (mean + 3 standard deviation) value of a waveform.

Mean-3std_dev

Calculates the (mean - 3 standard deviation) value of a waveform.

Std_dev

Calculates the standard deviation of a waveform. This measurement is intended for statistical (discrete) data such as histograms and is calculated using the following equation:

$$\left[\frac{1}{N-1} \sum_{j=1}^N (W_j - \bar{w})^2 \right]^{\frac{1}{2}}$$

Yield

Calculates the ratio of the number of data points between the Y-axis levels Upper and Lower relative to the total number of data points.

The following parameters can be set for the Yield measurement:

Parameter	Description
Percentage	Locks the upper/lower threshold at the specified high (H(%)) and low (L(%)) percentages. In signal Y units.
Signal Level	Locks the upper/lower threshold at the specified high (H(V)) and low (L(V)) signal levels. In signal Y units.
Target Signal	Uses the min/max Y levels from the signal you are currently measuring. This option is only available when specifying an upper/lower threshold that is locked at a specified percentage range.
All Signals	Uses the min/max Y levels from all signals that are currently open. This option is only available when specifying an upper/lower threshold that is locked at a specified percentage range.
User Specified	Uses the min/max Y values you specify in the Min and Max text fields.

Level Measurements

The following Level measurements are available:

- [AC Coupled RMS](#)
- [Amplitude](#)

- [Baseline](#)
- [RMS](#)
- [Topline](#)

AC Coupled RMS

Calculates the RMS value of the AC component of a waveform. the AC couples RMS is calculated using the following equation:

$$\left[\frac{1}{(x2 - x1)} \int_{x1}^{x2} (w - \bar{w})^2 dx \right]^{\frac{1}{2}}$$

In this calculation, w represents the waveform and \bar{w} is its average value. The $x1$ and $x2$ values are the starting and ending points for the waveform. Add in WV as an option for the AC Coupled measurement.

Amplitude

Calculates the difference between the topline and baseline reference levels.

Baseline

Calculates the baseline level of a waveform.

Note: This measurement is automatically calculated when enabled.

RMS

Calculates the RMS (Root Mean Square) value of a waveform using the following equation:

$$\left[\frac{1}{(x2 - x1)} \int_{x1}^{x2} (W^2 dx) \right]^{\frac{1}{2}}$$

In this calculation, W represents the waveform, and $x1$ and $x2$ represent the starting and ending points.

Topline

Calculates the topline level of a waveform. The topline is automatically calculated using the probability density histogram method.

S Domain Measurements

The following S Domain measurements are available:

- [Damping Ratio](#)
- [Frequency Value](#)
- [Natural Frequency](#)
- [Quality Factor](#)

Damping Ratio

Calculates the damping ratio of a waveform as $-\text{real}/\text{mag}$.

Frequency Value

Displays the frequency value at the point of a complex waveform on a Nyquist (or Nichols) plot.

Natural Frequency

Calculates the natural frequency of a waveform as the absolute value of an argument. The natural frequency is calculated using the following equation:

$$\text{natural frequency} = \sqrt{(\text{real}^2 + \text{imag}^2)}$$

Quality Factor

Calculates the quality factor of a waveform. This measurement is calculated as:

$$\frac{1}{2(\text{damping ratio})}$$

RF Measurements

The following RF measurements are available:

- [P1dB](#)
- [IP2](#)
- [IP3/SFDR](#)

P1dB

Calculates the 1dB compression point.

IP2

Calculates the second order intercept point.

IP3/SFDR

Calculates the third order intercept point.

The following parameters can be set for the IP3/SFDR measurement:

Parameter	Description
Calculate SFDR	Specifies that IP3 is calculated as well as SFDR.
Use INTEGRATED_NF	Specifies the Integrated Noise Figure to be used for the SFDR calculation.
Noise Figure (dB)	Specifies the Noise Figure in decibels (dB).
SN ratio (dB)	Specifies the signal-to-noise ratio in decibels (dB).
Band width (dB)	Specifies the system Bandwidth in decibels (dB). This parameter is not available when "Use INTEGRATED_NF" is selected.
Integrated NF (dB)	Specifies the Integrated Noise Figure in decibels (dB). This parameter is not available when "Use INTEGRATED_NF" is selected.

Adding or Removing Measurement Favorites

In the Favorites tab, you can choose from several measurement you use most often.

To add a measurement to the list of favorites:

1. Click the All tab.
The available measurement categories and corresponding measurement appear.
2. Click a measurement.
3. Click the **Favorite** button at the bottom of the Measurement Tool window.
The selected measurement is saved as a favorite and is included as one of the measurements you can choose from the Favorite tab.

To remove a measurement from the favorite measurement list:

1. Click the Favorite tab.
The current measurement favorites are displayed at the top of the Measurement Tool window.
2. Click a measurement.
3. Click the **Remove** button at the bottom of the Measurement Tool window.
The selected measurement is removed from the list of favorite measurements you can choose from the Favorite tab.

Setting the Precision of Measurements

To change the precision of measurements, choose **Config > Preferences**, and click on the General tab. Enter a value in the Number of Valid Digits text box.

Exporting Measurements

When you perform a measurement on a waveform, the measurement can be exported to the following equivalent forms:

- Equivalent HSPICE `.MEASURE` statements
- Tcl ACE `sx_equation` statements
- Equation builder equations

To directly export a measurement to the Equation Builder, right-click a measurement and choose **Meter to Eqn** from the context menu. The equivalent measurement equation and the result are displayed in the equation builder.

To export all measurements on a waveview window, right-click a measurement and choose **Meter Export**. Use the Dynamic Meter Export dialog box to select which meters to be exported and the preferred export type. Only the following types of measurements can be exported:

- Rise/Fall time
- Width/Frequency
- Difference
- Y-Difference
- Y-Range

In the Dynamic Meter Export dialog window, you can define the export name of individual measurements, enable/disable a meter in the list, control how to count the number of switch edges, and define the precision for the exported values.

For HSPICE Measure and ACE Tcl export modes, the path of the output file must be specified.

Chapter 9: Measurements
Using the Measurement Tool

Multi-Trace Sweep Waveforms

This chapter contains information on multi-trace sweep waveforms.

A typical analog signal from a circuit simulator contains a single trace of waveform data representing the full span of a single simulation run. Many simulators, however, generate a single output file for multiple simulation runs at different simulation conditions/parameters. Examples include:

- sw0, ac0, and tr0 files from HSPICE (Synopsys)
- COU files from ELDO (Mentor Graphics)
- PL files from Saber (Synopsys)

Each signal in these files contains multiple traces from different simulation runs. Custom WaveView reads these multiple traces as a single signal and displays them in several different ways. The following sections describe how you can manipulate these multi-trace signals using different panels.

Reading Multi-Trace Data

HSPICE/Saber (Synopsys) parametric analyses can result in multi-trace sweep output files. These files have the same file extension as those from the regular simulation runs. But a single signal from these sweep result file actually consists of multiple traces representing results from different runs.

ELDO (Mentor Graphics) parametric analysis also stores output in a similar way and result in multi-trace COU files. Different from the HSPICE/Saber

output files, there are two different ways to read a multi-trace COU files (also applied to Berkeley raw format):

- A single multi-trace COU file can be read as multiple virtual single-trace files. This is the default way that COU files are processed in Custom WaveView.
- The COU file can be read as a single file with each signal containing multiple traces. You need to enable the **read multi-run data as multi-trace waveforms** option in the Loading Waveform File dialog box before loading the waveform file.

Loading Multi-File PSF Sweep Analysis Result

The PSF format stores sweep analysis result in multiple waveform files under the same directory. To load these result files and their associated sweeping parameters, open the runObjFile or the logFile in the output directory. Multiple PSF files under the sweep analysis output directory are processed as a single file under the name of runObjFile or logFile.

The runObjFile is also used to open Cadence Spectre Monte Carlo analysis results or Cadence Analog Artist parametric sweep analysis results in multiple directories. For Analog Artist results, open the runObjFile in the main psf/ directory.

Creating a File Set from Multiple Files

If a sweep analysis is done externally using script, multiple files are generated. To combine these files together with their associated corner variable conditions, use the **Create File Set** function in Grouping waveform files.

Displaying Multi-Trace Signals

A multi-trace waveform can be displayed in regular panels such as X-Y panels, Polar Plots or Smith Charts. The signal is automatically broken into individual traces. Each trace is assigned with a different color and used to represent

result from one simulation run. The signal name is automatically amended to include the associated parameter values.

Multi-trace signals can be also displayed in the 2D-sweep and 3D-sweep panels. All traces of a multi-trace signal in the 2D or 3D-sweep panel is operated collectively as a single signal entity and assigned with a single waveform color and name.

The **Sweep Display Filter** function can be used to define the active sweep traces for display operations. To define the active traces, right click over the waveform file in the Output View and choose **Sweep Display Filter** from the context menu. For sweep waveform files in a file group, Custom WaveView searches for the first group member file that has its Sweep Display filter enabled. The Sweep Display filter settings are then used to apply to all file members in the group.

Breaking Multi-Trace Signals

A multi-trace sweep signal can be manually broken into individual single-trace signals. Right-click a multi-trace signal in the Output View browser, and choose **Break Signal-Name** from the context menu that appears. The converted waveforms are stored under `derived waveforms.TRACE`. The name of a converted single-trace signal includes the parameter conditions of the corresponding trace.

Calculating Waveforms for Multi-Trace Signals

When a multi-trace signal is involved in a waveform equation, the result is also a multi-trace waveform. However, when a signal from grouped files is involved in an equation, the same equation is recalculated multiple times for each file automatically. The results are multiple single-trace waveforms with each waveform representing the calculation result from each file.

If a waveform equation produces a scalar result, the application of such an equation on multi-trace signals would generate multiple scalars. To convert these scalar results into a parametric plot, use the `parametric()` function in the Equation Builder and select one of the sweeping parameter as the x-axis of the parametric plot.

Chapter 10: Multi-Trace Sweep Waveforms

Selecting the Sweeping Parameter

Note: An equation can only involve multi-trace signals that have the same number of traces and the same sweeping parameter conditions.

Selecting the Sweeping Parameter

A multi-trace signal can contain multiple parameters for each trace. The following table shows a typical example:

Trace Index	Temperature	Vdd
Trace 1	10	5
Trace 2	100	5
Trace 3	10	4.8
Trace 4	100	4.8

You can select the active sweeping parameter by right-clicking the sweep result file in the Output View browser and choosing **X2 Parameter** from context menu that appears. The active sweeping parameter is used in the Y vs X2 conversion in a 2D-sweep panel and equation calculation of the parametric() function.

Filtering Multi-Trace Waveforms

A multi-trace signal contains multiple waveform traces. Each trace has a set of associated sweeping parameters (or sub X-variables). For example:

```
Trace 1: Temp=0 Vdd=3.3
Trace 2: Temp=0 Vdd=5
Trace 3: Temp=100 Vdd=3.3
Trace 4: Temp=100 Vdd=5
```

By default, a multi-trace signal is plotted with respect to its primary independent sweeping variable (time, for example). In this case, you can choose **Sweep line filter** from the context menu in a 2D-sweep panel to display selected traces.

The 2D-sweep panel also supports plotting a multi-trace signal with respect to sweeping parameters other than the primary variable (sub X-variable). To change the default X-axis of a 2D-sweep panel to a sub X-variable, choose **Change X Variable** from the panel context menu. Drag and drop a sweeping parameter (type P) from the Output View browser to the Setting X Variable dialog window.

When a 2D-sweep panel is set up to plot waveforms against a sub X-variable, choosing **Sweep Line Filter** from the panel context menu opens the Sub X-Variable Plotting Filter dialog window.

That the filter setup is different between using the default X-axis and sub X-Variable X-axis. This is because in the sub X-Variable plot mode, based on the selected sub X-variable, the number of traces can vary depending on the number of unique combinations among other sweeping parameters. Custom WaveView automatically finds out the number of traces, and sorts the order of the sub X-Variable values to display waveforms.

Note: A multi-trace signal must have equal number of points in each of its original traces in order to be plotted in the sub X-variable mode.

Using Multi-Trace Signals as X-Axes

The current version of Custom WaveView does not support plotting a multi-trace signal with respect to another multi-trace signal.

Viewing or Modifying Sweep Signal Attributes

To view or modify sweep signal attributes for an XY panel:

1. Right-click on an XY panel, and choose **Sweep Attributes** from the menu that opens.

The Sweep Attributes dialog box opens.

2. Choose a panel from the Panel menu.

Panels are identified by the number of rows or column they contain. The default is **All**.

Chapter 10: Multi-Trace Sweep Waveforms

Viewing or Modifying Sweep Signal Attributes

3. Choose a signal from the Signal menu for which you want to change sweep attributes.
4. Choose a color for the sweeps from the Color menu.

Rainbow is selected by default.

5. Click the check box in the Show column of the sweep table for each trace you want to show in a sweep.

The traces displayed in the panel are selected by default. When you move your cursor over the data in the parameter table, the line is highlighted in the corresponding panel. Any changes that you make are saved as they occur.

You can click the **Show All** or **Hide All** buttons at the bottom of the Sweep Attributes dialog box to show or hide all traces, respectively.

6. (Optional) Click the **Apply other signals with the same parameter** check box to sync the attribute settings with other signals.
7. Click **Close** when you are finished.

Eye Diagrams

This chapter contains information on how to create and manipulate eye diagrams.

To use the Eye diagram, create an empty Eye diagram panel by choosing **Panel > New > Eye Diagram** from the main menu. Signals are then dragged from the Output View browser and dropped into the Eye diagram. The Eye diagram by default displays signals in the folded mode.

A folded Eye diagram partitions signals into continuous intervals that are then overlapped to form the Eye diagram. The interval width can be user-specified or automatically determined.

Zoom operations are supported in both folded and unfolded eye diagrams.

The shift parameter is used to controls the alignment of a folded Eye diagram. A slider at the lower left corner of the Eye diagram panel allows users to interactively change the shift setting.

Unfolding Eye Diagrams

An Eye diagram can be unfolded by choosing **Unfold Eye** from the panel context menu. The unfolded Eye diagram displays the original signals and the corresponding intervals highlighted in red box at the top.

Similar to an oscilloscope, the Eye diagram also accepts a signal as an external trigger to construct the folded Eye diagram. To specify the external trigger signal, drag the signal from the Output View browser and drop it into the lower right corner of an Eye diagram panel. A hint box highlights the drop location for the external trigger signal.

Tracing Waveform Points in Eye Diagrams

You can use cursors in an eye diagram to trace a waveform point location in the unfolded eye. Choose **Trace** from the cursor context menu of the corresponding eye diagram location. Cursors are jumped to the corresponding location when the eye is unfolded.

Configuring Eye Diagrams

You can change eye diagram parameters from the Eye Diagram Settings dialog window. Choose **Configure Eye** from the panel context menu to open the dialog.

Eye width is automatically determined if the **Auto-Width** option is checked. You can manually set the width/frequency by disabling the **Auto-Width** option. In Auto-Width mode, an eye diagram always uses the first signal in the panel to determine the eye width.

The **Trigger Period** option sets the eye trigger period. By default, the trigger period is the same as the eye diagram UI width. Other available options include **0.5UI**, **External Trigger**, and **User-defined**.

For externally triggered eye diagrams, the trigger levels and edges can be also configured. The **Auto-Level** option uses the average magnitude of the external trigger signal as the trigger level.

The Filter Settings configuration tab is used to exclude unwanted time period when forming an eye diagram. Two filtering modes are supported: In the **Index Range** mode, use the **Starting Window** and **Number of Windows** settings to select the range. In the **Time Range** mode, use the **Start Time** and **Stop Time** settings.

A mask can be superimposed to the folded eye diagram as timing specification. Mask type and parameters can be selected from the mask configuration tab. User-defined masks can be added using mask files.

The mask can be displayed on top of the eye diagram waveforms if the **Show Mask on Top of Waveforms** option is selected.

Cursors in a folded eye diagram trace the eye fuss (eye height/width) or the envelopes of the eye pattern. Select the desired **Eye fuss** values and eight envelop measurements (upper/lower/left/right by outer/inner) from the cursor

context menu. If a cursor is selected to trace the eye envelope, the cursor is automatically moved to their corresponding unfolded positions when the eye diagram is unfolded.

Eye diagram settings can be copied and pasted between multiple eye diagrams; right-click an eye diagram and choose either **Copy Settings** or **Paste Settings** from the context menu.

Generating Jitter Histograms

Cursors are normally used in Eye Diagrams to trace the eye envelope or fuss. They can be also used to produce jitter histograms from the eye envelope pattern. To create the jitter histograms, move a cursor and position its horizontal hair at a preferred level. Click the right mouse button on a cursor to open the cursor context menu and choose **View Histogram**.

Custom WaveView automatically samples the time (the offset into a folded eye window) of each cross-point between the horizontal hair and the eye waveform, and creates histograms for the two areas.

The generated histograms display the jitter distributions of the two cross-section areas.

Automatic Eye Measurement

The Automatic Eye Measurement tool can take eye opening or aperture measurement on an eye diagram. Choose **Measure Eye** from the panel context menu to open this measurement function.

The measurement results are displayed on top of the eye diagrams. Choose **Clear Measure** from the panel context menu to clear the measure results.

The same eye measurement functions are also available as ACE functions for batch mode measurements. Refer to the *Analysis Command Environment Reference (ACE) Reference Manual* for details.

Adding User-Defined Masks

A mask is an abstract reference overlaid in eye diagrams to qualify signals timing integrity. Custom WaveView provides two built-in masks: a standard mask for common near-end timing specifications and the IEEE802.3 mask. You can add your own mask definitions using mask files as well.

Mask File Syntax

A mask file can contain one or multiple mask definitions. A mask consists of multiple segments that are lines plotted between adjacent points from a node list. Each mask definition is organized in the following format:

```
mask "maskname" direct|normalized
"nodename", X, Y
<newpath>
"nodename", X, Y
...
```

The keyword `mask` starts a new mask definition, which must be followed by a quoted mask name and then a type keyword (`direct` or `normalized`) that specifies the mask type. The words `mask`, `direct`, `normalized`, and `newpath` are reserved keywords.

Each node in the list consists of a quoted node name, the X value of the node and the Y value of the node. For a `direct` type mask, X is the x value into an eye window, and Y is the y value of the node. For a `normalized` type mask, X and Y values denote a node position as fractions into the eye window. X=0 (Y=0) is on the left (bottom) window edge and X=1 (Y=1) is on the right (top) window edge.

A `newpath` keyword breaks line strokes and starts a new drawing stroke.

Incorporating Mask Files

Custom WaveView uses the `SW_SX_MASKFILE` environment variable as a pointer to the user mask files.

On UNIX Platforms

```
setenv SW_SX_MASKFILE file1:file2:fileN
```

`file1...filen` are the path to the mask files. A column (:) is placed between file paths.

On Windows 95/98 Platforms

Open a MSDOS window and edit AUTOEXEC.BAT in the top directory of your boot hard-drive (C:\, for example). Add the following line to the AUTOEXEC.BAT file:

```
SET SW_SX_MASKFILE=file1;file2;filen
```

The file names are separated by semi-column (;) instead of column (:) because Windows uses column (:) as a drive delimiter.

On Windows NT Platforms

Open the Control Panel and double-click the System icon. Once you see the System Properties dialog box, select the Environment Variables tab. Add the `SW_SX_MASKFILE` environment variable as described in [On Windows 95/98 Platforms](#).

On Windows XP/2000 Platforms

Open the Control Panel and double-click the System icon. Once you see the System Properties dialog box, select the Advanced tab and click the **Environment Variables** button. Add the `SW_SX_MASKFILE` environment variable as described in [On Windows 95/98 Platforms](#).

On Windows Me Platforms

Click **Start**, choose **Run...**, and then enter `msconfig.exe` and click **OK** to run the `msconfig.exe` program. Click the Environment tab and enter `SW_SX_MASKFILE` as a new environment variable. Make sure that the box before `SW_SX_MASKFILE` is checked to enable the environment variable.

Custom WaveView reads these mask files at initialization time and expands the mask menu in the Eye Configuration dialog with the user-defined masks.

Mask File Example

The following mask example defines an IEEE802.3 mask as shown in [Figure 10](#).

Chapter 11: Eye Diagrams

Adding User-Defined Masks

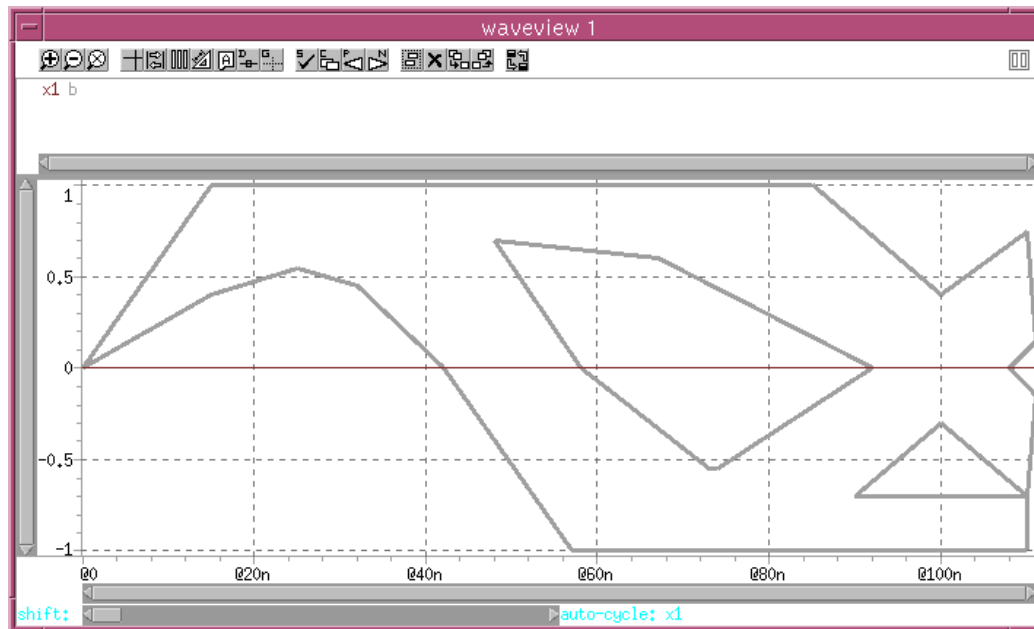


Figure 10 The IEEE802.3 mask

```
mask "IEEE802.3" direct
"A", 0.0n, 0.0
"C", 15.0n, 0.4
"D", 25.0n, 0.55
"E", 32.0n, 0.45
"F", 42.0n, 0.0
"G", 57.0n, -1.0
"T", 110.0n, -1.0
"V", 110.0n, -0.7
"S", 111.0n, -0.15
"R", 108.0n, 0.0
"Q", 111.0n, 0.15
"P", 110.0n, 0.75
"O", 100.0n, 0.4
"N", 85.0n, 1.0
"B", 15.0n, 1.0
"A", 0.0n, 0.0
newpath
"H", 48.0n, 0.7
"I", 67.0n, 0.6
"J", 92.0n, 0.0
"K", 74.0n, -0.55
"L", 73.0n, -0.55
"M", 58.0n, 0.0
"H", 48.0n, 0.7
newpath
"U", 100.0n, -0.3
"W", 90.0n, -0.7
"V", 110.0n, -0.7
"U", 100.0n, -0.3
```

Chapter 11: Eye Diagrams
Adding User-Defined Masks

Using the Equation Builder

This chapter contains information on using the equation builder.

The equation builder in Custom WaveView facilitates multi-file mixed-signal waveform operations and measurement. Choose **Tools > Equation Builder** from the main menu or the **Equation Builder** toolbar button to start the equation builder.

The equation builder can generate output as scalar measurement results, new waveform data, text output tables, or user-defined input equations. You can type input equations into the equation editor or construct them by dragging and dropping from the Output View signal browser.

The following topics are available for the Equation Builder:

- [Adding Signals to the Equation Builder](#)
- [Assigning Aliases to Equations](#)
- [Viewing the Result Stack](#)
- [Defining Macros](#)
- [Modifying Equations](#)
- [Calculating Multi-trace Waveforms](#)
- [Special Note Regarding FFT/DFT](#)
- [Supported Equation Builder Functions](#)

Adding Signals to the Equation Builder

To add a signal to the equation, drag-and-drop the signal from the Output View browser into the equation builder window, or right-click signal in the Output

Chapter 12: Using the Equation Builder

Assigning Aliases to Equations

View browser and choose **Add "SIGNAL" To Equation** from the context menu that appears.

Signals can be also typed into the equation field in the following format, where `file_index` is the zero-based sequential index of the waveform data file which contains the signal 'signal_name':

```
'file_index|signal_name'
```

If `file_index` is omitted, the first matched signal from all waveform files is used.

If an equation is required to find a signal using case-sensitive name search, use the `wave()` function to access the signal. For example:

```
wave('I(Vdd)')
```

The equation builder accepts numbers in scientific or scale format (eg. 1.0e-12, 10n, 0.23m).

Assigning Aliases to Equations

To assign a name to an equation, start the equation with the `NAME=` prefix. For example:

```
POWER='0|I(VDD)' * '0|VDD'
```

The equation can be referred to in subsequent operations using this alias name.

Viewing the Result Stack

The result stack below the equation builder keypad displays results from previous calculations in the order they were entered. By default the result stack displays the first equation on the top of the stack, click the **Reverse** toggle button to reverse this order so the latest result is displayed on the top of the result stack.

To recall a previously entered equation, click the equation in the result stack. Items in the result stack can be deleted or cleared using the **Delete** and the **Clear** buttons. Click the **Save** button to save the result stack (sequence) in the ACE format. Saved results can be restored using the **Load** button, or choosing

File > Run ACE Program... from the main menu. To change the alias name of an equation output, click the **Name** button to modify the name.

Adding .MEASURE Statements to Expressions

To add a .MEASURE statement to an expression:

1. Ensure the Equation Builder is open (**Tools > Equation Builder**).
2. Click the Measure tab.

The .MEASURE options are displayed.

3. Enter information for any needed .MEASURE options.

See the *HSPICE Reference Manual: Commands and Control Options* for further information on the .MEASURE statement.

4. Click the green arrow to save your changes.

Defining Macros

To define a macro:

1. Ensure the Equation Builder is open (**Tools > Equation Builder**).

The Equation Builder opens.

2. Click the Macro tab.

The Macro tab page is displayed.

3. Click the `Input macro definition here text`, and enter the definition for the macro in the text box.

Custom WaveView supports macro definitions with an arbitrary number of input arguments. For example:

```
FNEW(a,b) = a*b - 2 PI=3.1415
```

4. Enter a name for the macro in the Name (Args) column for the macro you are creating.

5. Press **Enter**.

The macro is created.

Macro definitions can be imported or exported by clicking the **Load** and **Save** buttons.

Modifying Equations

To modify an equation, choose **Signal "Name" > Modify** from the Output View context menu. Choose **Signal "Name" > Edit Alias** from the Output View context menu to rename the equation to a new alias name.

Calculating Multi-trace Waveforms

The equation builder supports operations on multi-trace sweep waveform data. Multi-trace waveforms are generated from parametric sweep analysis. An individual trace in a multi-trace waveform is usually associated with a set of parameters.

When applying an equation to a multi-trace waveform, the equation builder operation is automatically repeated to every trace. As a result, multiple waveforms are generated from the operation.

For scalar measurement, a new measure-vs-trace signal is generated. The `parametric()` function can then be applied to the new measure-vs-trace signal to plot the measure result vs a selected parameter. For example:

```
AVG=mean('I(VDD)') parametric(AVG,TEMP)
```

or

```
parametric(mean('I(VDD)') ,TEMP)
```

Special Note Regarding FFT/DFT

Before release 2005.4, the FFT/DFT function in Custom WaveView uses `ejwt` for forward FFT calculation and `e-jwt` for inversed Fourier transform (IFT) calculation. However, this convention differs from the ones used in SPICE simulators. From 2005.4, the complex conjugate has been reversed between the FFT and IFT; for example, `e-jwt` is now used for FFT and `ejwt` for IFT.

For applications that need to combine a transfer function (tf) from an AC simulation to the Custom WaveView FFT result, the following modification is required for 2005.3 and earlier versions:

```
complex(real("tf"), -imag("tf")) * fft(...)
```

This modification is not required with version 2005.4 and later.

Supported Equation Builder Functions

The following equation builder functions and operators are supported:

- [Supported Operators](#)
- [Supported Mathematic Functions](#)
- [Supported RF Functions](#)
- [Supported Logic Operations](#)
- [Supported Waveform Functions](#)
- [Supported Measurement Functions](#)

Supported Operators

The following table summarizes the operators that the equation builder supports.

Operator/Function	Alias	Description
+		Addition operator
-		Subtraction operator
*		Multiplication operator
/		Division operator
^	**	Power operator
?		Ternary operator
%		Integer operator

Mathematic functions can operate on scalars or waveforms. The returned value can be a scalar (or a waveform) if its input argument is a scalar (or signal).

Supported Mathematic Functions

The following table summarizes the supported Mathematic functions in the Equation Builder.

Function	Alias	Description
max(x,y)		Returns the larger value between x and y
min(x,y)		Returns the smaller value between x and y
pwr(x,y)		Returns $x^{**}y$ if $x \geq 0$, $-x^{**}y$ if $x < 0$
sgn(x)		Returns 1 if $x > 0$, -1 if $x < 0$, 0 if $x = 0$
abs(x)		Returns the absolute value of x
int(x)		Returns the rounded integer of x. (int(-1.2) = -1)
sqrt(x)		Returns the square root of x if $x \geq 0$, 0 if $x < 0$
exp(x)		Returns $e^{**}x$
db10(x)		Returns $10 \cdot \log_{10}(x)$
db20(x)		Returns $20 \cdot \log_{10}(x)$
log10(x)		Returns the base-10 logarithm of x, or 0 if $x < 0$
ln(x)		Returns the natural logarithm of x, or 0 if $x < 0$
sin(x)		Sine function
cos(x)		Cosine function
tan(x)		Tangent function
sinh(x)		Hyperbolic sine function
cosh(x)		Hyperbolic cosine function

Function	Alias	Description
$\tanh(x)$		Hyperbolic tangent function
$\text{asin}(x)$		Arc sine function
$\text{acos}(x)$		Arc cosine function
$\text{atan}(x)$		Arc tangent function

Supported RF Functions

The following table summarizes the RF functions in the Equation Builder. Complex mathematic functions can also operate on both scalars and waveforms.

Function	Description
$\text{complex}(v1,v2)$	Returns a complex scalar (or waveform) with $v1$ as the real part and $v2$ as the imaginary part
$\text{real}(v)$	Returns the real part of scalar/signal v
$\text{imag}(v)$	Returns the imaginary part of scalar/signal v , returns 0 if v is a real scalar/signal
$\text{mag}(v)$	Returns the magnitude of scalar/signal v
$\text{phase}(v)$	Returns the phase of scalar/signal v
$\text{rf}(\text{"SP"},p1,p2)$	S-parameter, $p1$ and $p2$ are 1-based port index
$\text{rf}(\text{"ZP"},p1,p2,<z0>)$	Z-parameter, $p1$ and $p2$ are 1-based port index. $z0$ is the port characteristic impedance
$\text{rf}(\text{"YP"},p1,p2,<z0>)$	Y-parameter, $p1$ and $p2$ are 1-based port index. $z0$ is the port characteristic impedance
$\text{rf}(\text{"HP"},p1,p2,<z0>)$	2-port H-parameter, $p1/p2$ 1-based port index. $z0$: port characteristic impedance
$\text{rf}(\text{"VSWR"},p1)$	Voltage SWR at $p1$

Chapter 12: Using the Equation Builder

Supported Equation Builder Functions

Function	Description
rf("ZM",p1)	Z-parameter at port p1 with all other ports matched
rf("ga",zl)	2-port available power gain, zl is load impedance
rf("gt",zs)	2-port transducer power gain, zs is source impedance
rf("gp",zs,zl)	2-port power gain, zs/zl are source/load impedance
rf("KF")	2-port stability factor
rf("B1F")	2-port stability factor B1
rf("gumx")	2-port unilateral max. available power gain
rf("gmax")	2-port maximum available power gain
rf("gmsg")	2-port max. stable power gain
rf(op,args)	Assorted RF functions, Operation type is defined by op. Argument length varies depending on the operation type (see the summary below).

The RF functions support S-parameter result from Spectre, ELDO-RF and ADS.

Supported Logic Operations

The equation builder supports the following logic operations.

Operator	Logic Function	Notes
&	AND	Bitwise or unary
	OR	Bitwise or unary
^	XOR	Bitwise or unary
~	NOT	Bitwise only
>>	SHIFT right	

Operator	Logic Function	Notes
<<	SHIFT left	
~&	Unary NAND	Unary only
~	Unary NOR	Unary only
~^	Unary XNOR	Unary only
'b 'o 'd 'h	Logic values	For example, 16'b0100 a 16-bit binary value

Supported Waveform Functions

The following table summarizes the waveform functions in the equation builder. Waveform functions must operate on waveforms (or derived waveforms). They always return new waveforms.

Function	Description
a2d(s,low,high,<bits>,<timestep>,<xstart>,<xstop>)	Converts the s signal from analog to digital. The bits, timestep, xstart, and xstart options are optional.
average(s)	Returns the running average waveform of signal s
clip(s,x1,x2)	Clips waveform of signal s from x1 to x2. The clip() function adds data points on the clipped boundaries.
crossings(s1,s2)	Returns crossing points between signal s1 and s2.
d2a(s,low,high,<glitchspan>,<timestep>,<xstart>,<xstop>)	Converts the s signal from digital to analog. The glitchspan, timestep, xstart, and xstart options are optional.
derivative(s)	Returns the derivative waveform of signal s. For end points, only two points are used. For non-end points, a three-point scheme is used. The current point is the middle point.

Chapter 12: Using the Equation Builder

Supported Equation Builder Functions

Function	Description
<code>fft(s,x1,x2,n,win)</code>	Returns the FFT result of signal <i>s</i> . Signal <i>s</i> is evenly PWC sampled from <i>x1</i> to <i>x2</i> for <i>n</i> points. The optional <i>win</i> argument specifies the windowing function. Valid window type strings (case insensitive) are: rectangle, Bartlett, parzen, welch, hanning, hamming, Blackman, and blackharris.
<code>fvst(s,y,xstart,xend)</code>	Calculates frequency versus time. Signal <i>s</i> is the input signal, <i>y</i> is the <i>y</i> threshold level, and <i>xstart</i> and <i>xend</i> specify the <i>x</i> range. If both <i>xstart</i> and <i>xend</i> are not specified, the full <i>x</i> range is used.
<code>func(Sy,Sx)</code>	Returns the waveform of <i>Sy</i> versus <i>Sx</i> for the specified <i>Sy</i> and <i>Sx</i> signals.
<code>gdelay(s)</code>	AC domain function, returns the groupdelay waveform of signal <i>s</i> . groupdelay is defined as $d(\text{phase})/d(w)$ where $w=2*\pi*\text{freq}$.
<code>hold_times(s,rs,cp,yt,sigedge,refedge,<xstart>,<xstop>)</code>	Returns a waveform that contains all hold time data points. X values represent when the hold times occur. The following arguments are available: <ul style="list-style-type: none">▪ <i>s</i>: signal data▪ <i>rs</i>: Clock signal▪ <i>cp</i>: Clock period time▪ <i>yt</i>: Y-threshold value▪ <i>sigedge</i>: Data signal edge, valid <i>sigedge</i> string are: "rise", "fall", and "both"▪ <i>refedge</i>: Clock signal edge, valid <i>refedge</i> string are: "rise", "fall", and "both"▪ <i><xstart></i>: (Optional) Specifies the starting time of the measure▪ <i><xstop></i>: (Optional) Specifies the ending time of the measure Note: If the input value for the clock signal period is 0 or smaller than 0, the clock period is calculated using the clock signal.

Function	Description
ift(s,fund,h)	Returns the IFT (inversed Fourier transform) time-domain waveform of the input frequency-domain spectrum s. Argument fund is the fundamental frequency, h is the maximum harmonic index to be included in the IFT computation. (h=0 for DC)
integral(s)	Returns the running integral waveform of signal s.
join(s1,s2)	Returns a joined waveform of s1 and s2. Depending on the starting x-axis value of the two signals, join() always appends the waveform that has greater starting x-axis value to the one with a smaller x-axis starting value. If s1 and s2 overlap, the overlapped portion of the later waveform is removed before joining. Reversed sweep data (x-start > x-stop) from s1 and s2 is reordered into forward sweep in the joined waveform.
median(s,w)	Returns the smoothed waveform of signal s using the median-value method. For every data point in the original signal s, the median-value method sorts the values of the original data point and w points before and after the original point. The median value of the sorted result is then used to replace the original data value. Advantage: no new value that is different from the original data point values is introduced in the smoothing process.
parametric(m,param)	Returns the parametric plots of measure m vs sweeping parameter param. If the optional param argument is not defined or cannot be found in the associated sweeping parameters of m, sequential sweep trace index is used as the plot x-axis.
repeat(s,p,n)	Creates a new waveform by repeating the period (p) of the given signal number of cycle (n) times.
sample(s,x,p,n)	Returns a new waveform that is a sampled waveform of signal s from x at step p for n times

Chapter 12: Using the Equation Builder
Supported Equation Builder Functions

Function	Description
setup_times(s,rs,cp,yt,sigedge,refedge,<xstart>,<xstop>)	<p>Returns a waveform that contains all setup time data points. X values represent when the setup times occur. The following arguments are available:</p> <ul style="list-style-type: none"> ▪ s: signal data ▪ rs: Clock signal ▪ cp: Clock period time ▪ yt: Y-threshold value ▪ sigedge: Data signal edge, valid sigedge string are: "rise", "fall", and "both" ▪ refedge: Clock signal edge, valid refedge string are: "rise", "fall", and "both" ▪ <xstart>: (Optional) Specifies the starting time of the measure ▪ <xstop>: (Optional) Specifies the ending time of the measure <p>Note: If the input value for the clock signal period is 0 or smaller than 0, the clock period is calculated using the clock signal.</p>
smooth(s,w)	Returns the smoothed waveform of the input signal s. for each point of the input signal s at x, the average value from (x-w) to (x+w) is calculated to generated the smoothed output
sweepavg	Returns the average waveform of a multi-trace sweep waveform.
sweepmax	Returns the MAX bound waveform of a multi-trace sweep waveform.
sweepmin	Returns the MIN bound waveform of a multi-trace sweep waveform.
trace(s,parm_cond)	Returns a trace from a multi-trace signal s based on the parameter condition parm_cond (example. trace("sweep_sig","A=1:B=2"))
xscale(s,xf)	Returns a new waveform identical to s with its x-scale multiplied by xf.
xshift(s,xv)	Shifts signal s to the right by xv

Function	Description
xval(s)	Returns the x-axis value of signal s.

Supported Measurement Functions

The following table summarizes the measurement functions in the equation builder. Measure functions must operate on waveforms (or derived waveforms). They always return scalar values.

Function	Description
avgfreq(s,x1,x2)	Returns the average frequency of s from x1 to x2
bw(s,bound)	Returns bandwidth of signal s at which the signal strength drops below bound-db from its DC value (see the figures below).
bw3db(s)	bw3db(s) = bw(s,3)
correlation(s)	Returns the correlation coefficient of the Y values of s vs. the X values of s.
cross(s,v,n,xstart)	Returns the x value of the nth crossing edge over threshold v beginning at x1.
dcgain(s,min_gain)	Returns DC gain at min_gain (see the figures below).
dcgamos(s,output_swing)	Returns DC gain, of signal s, at maximum output swing (see the figures below).
dcswing(s,min_gain)	Returns DC output swing at min_gain (see the figures below).
enb(s,x1,x2,n,fin<,fmax,win,deci>)	Returns the Effective Number of Bits of signal s. The FFT evenly PWC samples s from x1 to x2 for n points. Fin is the input signal frequency. The optional argument fmax sets the band limit, win specifies the windowing function $ENB=(SNR-1.76)/6.02$, and deci specifies the decimation rate.

Chapter 12: Using the Equation Builder
Supported Equation Builder Functions

Function	Description
falltime(s,high,low,xstart)	Returns the time difference of signal s from the high threshold crossing to the low threshold crossing beginning at x1 (see the figures below).
falltrig(s,v,n)	Returns the x value of the nth falling edge over threshold v
gain_m(s)	Returns the gain margin of signal s
gain1_f(s)	Returns the frequency of signal s at which the signal's magnitude is 0db (1)
gbp(s,bound)	Returns gain-bandwidth product of signal s at which the signal strength drops below bound-db from its DC value (see the figures below).
integ(s,x1,x2)	Returns the integral value of signal s from x1 to x2
mean(s,x1,x2)	Returns the mean value of signal s from x1 to x2
overshoot(s,low,high)	Returns the overshoot of signal s, in fraction of (high-low). i.e. $(\max(\text{signal}) - \text{high}) / (\text{high} - \text{low})$ (see the figures below).
paramvalue(p)	Returns the value of parameter p. This is used mainly with multi-trace waveforms to extract the sweeping parameter value. The returned value varies from trace to trace in a multi-trace sweeping signal.
phase_m(s)	Returns the phase margin of signal s
risetime(s,low,high,xstart)	Returns the time difference of signal s from low threshold crossing to high threshold crossing beginning at x1 (see the figures below).
risetrig(s,v,n)	Returns the x value of the nth rising edge over threshold v
rmsval(s,x1,x2)	Returns the RMS value of signal s from x1 to x2
settling_t(signal,xstart,xstop,percentage,<xend>)	Returns the settling time of the signal (see the figures below). When xend is specified, the function calculates the settle time in a sub-window waveform.


Function	Description
<code>slewrates(s,initv,finalv)</code>	Returns the slew rate, of signal <i>s</i> , from threshold <i>initv</i> crossing to threshold <i>finalv</i> crossing (see the figures below).
<code>slope(s,x)</code>	Returns the slope value of signal <i>s</i> at <i>x</i>
<code>sndr(s,x1,x2,n,fin<,fmax,win,deci>)</code>	Returns the signal to noise-and-distortion ratio in db of signal <i>s</i> . The FFT evenly PWC samples <i>s</i> from <i>x1</i> to <i>x2</i> for <i>n</i> points. <i>Fin</i> is the input signal frequency. The optional argument <i>fmax</i> sets the band limit, <i>win</i> specifies the windowing function, and <i>deci</i> specifies the decimation rate.
<code>snr(s,x1,x2,n,fin<,fmax,win,deci>)</code>	Returns the signal-to-noise ratio in db of signal <i>s</i> . The FFT evenly PWC samples <i>s</i> from <i>x1</i> to <i>x2</i> for <i>n</i> points. <i>Fin</i> is the input signal frequency. The optional argument <i>fmax</i> defines the band limit, <i>win</i> specifies the windowing function, and <i>deci</i> specifies the decimation rate.. Valid window type strings (case insensitive) are: rectangle, bartlett, parzen, welch, hanning, hamming, blackman, and blackharris.
<code>snr_f(s,sf,st,nf,nt)</code>	Returns the signal-to-noise ratio in dB of waveform <i>s</i> , which is the resulting waveform of an FFT. The <i>sf</i> and <i>st</i> arguments define the signal range around each harmonic, and the <i>nf</i> and <i>nt</i> arguments define the noise range around each harmonic.
<code>stddev(s)</code>	Returns the standard deviation of the Y values of the input signal <i>s</i> . X value of <i>s</i> is discarded.
<code>thd(s,x1,x2,n,fin<,fmax,win,ish,deci>)</code>	Returns the total harmonic distortion in db of signal <i>s</i> . The FFT evenly PWC samples <i>s</i> from <i>x1</i> to <i>x2</i> for <i>n</i> points. <i>Fin</i> is the input signal frequency. The optional argument <i>fmax</i> sets the band limit, <i>win</i> specifies the windowing function, <i>ish</i> specifies the maximum harmonic index flag, and <i>deci</i> specifies the decimation rate.
<code>variance(s)</code>	Returns the variance of the Y values of the input signal <i>s</i> . X value of <i>s</i> is discarded.

Chapter 12: Using the Equation Builder


Supported Equation Builder Functions

Function	Description
xmax(s)	Returns the maximum value in the x-axis range of a given signal.
xmin(s)	Returns the minimum value in the x-axis range of a given signal.
ymin(s,x1,x2)	Returns the minimum y value of signal s between x1 and x2
ymax(s,x1,x2)	Returns the maximum y value of signal s between x1 and x2
yvalue(s,x)	Returns the y value of signal s at x

The following figures illustrate the implementation of the measurement functions.

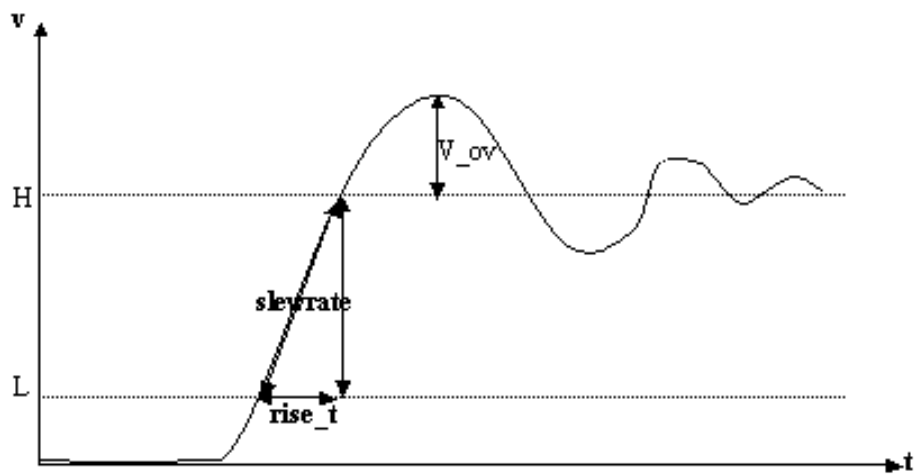


$overshoot(signal, L, H) = V_ov / (H-L)$ $risetime(signal, L, H)$
 $slewrate(signal, L, H)$ $falltime(signal, H, L)$

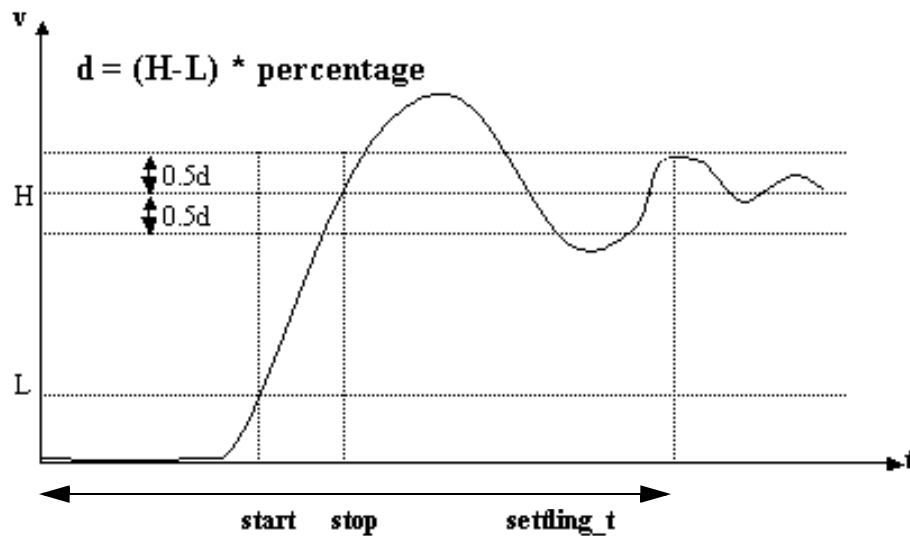

$settling_t(signal, start, stop, percentage)$

Figure 11 Time-domain functions

Chapter 12: Using the Equation Builder
Supported Equation Builder Functions

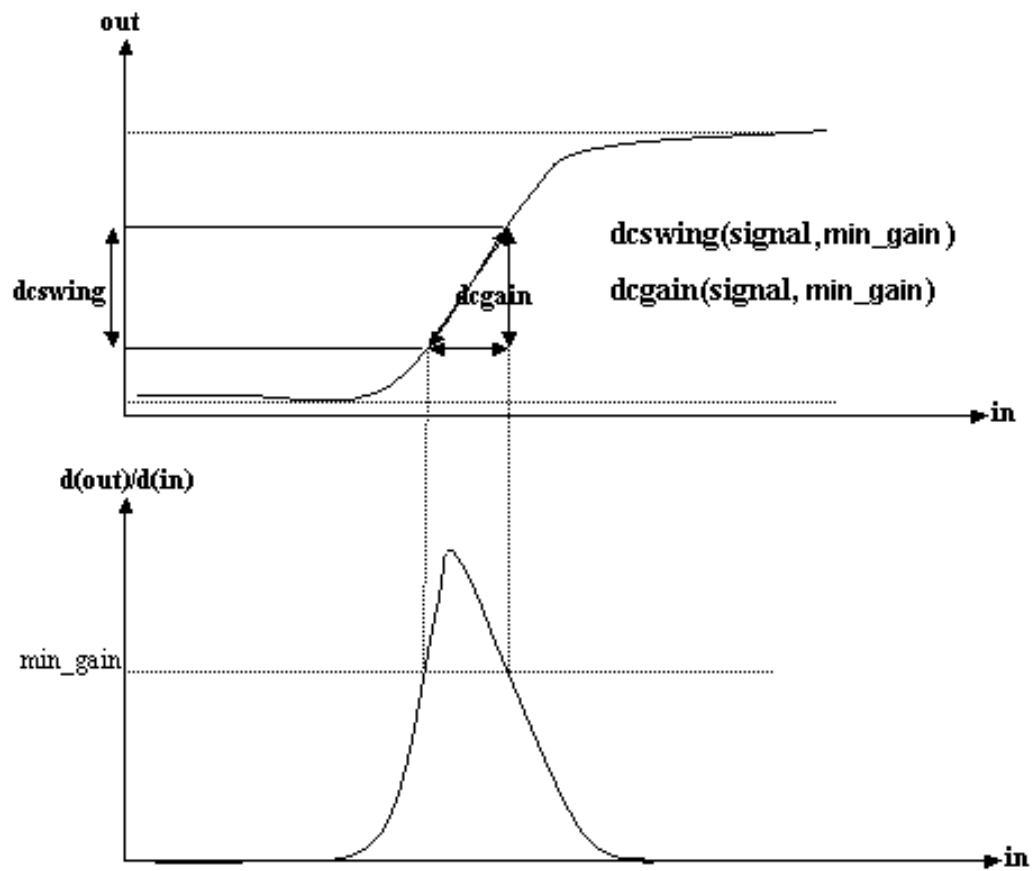

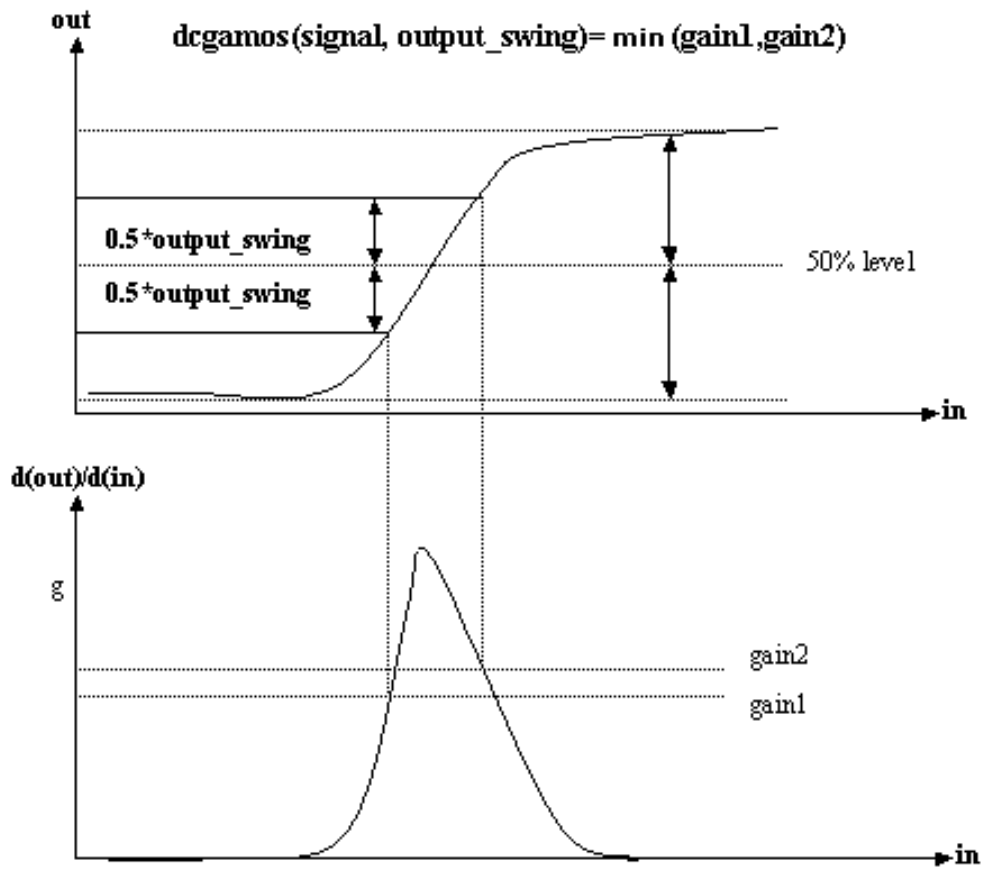


Figure 12 DC functions

Chapter 12: Using the Equation Builder
Supported Equation Builder Functions

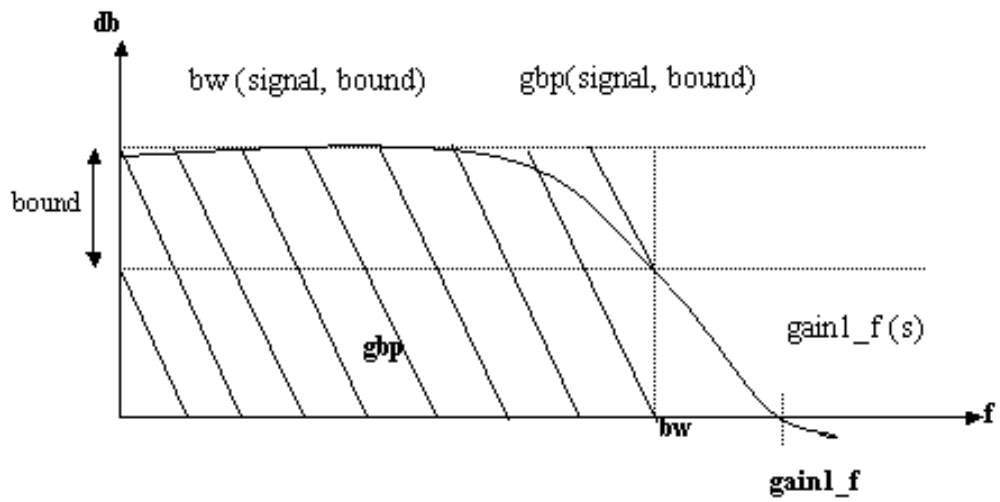


Figure 13 AC functions

Waveform Post Processing

This chapter contains information on post processing waveform data.

Custom WaveView provides the following post-processing functions:

- [FFT/DFT Conversion](#)
- [A to D Conversion](#)
- [D to A Conversion](#)
- [Applying .MEASURE Commands](#)
- [Generating Parametric Plots](#)
- [Reducing Data Points](#)
- [Jitter-vs-Time Tool](#)
- [Exporting Waveform Data](#)
- [Comparing Waveforms](#)
- [Converting Signals to the Time Domain](#)

All derived data are stored in a special type of waveform data file, which is added to the file list in the Output View hierarchy browser.

FFT/DFT Conversion

FFT and DFT operations are used to convert time-domain signals into their frequency-domain spectrum representation. The FFT/DFT operations can be performed on waveforms in the X-Y panels only.

Custom WaveView supports FFT/DFT operation using various windowing functions. The FFT/DFT dialog box can be invoked by choosing **Tools > FFT/**

DFT Conversion from the main menu or the **FFT/DFT** toolbar button. The FFT/DFT dialog window accepts input parameters and applies DFT/FFT to all signals in selected panels of the active waveview. If no panel is selected in the active waveview, all signals in the active waveview become the FFT/DFT target. If the active waveview has only one panel, the FFT/DFT operation is by default applied to all waveforms in the panel. If the active waveview has more than one panel, you need to select the FFT target panels.

The FFT/DFT algorithm requires the following parameters:

- The number of sample points: Determines the number of time-domain sample points used for FFT/DFT operation. This number is internally rounded to the next power of two that is greater than the user input for FFT. A slow run time warning is displayed for DFT operations over 1024 points.

OR

The sampling frequency: The frequency of the sampling signal for the FFT/DFT operation. The sampling rate must be greater than 1 hz.

Note: If you have a defined time range, you need to specify either the number points or sampling rate. If you do not have a time range specified, the number of points and the sampling rate are used to determine the start and stop times.

- The sampling window start time: Determines the start time of the time-domain window for FFT/DFT conversion.
- The sampling window end time: Determines the end time of the time-domain window for FFT/DFT conversion. The specified window end time must be greater than its start time.

You must choose which three input parameters are in use. Deselect an input parameter using the toggle switch in front of the parameter. If the **Enable zero-padding after stop time** option is selected, all four parameters need to be entered, the sampling stop time is adjusted based on the other three input parameters. For example:

```
window_end_time < window_start_time + number_of_samples *  
(1/sampling_frequency)
```

Evenly spaced zeros are padded between the user specified end time and the one calculated by the waveview.

Click the **Check** button to check the input parameters before a FFT/DFT operation. It automatically fills the unspecific value and modifies the end time if

necessary when four sampling parameters are specified. Use the **Save** and **Load** buttons to save and load FFT input parameters respectively.

To enter the start and stop time based on the frequency of the input signal, enter the input signal frequency in the Input Signal Frequency field and click **Apply** to calculate the start/stop time.

Select the **Signed value** option to sample a logic signal using signed bus value. FFT tool uses PWC sampling if the FFT target is a PWC analog waveform or logic waveform. PWL sampling is used if the target is a PWL analog waveform.

Window functions can be applied for the FFT/DFT operation. If a window function is selected, the waveform data are multiplied with the selected windowing function before the FFT/DFT operation. No window function is used if the **Rectangle** window type is selected. The gaussian and the kaiser-bessel window types require the additional **Alpha** parameter.

The FFT/DFT output can be normalized against the waveform DC component or a user-defined value in Magnitude Normalization. All harmonic components are displayed in reference to the reference.

If the **Suppress DC before FFT/DFT** option is selected, the dc component is excluded from the target waveforms in the FFT/DFT operation. This is to minimize the error introduced by those signal with large DC component and very small AC magnitudes.

The Output Frequency range settings specify the range of FFT/DFT spectrums for display or text output. The fmin and fmax value define the output spectrum range of interest. Specifying **frequency of interest** only displays or outputs the multiple of this frequency harmonic; all other harmonics are omitted.

The FFT/DFT results can be displayed in a regular X-Y panel or in a spectrum panel. User can also send the results to either a text window or text file for further processing. Y-axis scale is automatically set as db for the FFT/DFT plot.

Select the **Display Sampled Waveform** option to display the time-domain sampled waveform, including the effect of the windowing function.

The FFT result can be displayed in a regular X-Y panel, or a special spectrum panel, or into text window or file. See [Viewing the Spectrum Panel](#) for more information.

Viewing the Spectrum Panel

The spectrum panel displays spectrum magnitude of harmonic components at different frequencies. Choose **Plot Complex** from the context menu to change the value to the phase, real, or imaginary part of the complex data.

The Spectrum panel uses bar chart by default to display waveforms. You can change it to a line chart by choosing **Configure Spectrum** from the panel context menu.

Cursors in the Spectrum panel report waveform values based on the current complex plot mode. Instead of using piece-wise-linear (PWL) interpolation, the piece-wise-constant (PWC) value is used within each spectrum interval.

Calculating SNR/THD Using FFT

To calculate and display the total harmonic distortion (THD), signal to noise ratio (SNR), signal to noise and distortion ratio (SNDR) and effective number of bits (ENB) of the target signals, select the **Evaluate SNR/THD/SNDR/ENB** option. The result is displayed in the text window or the text output file.

For SNR/THD/SNDR/ENOB calculation, windowing function is usually used if the sample range does not cover integer cycles of the input signal. However, the time-domain windowing functions also spread the original harmonics of the input signal spectrum into multiple spectrum components. To accommodate the spreading effect, an additional parameter (**Bin Size**) is required to describe how many spectral components, on each side of a harmonic frequency, should be included as the power of the harmonic.

Specify the cut-off frequency for the noise components in the Band Limit field. This value affects the SNR/SNDR/ENOB calculation. Set to 0 if no band limit is used.

Note: To include counting floor components when calculating SNR/SNDR, enable the **Count floor noise components in SNR/SNDR calculation** option, which is available in the Preferences (**Config > Preferences > Threshold Tab**).

FFT of Complex Signals

If the input signal of FFT/DFT is a complex signal, non-symmetric spectrum is generated. The **Suppress DC before FFT/DFT** option is ignored if the input signal is in complex values. To prepare a complex input signal from transient analysis (for RF-mixer applications), use the `complex()` equation builder function to combine two real signals into a complex signal.

Changing the FFT Axes Scale

To change the scale of the X- and Y-axis, choose **Config > Preferences** from the main menu bar, and click the Panel tab. Select the desired scales in the Default FFT X/Y Scale section, and click **OK**. These preferences are saved in the `.spxrc` preference file.

A to D Conversion

Analog waveforms can be converted to logic waveforms based on user-specified threshold values. The conversion procedure can be applied only to waveforms in the X-Y panels.

If the active waveview has only one panel, the A/D conversion operation is by default applied to all waveforms in this panel. If the active waveview has more than one panel, you need to select panels for the A/D conversion operation.

Choose **Tools > A to D Conversion** to invoke the A/D conversion operation or click the **A to D** toolbar button. The A/D Conversion Parameters dialog opens and prompts you to accept the specified parameters for conversion.

This section contains information on the following topics:

- [Single-Bit A/D Conversion](#)
- [Multi-Bit A/D Conversion](#)

Single-Bit A/D Conversion

Analog waveforms can be converted to single-bit logic waveforms in one of two ways:

- With a single threshold defined, data points above the threshold level are converted to logic H, and those below to logic L.
- With two thresholds defined, all points above the high threshold level are converted to logic H. While all points below the low threshold level are converted to logic L. All other points in between are converted to logic X.

The converted waveforms are displayed in logic panels. Since logic panels are allowed only in vertical waveviews, a new vertical waveview is automatically created if the current active waveview is in horizontal mode.

The two-threshold conversion requires that a signal stays long enough in the X region (region between the high and low thresholds) in order to generate an X state in the converted logic waveform. The minimum duration requirement is defined by the rise (fall) slew if the signal level moves from below (above) the low (high) threshold level. The rise and fall slews are defined using the `d2a_rise_slew` and `d2a_fall_slew` configuration options.


The default settings for the A to D operation can be specified in **Preference Settings > Conversion**.

Multi-Bit A/D Conversion


With multi-bit A/D conversion, analog waveforms are converted to multi-bit logic signals. The quantization thresholds are determined automatically based on the number of bits and user-specified lower/upper bounds.

Two quantization threshold schemes are available:

- $Y = (\text{upper_bound} - \text{lower_bound}) / (2^{\text{bit_count}})$: Maintains asymmetric partitions as $(Y + Y/2)$ for the largest codeword and $Y/2$ for the smallest codeword.

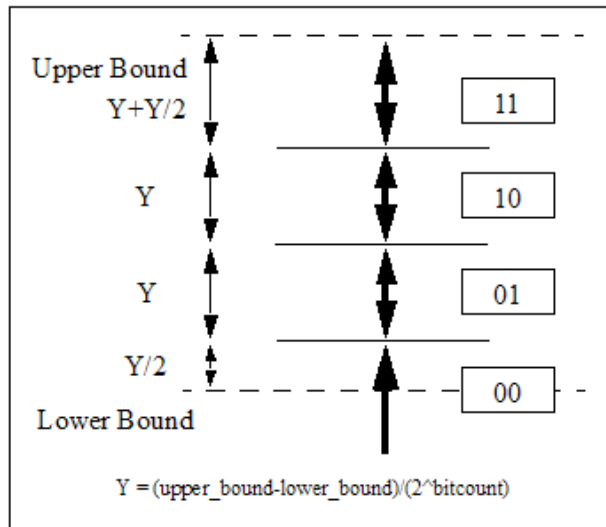

- $Y = (\text{upper_bound} - \text{lower_bound}) / (2^{\text{bit_count} - 1})$: Maintains a symmetric partition as $Y/2$ for both the largest and smallest codewords. This option is selected by default.

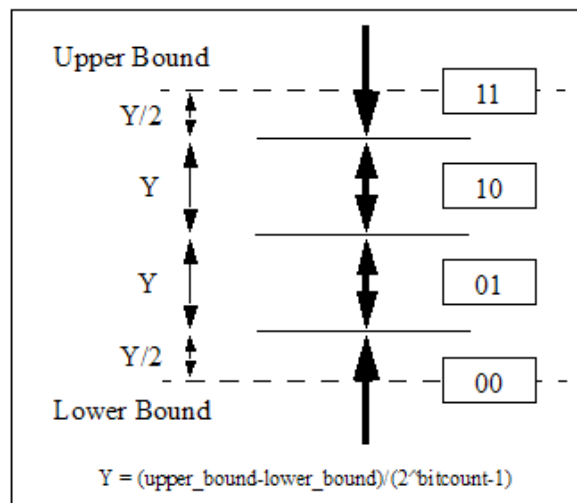

D to A Conversion

Logic waveforms can be converted into analog waveforms based on user-specified analog levels. D/A conversion can be applied only to waveforms in the logic panels.

If the active waveview has only one panel, the D/A conversion operation is by default applied to all waveforms in this panel. If the active waveview has more than one panel, you need to select panels for the D/A conversion operation.

Choose **Tools > D to A Conversion** from the main menu to invoke the D/A conversion operation or click the **D to A** toolbar button. The D/A Conversion Parameters dialog appears to accept parameters for the conversion operation.

Both single-bit and multi-bit D/A conversions are supported. Analog levels for multi-bit D/A conversion are determined based on rules. Enter the analog voltage levels for the low and high logic states.

There are two modes for D2A sampling: fixed rate sampling and value transition sampling. With the value transition sampling, the D-to-A conversion is completed only at the time when the input digital signal changes its value.

X and Z states can be converted to low or high voltage levels based on user preferences.

Click the **Extend to Full Display Range** button to extend the x-axis range to the current full x-axis display range for each converted analog waveforms, even if the original logic data has an x-axis range that is shorter than the full range.

Rising and falling slews of the converted analog waveforms can be specified in **Preference Settings > Conversion**, or using the **d2a_rise_slew** and **d2a_fall_slew** configuration options.

Applying .MEASURE Commands

Custom WaveView allows users to apply the `.MEASURE` statements in a Spice netlist, or apply a set of `.MEASURE` commands extracted from the netlist (the extraction capability is available in CustomExplorer only), to the simulation output file.

By applying the .MEASURE commands, WaveView users can:

- Take additional measurements on the target signals available in the simulation files without re-running simulation.
- Re-apply .MEASURE to different simulation output files.
- Speed up simulation job by running simulation without the .MEASURE statements in the input netlist. (Simulation usually takes longer and uses more memory when the netlist contains .MEASURE statements.)

The following HSPICE .MEASURE commands are supported:

- .MEASURE <TRAN|AC|DC> meas_name
+ AVG|RMS|PP|MIN|MAX|INTEG signal
+ <FROM=start_time TO=start_time>
- .MEASURE <TRAN|AC|DC>meas_name
+ TRIG signal_1 VAL=value TD=delay RISE|FALL|CROSS=index
+ TARG signal_2 VAL=value TD=delay RISE|FALL|CROSS=index
- .MEASURE <TRAN|AC|DC> meas_name
+ WHEN signal_1 = signal_2 TD=delay
+ RISE|FALL|CROSS=index
- .MEASURE <TRAN|AC|DC> meas_name
+ WHEN signal_1 = value TD=delay RISE|FALL|CROSS=index
- .MEASURE <TRAN|AC|DC> meas_name FIND signal_3
+ WHEN signal_1 = signal_2 TD=delay
+ RISE|FALL|CROSS=index
- .MEASURE <TRAN|AC|DC> meas_name FIND signal_3
+ WHEN signal_1 = value TD=delay RISE|FALL|CROSS=index
- .MEASURE <TRAN|AC|DC> meas_name FIND signal_1
+ AT=time
- .MEASURE <TRAN|AC|DC> meas_name DERIVATIVE signal_3
+ WHEN signal_1 = signal_2 TD=delay
+ RISE|FALL|CROSS=index
- .MEASURE <TRAN|AC|DC> meas_name DERIVATIVE signal_3
+ WHEN signal_1 = value TD=delay RISE|FALL|CROSS=index
- .MEASURE <TRAN|AC|DC> meas_name DERIVATIVE signal_1
+ AT=time
- .MEASURE <TRAN|AC|DC> meas_name param('equation')

Chapter 13: Waveform Post Processing

Reducing Data Points

The signals in the `.MEASURE` can be (1) a voltage signal such as `V(N1)` (2) a current signal such as `I1(R1)` or (3) an equation, such as `PAR('V(1) + 2*V(2)')`

`.MEASURE` statements in a netlist can be applied to a waveform file by choosing **Apply Measure** from the OutputView context menu.

In the Apply Measure dialog box, enter values for the **Measure Command File** and **Measurement Result** text boxes for the measurement results. The **Measure Command File** can be a complete netlist with embedded `.MEASURE` statements, or a netlist file that has `.MEASURE` statements only without the actual circuit part.

Note: Since the `.MEASURE` command input file is processed as a SPICE netlist file, the first line of the input file is always ignored. Any `.MEASURE` command in the first line is ignored.

Alternatively, the HSPICE Measurement Tool can be used to perform the same measurement tasks interactively. Choose **Tools > HSPICE Measure Tool** from the main menu or **HSPICE Measure Tool** from the wdf context menu to invoke the HSPICE Measurement dialog window.

Reducing Data Points

Piecewise-linear waveforms often contain redundant data points. The data point reduction function allows users to remove redundant data points based on user-specified error tolerance. The same data reduction scheme is also used in WDF data reduction.

If the active waveview has only one panel, the reduction operation is by default applied to all waveforms in this panel. If the active waveview has more than one panel, you need to first select panels for the reduction operation.

Choose **Tools > Data Reduction** from the main menu to invoke the data point reduction operation or click the **Data Reduction** button in the toolbar. The Data Reduction Parameters dialog appears, and the parameters are acquired for the data reduction operation.

Click **Ok** to start the data reduction operation. Waveforms with reduced data points are created in new panels in the same waveview.

Generating Parametric Plots

The following methods for generating parametric plots are available:

- Using the cursor in a 2D-sweep panel to plot the waveform value vs one of the sweeping parameters. Choose **Plot Y vs X2** from the cursor context menu. To select a sweeping parameter, right click the waveform file of the signal in the Output View and choose **X2 Parameter**. This method is limited to displaying the waveform value only.
- Use the `parametric()` function in the equation builder. The `parametric()` function takes two arguments. The first argument must be a measurement of a multi-trace waveform; the second argument is the sweeping parameter to be used as the x-axis in the parametric plot (for example, `parametric(mean("v(out)"), "TEMP")`). If the second argument is omitted, the default sweeping parameter is used.
- Use the built-in HSPICE parametric plot tool. The parametric tool only accepts HSPICE .MEASURE result files (.mtx/.msx/.max) as the input.

Built-in Parametric Tool for HSPICE .ALTER Simulations

Custom WaveView supports parametric plots directly from HSPICE measurement results files (.mt0/.ms0/.ma0 files). Choose **Tools > Parametric Plot...** from the main menu to invoke the tool.

The Parametric Plot tool can be used to generate scatter plot with measure result annotation. Select the X/Y parameters, the **Scatter Plot** option, and click **Plot** to create the scatter plot.

Generic parametric plot functions can be realized using the `parametric()` function in the equation builder.

Jitter-vs-Time Tool

The built-in Jitter-vs-Time tool can be used to analyze clock jitter between any logic and analog target signal with respect to a reference signal. The reference signal can be an analog or logic signal from simulation output, or an idea signal defined using the width/period/delay parameters. The jitter can be measure

against the rise and fall edges of a reference signal. To invoke the tool, choose **Tools > Jitter vs. Time** from the main menu.

Selecting Reference Signals

The reference signal can be selected from the following sources:

- **User-defined Ideal Clock:** an ideal clock signal defined by delay, period, and width.
- **A Digital Signal:** a digital simulation output waveform.
- **An Analog Signal:** an analog simulation output waveform.

The Digital or Analog Signal field requires an external waveform that can be specified in the External Signal field. Drag and drop the external signal from the output view browser to the input field. If an analog reference signal is used, threshold value for the rise and fall edges also need to be specified.

If the **Display Reference Clock Signal** option is selected, the reference signal is shown together with the jitter-vs-time output waveform.

Specifying the Target Signal

The target signal can be either a digital or an analog simulation output waveform. The analog target waveform requires the rise/fall threshold values to be specified.

Selecting Reference Edges

User can select the rise, fall or both edges of the reference signal as the reference edge for the jitter evaluation.

Target Signal Edges

The following options are available:

- **Same as Reference:** Finds rise-to-rise and fall-to-fall jitters.
- **Rise:** Finds jitter from reference edge to only the rising target edge.

- **Fall:** Finds jitter from reference edge to only the falling target edge.
- **Cross:** Finds jitter from reference edge to the next target switching edge (rise or fall).

The Target Signal Edge options are enabled only if the Jitter Type option is set to **Trigger Time**.

Jitter Types

The Jitter vs Time tool can evaluate jitter for the following types:

- **Trigger Time:** Measures the edge differences between trigger edge and the signal edge.
- **Pulse Width:** Measures the pulse differences between the reference signal and the target signal at the reference edge.
- **Period Width:** Measures the period differences between the reference signal and the target signal at the reference edge.

By default, WaveView searches for target signal edges in both directions from a reference switch edge. Select the **Always Search Forward for Target Edge** option to force the target search in the forward direction only.

The default target edge search range is half of the clock period at the current reference clock cycle. To limit the maximum search time range, enter the limit in the Max. Target Edge Search Range field.

Jitter Output Options

The Jitter vs Time result is displayed in a linear X-Y panel. PWL waveforms and bar charts are the available plot types. The jitter value sign can be selected between forward-positive or backward-positive. In the forward positive mode, jitter values are positive if the target edge appears later than the reference edge.

Exporting Waveform Data

To export waveform data, choose **File > Export Waveform Data** from the main menu bar and select a file in which to save the waveform data. Confirm your output file path to open the Waveform Export Parameters dialog box.

Waveform data in the active waveview can be saved using several different formats. The following formats are supported:

Format	Description
Tabulated data list	You can save analog waveforms using the tabulated format. Logic waveforms cannot be saved using the tabulated format.
SPICE piecewise-linear (PWL) source	You can save both analog and logic waveforms using the SPICE PWL format.
WDF format	Synopsys WDF compressed format.
VCD	VCD file with analog support.
M-File	Matlab file.

By default, Custom WaveView only exports waveforms in selected panels using the X-axis step of the very first signal. Click **Export Waveforms in All Panels** to export waveforms in all panels.

For tabulated output format, click **Use Fixed Step** and enter the step size to export waveforms in fixed user-defined step. The **Waveforms/Page** option controls the number of waveforms per row. Selecting the **Suppress X-axis column** option hides the x-axis in the table output. Selecting the **Hex Logic Values** option changes the binary logic output values to hexadecimal values.

Comparing Waveforms

The following sections are included:

- [Comparing Waveforms in Batch Mode](#)
- [Creating a Waveform Compare Control File](#)

- [Adding Comments](#)
- [Defining Parameters](#)
- [Controlling X- and Z-Level Constraints](#)
- [Defining Aliases](#)
- [Defining Rules](#)
- [Saving Waveform Comparison Results](#)

Comparing Waveforms in Batch Mode

Note: This function requires a full CustomExplorer license.

The batch mode sample-based waveform compare function compares mixed-signal waveforms between multiple target waveform files and a golden master waveform file. The comparison rules are defined in a check rule file that is used to control the comparison process.

To compare waveforms in batch mode using the Waveform Compare utility:

1. Review the general rules that apply when comparing waveforms.
See [Sampling and Converting Waveform Data](#) for more information.
2. Create a check rule file if you want to compare signals and generate reports of any differences that exist.

See [Creating a Waveform Compare Control File](#) for more information.

3. Use the following syntax at the command line to start a comparison:

```
wv -compare rule_file [out_file] [-x sx_file]
```

The `out_file` is the output file name. If you do not specify a name, the comparison result is displayed directly in the standard output. The `-x sx_file` syntax generates a Custom WaveView session file, which you can load into Custom WaveView to view the comparison results.

During comparison, if any errors occur due to unlocated or mismatched signals, a list of the mismatched signals are saved in a `mismatch.txt` file.

Sampling and Converting Waveform Data

The following general rules apply when comparing waveforms:

- If a logic bus signal has different width (number of bits) between the master and the target file, only the less significant bits of the longer bus value are compared with the shorter bus value.
- Multiple signals are compared sequentially during the comparison process.
- Analog waveforms are compared based on the final V/I tolerance that is evaluated from user-defined tolerance values as:
$$\text{tolerance} = \text{MAX}(\text{abstol}, \text{reltol} * \text{master_waveform_value})$$
- A signal must exist in both the master and one of the target files for the comparison to take place.
- If one of the signals from the master file and the target file is a logic signal, logic comparison is used to compare the two signals.
- For analog waveforms, voltage tolerance is used if master and target signals are not both current type.

Creating a Waveform Compare Control File

Before the waveforms are compared, create a check rule file to compare signals and generate reports of any differences that exist.

The check rule file must include the following items:

- Path to the master file and the target files.
- Names of signals to compare and name mapping information if the signal names are different between the master file and the target files.
- Start, stop, delay, and step values for the comparison to take place.

Adding Comments

When adding comments, ensure each line begins with a semicolon (;).

Defining Parameters

You can define parameters to control the waveform compare and checks. Any parameters defined outside of the Rule and Check sections are treated as global parameters. Any locally defined parameters inside of the Rule and Check sections supersede defined global parameters.

The following parameters are available:

- [a2d_threshold](#)
- [bus](#)
- [delay](#)
- [file_path](#)
- [ignorex](#)
- [ignorez](#)
- [map](#)
- [mapfile, map_hier](#)
- [match_type](#)
- [mean_range](#)
- [mean_step](#)
- [mean_tol](#)
- [ref_clock](#)
- [report_style](#)
- [report_type](#)
- [signal](#)
- [start, stop, step](#)
- [t_tol](#)
- [v_abstol, i_abstol, v_reltol, i_reltol](#)
- [when](#)
- [x_absmgn](#)
- [x_chkrange](#)

a2d_threshold

The a2d_threshold value applies to both the master and the target files. It describes the voltage threshold value for converting an analog signal to a digital signal. The value can be redefined in the master or target file section. The default value is 1.5. Syntax for the a2d_threshold value is:

```
a2d_threshold value
```

bus

The bus statement describes how a master logic bus value should be interpreted when compared to an analog target signal. The keywords used in the bus statement are (1) scale: specifies the scaling factor from the decimal bus value (2) signed/unsigned: specifies if the bus value is signed or unsigned. (3) pwc/pwl: specifies if PWC or PWL interpolation should be used for value in between two bus value transitions. The syntax of the bus statement is:

```
bus bus_signal_name scale=value unsigned pwc
```

delay

The delay value applies to both the master and the target files. It describes the shift amount of x-axis value the user prefers to add to the original waveforms. The value can be redefined in the master or target file section. Positive delay value implies shifting the waveform toward the positive x-axis direction. The default value is zero. Syntax for the delay parameter is:

```
delay value
```

file_path

The master file section must start with the master statement. The syntax for the master statement is:

```
master file_path
```

ignorex

The ignorex statement ignores x states during comparison.

ignorez

The ignorez statement ignores z states during comparison.

map

The map command is required when the compared signal name(s) differ between the master and target file(s). One map statement is required for each mapped signal. The syntax of the map statement is:

```
map master_signal_name target_signal_name
```

mapfile, map_hier

Note: The mapfile statement can only be specified in the Check section.

The mapfile statement specifies a separate map file, which you can create to define master and target signals for comparison. The syntax of the mapfile statement is:

```
mapfile <mapfile_name>
```

The following example is a sample map file:

```
;mapfile1
;Master_SigName      Target_SigName
node_1                node_2
node_3
node_5                node_5
node_6                node_7
```

In this example, node_1 and node_2, as well as node_6 and node_7, are compared as the Master Signal and Target Signal for each pair, respectively. The node_3 and node_5 are compared as the same name.

The map_hier statement maps the hierarchy of the defined signals. The syntax of the map_hier statement is:

```
map_hier <master_signal_hier> <target_signal_hier>
<master_signal_leaf_name> [<target_signal_leaf_name>]
```

match_type

The match_type statement forces target signals to be the same type as the master signals.

mean_range

The `mean_range` statement performs a mean comparison for a derived set of waveforms based on the defined starting and stopping range values. The syntax for the `mean_range` statement is:

```
mean_range start stop
```

When a mean check is enabled, the mean version waveforms are first created for the master and target signals. Using the mean check does not affect the time points used for the check. If the time value falls in one of the `mean_range` periods, the mean waveforms are used instead of the original waveforms. Multiple `mean_range` statements can exist in a single check section.

mean_step

The `mean_step` statement samples waveforms and performs mean comparisons based on the defined step value. The syntax for the `mean_step` statement is:

```
mean_step step_value
```

The default value is 1ns. Mean comparisons are enabled as long as the `mean_tol` statement appears in the rule section.

mean_tol

The `mean_tol` statement performs a mean comparison based on the defined tolerance value. The syntax for the `mean_tol` statement is:

```
mean_tol value
```

The default value is 0.01.

ref_clock

A reference trigger clock signal can be used to determine the x-axis locations the comparison takes place. Two statements are required to define the reference trigger clock. Their syntax are:

```
ref_clock signal_name rise|fall|crossref_threshold value
```

The reference clock signal can be a logic or analog signal. For an analog reference signal, the `ref_threshold` value also needs to be defined. If the `ref_threshold` statement is omitted, the `a2d_threshold` value is used as the default. If `ref_clock` is defined in the rule file, the `stop/start/step` values are ignored.

report_style

The `report_style` statement defines the type of comparison report to produce. The syntax for the `report_style` statement is:

```
report_style value
```

For example, including the following line creates a report you can use with NanoSim:

```
report_style nanosim
```

report_type

The `report_type` statement defines what information is included in a comparison report. The syntax for the `report_type` statement is:

```
report_type value
```

You can specify the `value` as either `point` or `range`.

signal

The `signal` statement defines the signal to be compared. More signals can be added in the master file section. Wildcards (* and ?) can be used in the name pattern. If the `signal` statement is omitted, all signals are compared. The syntax for the `signal` statement is:

```
signal name1 name2 ...
```

start, stop, step

These values apply to the comparison process. They can be redefined in the master file section. The default values are 0. Syntax for these values are:

```
start | stop | step value
```

t_tol

The `t_tol` value specifies the point just before the continuous violation time range is exceeded. If the continuous violation time range is larger than `t_tol`, then the violation is reported; otherwise, it is considered as a passing result.

The `t_tol` setting is only used when comparing one master versus one target, and analog to analog comparison only. Setting `t_tol` to zero disables glitch filtering. The syntax for the `t_tol` statement is:

```
t_tol value
```

v_abstol, i_abstol, v_reltol, i_reltol

The v_abstol, i_abstol, v_reltol, i_reltol values define the error tolerances for comparing analog waveforms. The values can be redefined in the target file section. The default values are:

```
v_abstol = 50uv, i_abstol = 1nA, v_reltol = 0.001,  
i_reltol = 0.01
```

The syntax for the settings the tolerance values are:

```
v_abstol | i_abstol | v_reltol | i_reltol value
```

The final error tolerance used internally for waveform comparison is evaluated using the following equation

```
MAX (ABS (abstol) , reltol*ABS (master_v) )
```

when

The when statement executes when the specified condition is met. If when is used in the global or rule section, it applies to the master file. If the specified signal is not located in the master file, CustomExplorer tries to find the signal in the target file. If when is used in the check section, it applies to the target file.

Only simple conditions (!= and ==) are supported, and only one signal can be specified. For example:

```
when "v(b) != 1"
```

Arbitrary when statements are supported for logic signals.

x_absmgn

The x_absmgn value specifies the X axis tolerance margin and is used to compare analog signals. The syntax for the x_absmgn statement is:

```
x_absmgn value
```

The value without a plus (+) or minus (-) sign specifies bidirectional tolerance. Adding a plus or minus sign specifies a unidirectional tolerance (x_absmgn +5n or x_absmgn -3n, for example).

x_chkrange

The x_chkrange statement performs logic transition waveform comparisons based on the value, which searches for a signal transition within the defined window. The syntax for the x_chkrange statement is:

`x_chkrange` value

The value without a plus (+) or minus (-) sign specifies bidirectional checking. Adding a plus or minus sign specifies unidirectional checking (`x_chkrange +5n` or `x_chkrange -5n`, for example).

Note: The `x_chkrange` statement can be used in both rule and check sections when comparing digital signal transitions.

Controlling X- and Z-Level Constraints

X- and Z-level constraints change depending on the way you use some waveform comparison statements.

For example, when you use `use_sim_step` and `x_chkrange`, the following X- and Z-level constraints are applied:

- The X and Z states remain as is and are compared. This is the default behavior.

The default X and Z states change in the following manner if you use the following commands as described:

- `setx 0`: Sets X-states to “Low” for comparison.
- `setx -1`: Sets X-states to the previously known state for comparison.
- `setx 1`: Sets X-states to “HIGH” for comparison.
- `setz 0`: Sets Z-states to “Low” for comparison.
- `setz -1`: Sets Z-states to the previously known state for comparison.
- `setz 1`: Sets Z-states to “HIGH” for comparison.

Note: Using the `ignorex` or `ignorez` statements with the `x_chkrange` statement could produce unwanted results.

Defining Aliases

Aliases define values that can be later referenced in the Rule and the Check sections of the control file. For example, you can define the following aliases to substitute a reference string in a control file:

```
alias small_step "step=200ps"  
alias medium_step "step=.5ns"  
alias initial_period "start=0ns, stop=5ns"  
alias stable_period "start=5ns, stop=16n"  
alias end_period "start=16ns, stop=20n"
```

Defining Rules

The Rule section of the Control File defines rules that you can use in the Check section to perform the actual checks. Multiple rules can be defined in the Rule section, and each rule must be defined using the following syntax format:

```
rule rule_name begin  
    parm1=parm1_value  
    parm2=parm2_value  
end
```

The waveform compare function samples and compares waveform data at the steps you define. Each comparison rule can contain one master file and comparison parameters. You can specify absolute and relative tolerances for voltage or current signals, respectively. Voltage tolerances are used if the signal type is unknown. Warnings are issued if the difference between the master signal and the target signal exceeds the following condition:

$$\text{abstol} + \text{reltol} * \text{master_signal}$$

To use a “one-direction” relative tolerance for comparison, add a plus (+) or minus (-) sign in front of the relative tolerance value.

You can define the following parameters in the Rule section:

Type of check represented by a keyword. The following checks are supported:

- Sample-based waveform compare function.
See for [Checking Waveforms](#) more information.
- Waveform monotonicity check.
See [Checking Waveform Monotonicity](#) for more information.
- Waveform absolute bound check.
See [Checking Waveform Bounds](#) for more information.
- Waveform envelop check.
See [Checking Waveform Monotonicity](#) for more information.

- Comparison sampling step (overwrites global definition)
 - Master file definition
 - Check parameters such as tolerances and boundaries.
For example, `v_abstol`, `v_reltol`, `i_abstol`, and `i_reltol` overwrites the defaults and Global definitions.
- Note:** Aliases can be used in comparison sampling steps and tolerance or boundary check parameters.

Checking Waveforms

The Waveform Compare Utility checks the rules specified in the check section sequentially on the specified target(s), time range, and signal list. Checking parameters can be redefined to and apply to the subsequent checks in the check section. The check is performed sequentially on all rules specified in the Check section and reports the violations for each check.

You can specify the following parameters in the Check section:

- Target file(s).
Multiple target files can be delimited by spaces or commas. For example:

```
target "t1.dat t2.dat"
```
- Check start/stop time (x-axis) range.
The `time_range` statement defines the check start and stop times.
- Target signals.
Signal names can contain the asterisk (*) or question mark (?) wildcards. For example:

```
signal "*"
```
- The rule to use.
A predefined rule must be specified for each check. For example:

```
rule "initial_v_check"
```

Waveform Check Example

The following is a sample waveform check:

```
check begin
    ;; value can be a pre-defined alias
    time_range "0ns, 6ns"
    ;; the rule must have been defined in the rule section
    rule "initial_v_check"

    ;; missing target files are automatically removed from the

    ;; target file list
    target "t1.dat, t2.dat, t3.dat, t4.dat"
    signal "s1,s2,s3"
    time_range stable_period
    rule "v_check"

    ;; check different time range
    target "t1.dat, t2.dat, t3.dat"
    signal "s1,s2,s3"
    time_range end_period
    rule "last_master"

    target "t1.dat"
    signal "s1"
    time_range "5n,15n"
    rule "mono_chk"

    ;rule "bound_chk"

    target "t1.dat"
    signal "s1"
    ; varcond_target "VDD=5:TEMP=100"
    rule "env_chk"
end
```

Checking Waveform Monotonicity

The monotonicity check function screens each of the specified signals in the target file for Y-value magnitude inversion. The monotonicity check does not require any input parameter. A warning is issued when the monotonicity is reversed and restored.

```
rule mono_chk begin
monotonicity_check
end
```

Checking Waveform Bounds

The bound check function screens every data point of the specified signals in the target file against the absolute lower and upper bounds defined in the `upper_bound` and `lower_bound` statements. A warning message is issued for each data point that exists outside of the bounds.

```
rule bound_chk begin
upper_bound 6.2
lower_bound 0.5
end
```

Checking the Waveform Envelope

The envelope check function screens every data point of the specified signals in the target file against the two 'bounding' signals defined in the `bound_sig1` and `bound_sig2` statements. A warning message is issued for each data point that exists outside of the bounds.

```
rule env_chk begin
master gold1.dat
bound_sig1 s1
bound_sig2 s2
; master_sig1 sweep1.dat
; master_sig2 sweep2.dat
; varcond_sig1 "VDD=5:TEMP=0"
; varcond_sig2 "VDD=5:TEMP=100"
end
```

Rules Section Example

The following is a sample rules section:

Chapter 13: Waveform Post Processing

Converting Signals to the Time Domain

```
rule initial_v_check begin
    master gold1.dat
    step    small_step
    v_tolerance 1mv
    v_reltol    +0.01
end

rule v_check begin
    master gold2.dat
    step    .1ns
    v_tolerance 1mv
;    delay 1ns
    v_reltol    -0.01
end
```

If a waveform compare rule contains no master file, the previous master file in the check sequence is used. For example:

```
rule last_master begin
    step .2ns
    v_tolerance 2mv
end
```

Saving Waveform Comparison Results

Waveform comparison results can be saved in a session file with the violated intervals highlighted by adding the `-x session_file` option to the `sx -compare` command. The operating system and CustomExplorer version information is also included in this file. You can load the session file into Custom WaveView for further analysis.

Converting Signals to the Time Domain

To convert a signal to the time domain:

1. Right-click a plotted signal name in the waveview panel.
2. Choose **Signal '<name>' > To Time Domain** from the context menu that appears. The Convert to Time Domain dialog box opens.
3. Enter values (in seconds) for the `x_Start`, `x_End`, and `x_Interval` fields.
4. Click **Ok** to convert the signal to the time domain. The new time domain data is plotted to the waveview window.

Back-Annotating Signals to CustomExplorer

Note: A CustomExplorer license is required for this feature.

To back-annotate a signal to CustomExplorer, right-click the name of a signal and choose **Signal '<signal_name>' > Back Annotate to DesignView** from the menu that opens.

Chapter 13: Waveform Post Processing
Back-Annotating Signals to CustomExplorer

Using the PWL Editor

This chapter contains information on how to use the PWL Source Editor.

The PWL Source Editor is used to construct SPICE PWL input stimuli for circuit simulations. The editor supports interactive editing functions via direct point dragging. Multiple sources can be edited or overlapped simultaneously. You can store the edit result in the text PWL storage files (.pwl) or exported to SPICE netlist files.

The command buttons are grouped into three groups:

- [File Operations](#)
- [Source Operations](#)
- [Point Operations](#)

File Operations

Open a pre-stored PWL editing task with the **Open** button. Save an editing task with the **Save** button. The save function automatically appends file extension .pwl to the user-specified filename if the .pwl extension is not used. Click the **Check** button to check errors in the PWL sources such as overlapping time points.

Click **Close** to close the PWL editor window. All PWL sources are not removed when the PWL editor window is closed.

Source Operations

Click the **Add New Source** button to add a single PWL source or a bus pattern that contains multiple PWL sources. For bus pattern, the usage of high or low levels, cycle time, rise time, and fall time are indicated in the following figure. For example:

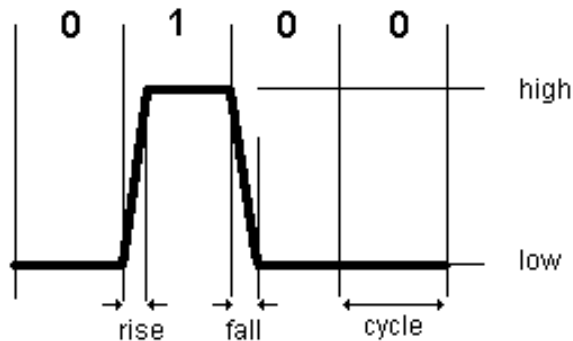


Figure 14 Timing parameters of a bus pattern

The source list window keeps a list of all PWL sources. The selected PWL source is the active source highlighted with thick line. Click **Modify a Source** to modify the name and parameters of the active source. Click **Display Source** to toggle the active source on and off.

Delete the active source with the **Delete a Source** button, or clear all sources with the **Delete All** button.

Point Operations

A newly added source has five points. Click the left mouse button on a point to select the point as the active point. You can insert a new point after the current active point using the **Insert a Point** button, or insert a pattern using the **Insert Pattern** button. A point can also be directly added with the Time and Value text fields and the **Add** button. The newly added point becomes the active point highlighted with a solid box. With multiple points in a source, click the **Next** or the **Prev** button to jump the active point of a source.

To shift the entire PWL pattern forward or backward after the active point, click the **Shift Pattern** button, and drag the active point horizontally to shift the pattern. For example:

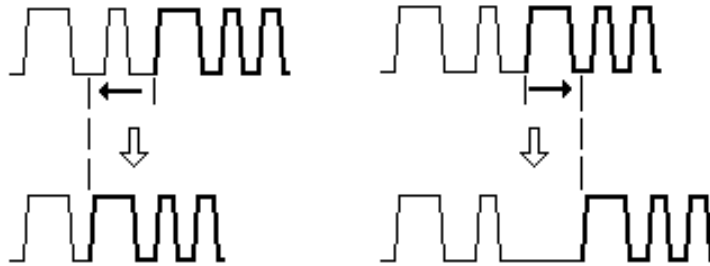


Figure 15 A shifting PWL pattern

The Time and Value fields are updated when a new active point is selected. To modify the values of the active point, enter new values and click the **Modify** button to make the change. You can also change the values of any point by dragging it directly with the left mouse button. Dragging a point also selects it as the active point.

Click the **Delete a Point** button to delete the active point.

To assist point placement, snap functions can be enabled along the horizontal and vertical direction. Enter the preferred snap distance and check the corresponding option button to enable the snap function.

To zoom in an area, press and hold the left mouse button and move the mouse pointer to select the zoom area. Click the **Zoomout** button to zoom out or the **Full** button to reset to full viewing range.

Chapter 14: Using the PWL Editor
Point Operations

Using the ADC Toolbox

This chapter contains information on how to use the ADC Toolbox.

The ADC Toolbox is a built-in tool for detailed performance analysis of A-to-D converter designs. Based on simulation output waveform data or measured data, the ADC Toolbox reports the following performance merits:

- DC static characteristics - Histogram, INL/DNL min/max values and their standard deviations.
- AC dynamic characteristics - noise parameters SNR, THD, SNDR, SFDR and ENOB and the frequency-domain power spectrum.

To open the ADC Toolbox, choose **Tools > ADC Toolbox...** from the main menu. Simplified SNR/THD/SNDR/ENOB calculation functions, for sine input signals, are also provided in the FFT dialog and the equation builder.

Generic Versus Coherent ADC Toolbox

Before Custom WaveView version 2004.4, the ADC Toolbox only supports the Coherent sampling method for sine input waveform and the input waveform have their signal amplitude in code values (signal values range from 0 to 2^N-1 , where N is the number of bits of the design).

From release 2004.4, a new generic ADC Toolbox is introduced. The new ADC toolbox accepts input signal in arbitrary amplitude, and a more generic Window sampling method is added to eliminate the need to sample the input sine waveform over integer cycles, which is a requirement of the Coherent sampling method.

To use the original Coherent-only ADC Toolbox, set the `SW_SX_ORG_ADC` environment variable to 1 in your shell:

Chapter 15: Using the ADC Toolbox

Overview of the ADC ToolBox

```
setenv SW_SX_ORG_ADC 1
```

Without setting the `SW_SX_ORG_ADC` environment variable, the new generic ADC Toolbox is invoked as the default mode.

The new generic ADC Toolbox also allows the AC and the DC analysis be carried out separately.

Overview of the ADC ToolBox

The ADC Toolbox window is divided into three tabs: the Input Parameters tab, DC Analysis Result tab, and AC Analysis Result tab.

The Input Parameter tab acquires input parameters from users for an ADC analysis task. The input parameters are divided into four categories: General input signal properties and data sampling parameters, DC analysis parameters, AC analysis parameters, and AC Coherent sampling parameters.

The DC Analysis Result tab displays sampled waveform and DC result including histogram, DNL and INL plots/distribution.

The AC Analysis Result tab displays the FFT spectrum of the sine input waveform and AC figure of merits including SNR/THD/SNDR/SFDR/ENOB.

Input Signal of ADC Toolbox

The ADC Toolbox accepts the following input signals:

- Sine: Both AC FFT analysis and INL/DNL analysis are available for the sine input type.
- Ramp: Only the INL/DNL analysis is available for the ramp input type.

The input signal of the ADC Toolbox can be an analog signal with arbitrary amplitude ranges, or a digital bus signal representing the digital output code of an ADC design. For digital bus input signal, the bus signal must be displayed in a waveview panel. Drag an analog a signal from the Output View, or a bus signal from a panel to the Signal field in the ADC Toolbox.

The input signal is sampled based on one group of the following three sampling parameters: Start Time, Stop Time, and number of points, or Start Time,

Sampling Frequency (F_s), and number of points. When the stop time is used (in the first group), the last sample point is at:

```
stop_time - (stop_time - start_time)/number_of_points
```

For sine input type, the input frequency (F_{in}) also needs to be specified.

For measured data that was sampled at known F_s , the data (x,y) value pair can use integer index as the x values. If this is the case, select the **Measured data** option and the ADC Toolbox processes the input as if the data is sampled at F_s . When the **Measured Data** option is selected, the Start T/P value is the starting index (0-based) of the measured data.

If you have a measurement data with only single column, i.e. the data is measured at fixed known sampling rate so the data file does not contain x-axis sample time information. Edit the file header to add:

```
#format table data_only
name_of_data
measure data 1
measure data 2
... .
```

With the keywords in the header line, Custom WaveView can load such a text data file as a regular waveform file and automatically assign integer index to the X-axis. You can then apply the **Measured Data** option and use the measurement data in the ADC Toolbox.

DC DNL/INL Analysis

To calculate DNL/INL, an analog input signal is first scaled into full code range based on the **Code Range** parameters in the DC Input Parameters section. If the **Number of Bits** value is used, the ADC Toolbox assumes that the input signal covers full code range from 0 to 2^N-1 . If the **User-defined Code Range** option is selected, the ADC Toolbox assumes that the input signal swings from the **Min** code value to the **Max** code value. Digital input bus signal is not subject to this amplitude scaling, instead the bus direct code values are used.

If the analog input signal value is already converted to the A/D converter output bus values, select the **Signal Value=Output Code** option.

Because the ADC Toolbox always automatically scales the analog input signal, PWL sampling is always used in sampling analog input signal.

After entering the necessary DC analysis parameters, click **Evaluate DC** to carry out a DC analysis.

Sine Input

For sine input signal, based on the sampled data and the Fin parameters, the ADC Toolbox needs to find the ideal sine wave in order to calculate INL and DNL. The ADC Toolbox uses two methods to calculate the ideal sine waveform:

- FFT fitting: if the input sine waveform data is not clipped. The amplitude and phase of the strongest FFT spectrum component of the input sine signal is used as the ideal sine waveform.
- LMS (least-mean-square) fitting: if the input sine waveform data is clipped. (often seen with measure data), the ADC Toolbox uses the sample data within the Clip-Min and Clip-Max code values, and LMS fitting method to find the original ideal sine waveform. The offset and the amplitude of the fitted ideal sine waveform is displayed in the Sampled Data plot.

With the LMS fitting, since the clipped sampled data might be heavily distorted, FFT AC analysis is disabled.

Ramp Input

For the ramp input type, ADC Toolbox always assumes that the ideal ramp signal evenly covers the full code range. Based on this assumption, multiple complete cycles of ramp (up or/and down) are accepted.

Number of Sample Points and INL/DNL

In order to produce meaningful INL/DNL result, the number of sample points must be large enough so that there is at least one sample point in each code value. For example, for a 10-bit design, ramp input, at least 1024 points (210) sample points are needed. Sine input type needs even more points because the sample points do not distribute evenly over different code values.

Since the ADC Toolbox scales the original analog input signal and uses PWL method to sample the scaled input signal, it is the user's responsibility to make sure that the measurement/simulation generates enough true data points at each code value.

Sampling Frequency and INL/DNL

For sine input type, if multiple periods of the input sine waveform are sampled, the sampling frequency F_s and input frequency F_{in} must be carefully selected to avoid sampling the same code values in each period. For example, if a 5MHz input sine waveform (6-bit) is sampled at 40MHz over 128 cycles, the 8 sampled code values from each cycle are always the same. As a result, only 8 out of the 64 code values are available in the sampled data. If F_{in} is at 4.99MHz, with the sampling frequency, the sampled data has different code values from cycle to cycle, and the INL/DNL result would be more meaningful.

AC Analysis: Coherent Sampling Versus Window Sampling

With the sine input type, the ADC Toolbox supports FFT AC analysis using two different types of sampling method:

- [Coherent Sampling](#)
- [Window Sampling](#)

Coherent Sampling

With coherent sampling, exact integer multiple cycles ($F_{in}NUM$) of the input sine wave are sampled. The sampled data are then sorted into a single cycle of sine wave before performing the dynamic performance analysis using FFT.

Advantages of the coherent sampling method include:

- It allows an input signal at higher frequency to be sampled using a lower sampling rate. In the real world, physical measurement equipment might sometimes have limited sampling performance to meet the Nyquist criterion required by the bandwidth of the input signal.
- Harmonics and noise are readily separated in the power spectrum using coherent sampling.
- FFT windowing functions are not required because integer cycles of the input signal are sampled.

Chapter 15: Using the ADC Toolbox

AC Analysis: Coherent Sampling Versus Window Sampling

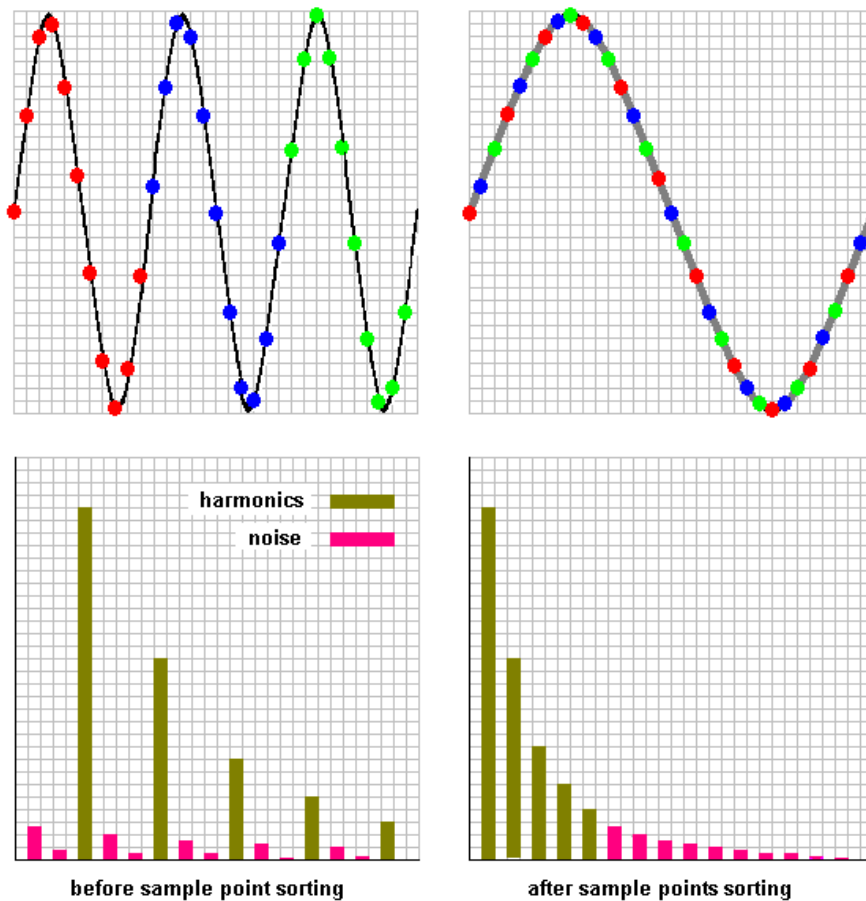


Figure 16 Coherent sine wave sampling

However, coherent sampling method does require the exact frequency (F_{in}) of the input sine wave to be known prior to running an ADC simulation. To use the coherent sampling method in the ADC Toolbox, you need to enter the preferred Precision, the estimated F_{in} and F_{clk} , and Sample Pts. Then, click **Evaluate AC** to find out the exact values for F_{in} .

Figure 16 is a coherent sampling example with $F_{inNUM} = 3$, $N=32$. Coherent sampling requires that $N \times F_{clk} = F_{inNUM} \times F_{in}$. In order to sort sampled points of multiple cycles into a single sine wave cycle, N and F_{inNUM} should not have any common factor. Since N is always power of 2, an odd number for F_{inNUM} is always a valid choice. In the ADC Toolbox, the F_{inNUM} value can be automatically determined based on user-defined F_{in} and F_{clk} values.

As depicted in the above graph, the power spectrum of the sorted sine wave is also a sorted version of the original multi-cycle sine waveform's power spectrum.

The sorted single-cycle sine wave is sometime also referred to as the unfolded sine wave.

Refer to the next chapter for how to enter parameters for Coherent Sample.

Window Sampling

The window sampling method does not require integer number of cycles of the input sine signal to be sampled. However, to overcome the spectral leakage problem from not sampling over an integer cycles of the input waveform, a FFT windowing function is required. [Figure 17](#) shows the FFT spectrum of a 4.99MHz sine signal sampled over 127.75 cycles at 40MHz.

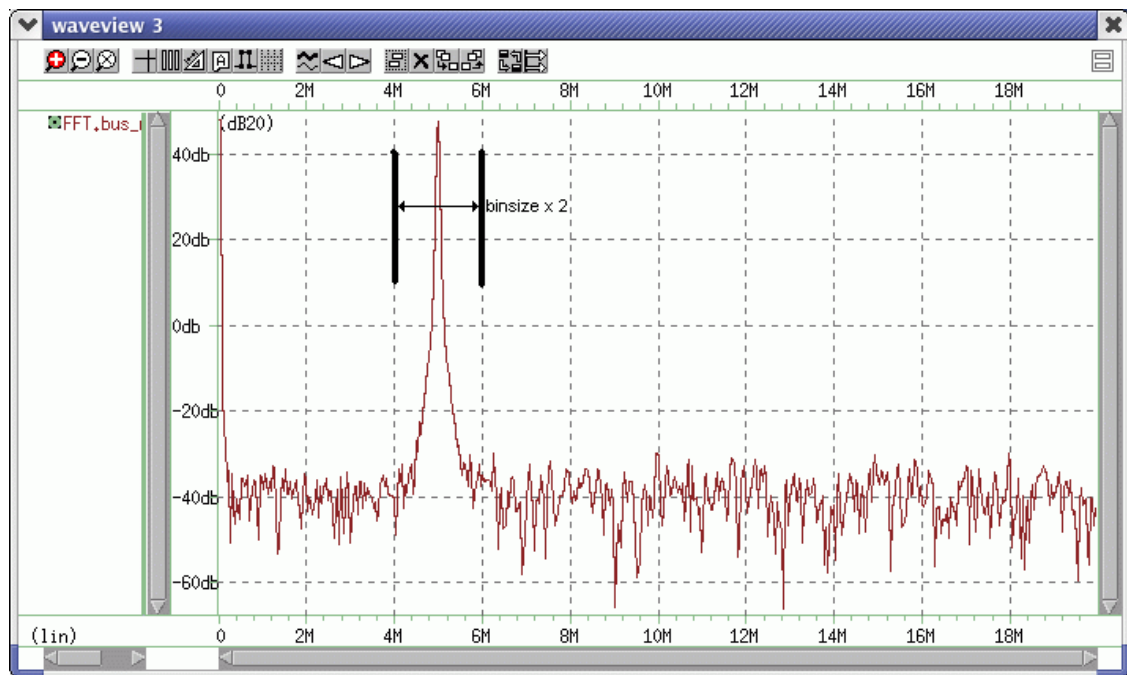


Figure 17 FFT spectrum with window functions

As depicted in the above spectrum, the power at the fundamental frequency (4.99MHz) gets spread into neighboring spectral components due to spectral leakage. For this reason, a binsize parameter is required to include all

Chapter 15: Using the ADC Toolbox

Exporting the DNL/INL/FFT Results as Waveform Data

neighboring components within +/- binsize spectral range as part of the original fundamental (or harmonic) components. The default value of BinSize is 10.

After entering the necessary AC analysis parameters, click **Evaluate AC** to start an AC analysis.

Exporting the DNL/INL/FFT Results as Waveform Data

The ADC Toolbox result, including the sampled waveform data, histogram, INL/DNL and the FFT power spectrum, can be exported to a WaveView window for further viewing purpose. Click **Waveform** next to the plot window to display the data into a new WaveView window.

Saving or Loading an Analysis Setup

The ADC Toolbox setup, including the input parameters, sampled data and the analysis result can be saved into data files. To restore a previously saved setup, load from the .INI (Input parameter) file.

ADC Toolbox Display Controls

The following window displays are included in the ADC toolbox:

- [Sampled Signal Window](#)
- [Histogram, DNL, and INL Windows](#)
- [Power Spectrum \(Sine Input Only\)](#)

Sampled Signal Window

The Sampled Signal window displays the sampled data waveform based on the input parameters. The Y-axis is in code value, with min-code value at the bottom and max-code value at the top.

Ideal/Acquired/Error/All switch:

- Ideal: display the ideal signal used for INL/DNL calculation.
- Acquired: display the sampled waveform data.
- Error: display the error between ideal signal and the sampled data.
- All: display all of the above.

Sin/Cos/Original (sine input only):

- Sin: adjust the phase of the displayed waveform into Sin phase, i.e. starts from zero.
- Cos: adjust the phase of the displayed waveform into Cos phase, i.e. starts from the maximum value.
- Original: no phase adjust for sampled waveform display.

Exp/Integer

- Exp: display the Y-axis value ranges using the engineering format
- Integer: display the Y-axis value ranges using the integer code values

Histogram, DNL, and INL Windows

These windows display the histogram, DNL and INL plots of the sampled signal. Aligned with the Y-axis of the Sampled signal plot, the Y-axes of all three plots correspond to the code value. The X-axis is the histogram / DNL / INL value in LSB.

Power Spectrum (Sine Input Only)

The power spectrum window displays the noise spectrum of the sampled signal.

Line/Bar/Both

- Line: plot the power spectrum using line chart.
- Bar: plot the power spectrum using bar chart.
- Both: plot the power spectrum using both line and bar chart.

Index/Frequency

- Index: display the spectrum X-Axis value range using harmonic index.
- Frequency: display the spectrum X-axis value range using frequency.

AC Dynamic Characteristics

The AC Characteristics window displays the spectrum harmonic strength and the following values:

- SNR: The signal-to-noise ratio.
- THD: The total harmonic distortion.
- ENOB: The effective number of bits.
- SNDR: The signal to noise and distortion ratio.
- SFDR: The spurious free dynamic range. The harmonic index of the second strongest harmonic component is also displayed together with the SFDR value (for example, SFDR index_after_sorting (index_before_sorting)).

The strength of the power spectrum is in db relative to the strongest harmonic component, i.e. 0 db for the strongest harmonic component. The AC characteristic window lists the value of each of the harmonic component. Use the **up** and **down** buttons to scroll up/down to view the spectrum values at different harmonic range.

Select the toggle check box next to a harmonic component to either exclude the harmonic for the THD calculation or include the harmonic for the SNR calculation.

Click **Evaluate AC** to update the AC noise analysis result (SNR/THD/ENOB/SNDR/SFDR) based on the new harmonic selection.

DC Static Characteristics

The DC Characteristics window displays the min/max values and the standard deviation of the INL/DNL distribution. The unit is 1 LSB.

Running Batch-mode ADC Analyses

ADC Toolbox analysis can be run in batch mode with the `-adcin`, `-adcout`, `-adcwdf` and `-adccsv` command line option. The usage is:

```
wv -adcin adc.INI -adcout out_sw -adcwdf wdf_sw
```

The `adc.INI` is a previously saved `.INI` file, `out_sw` is the `_` (underscore) delimited type switch that controls the output text files; `wdf_sw` is the `_` (underscore) delimited type switch that controls the output WDF waveform files. The `-adccsv` option sets the output text file in the CSV (comma separated values) format.

One of the `-adcout` and `-adcwdf` options must be specified or the batch mode operation is aborted. Supported type strings are `INL`, `DNL`, `FFT`, `TLA`, `HIS`, `IND`, `ALL` and `DAT` (`-adcout` only). `FFT` and `TLA` have no effect on ramp input signals. For example:

```
wv -adcin adc.INI -adcout INL_DNL -adcwdf TLA_FFT -  
adccsv
```

Chapter 15: Using the ADC Toolbox
Running Batch-mode ADC Analyses

Using the Coherent Sample Only (CSO) ADC Toolbox

This chapter contains information on how to use the CSO ADC Toolbox.

To start the ADC Toolbox in the CSO mode, set the `SW_SX_ORG_ADC` shell environment variable.

Input Signal Requirements

The input waveform for the CSO ADC Toolbox must have its signal strength in integer code values (for example, 0 to 63 for a 6-bit ADC). Run a simulation on an ADC design first and then convert the ADC output codes into an acceptable waveform.

Preparing the Input Waveform

As depicted in the flow chart below, the following steps demonstrate how to use Custom WaveView to convert the simulated ADC output code (in analog waveforms) to an acceptable input signal for the CSO ADC Toolbox.

Chapter 16: Using the Coherent Sample Only (CSO) ADC Toolbox

Preparing the Input Waveform

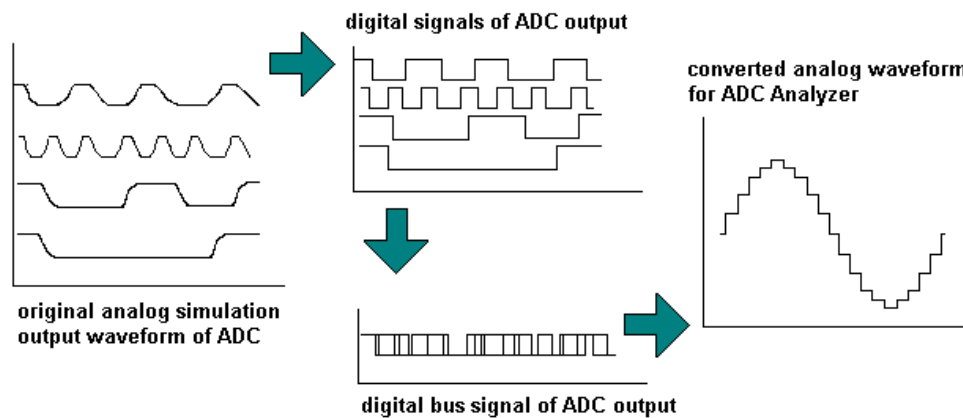


Figure 18 Preparing an input signal for the ADC toolbox

To convert the simulated ADC output code to an acceptable input signal for the CSO ADC Toolbox:

1. Identify the analog output waveforms that represent the ADC output code, for example "ad0" to "ad5" for a 6-bit design.
2. Display these signals in a waveview window and then highlight them by highlighting the panel(s) these signals reside in.
3. Use the A/D converter tool in the Custom WaveView single-bit mode to convert each of the highlighted analog waveforms to a digital waveform. Name the converted digital waveforms "AD0" - "AD5", and ensure proper threshold value is used for this A to D conversion step.
4. Group the converted logic signal "AD0" - "AD5" into a digital bus signal. Make sure that the signals are ordered (sorted) correctly so "AD5" is the MSB and "AD0" is the LSB.
5. Rename the grouped bus signal to "AD". You can use this logic bus signal directly as the input to the ADC Toolbox, or you can continue to [Step 6](#).

To use the logic bus signal as the input, the bus signal must be displayed in a waveview window, and you must drag and drop the logic bus signal from the display panel.

6. Use the D/A convertor tool in Custom WaveView to convert the grouped converted digital bus "AD", in multi-bit mode, into an analog waveform.
7. Ensure the **Use logic bus value** option is selected so that the converted waveform has strength in code value.

- Rename the final analog waveform "ad".

The analog waveform "ad" is now ready for use with the ADC Toolbox. Skip [Step 1](#) to [Step 3](#) if your simulator generates logic output waveforms directly. If your simulator directly generates a logic bus waveform, skip [Step 1](#) to [Step 5](#).

To specify the input signal, drag and drop the converted analog signal from the Output View browser to the Signal field in the ADC Toolbox.

Sampling the Input Waveform

The CSO ADC Toolbox samples the input signal waveform based on the following equation:

$$N \cdot F_{in} = FinNUM \cdot F_{clk}$$

where

- N is the number of sampling points (power of 2)
- F_{in} is the input frequency
- $FinNUM$ is the total number of cycles of a sine signal input used for coherent sampling.
- F_{clk} is the sampling frequency

Note: N and $FinNUM$ must not have any common factors.

For sine wave input, the number of sample points N must to be power of 2 because FFT is used internally to calculate the ADC dynamic performance. It is important to choose N large enough to produce at least one sample point for each output code value. In the ADC Toolbox, PWC sampling is always used to sample the input signal waveform.

Preparing Test Benches for the CSO ADC Toolbox

To maximize the effectiveness of the CSO ADC Toolbox, the following guidelines can be used to prepare the input test tone for simulating an ADC design.

Input Signal Strength

For both ramp and sine input type, the ideal input signal strength should drive the ADC output over a full swing output code from 0 to $2^{\text{BIT}}-1$, where BIT is the number of bits. On the other hand, the input signal should not be too strong and therefore over drive the ADC outside its operating range. Proper input signal strength results in more accurate INL/DNL analysis result.

Input Sine Wave Frequency

In general, depending on the speed performance of the ADC design, the input test tone's frequency should be low enough so that the digital output does not skip codes. (i.e. all output codes should be exercised by the input test tone.). For coherent sine wave sampling, the exact input test tone frequency F_{in} must be determined before running the ADC simulation.

CSO ADC Toolbox User Interface

The CSO ADC Toolbox accepts user input parameters and generates graphic and textual analysis report.

After completing an analysis based on user input parameters, the CSO ADC Toolbox allows you to perform the following actions:

- Display analysis results in regular waveview windows
- Export analysis result to text files
- Save/load the analysis parameters setup

Input Parameters

The following table summaries the input parameters required by the CSO ADC Toolbox.

Input Signal Type	Sine	Ramp
Start Time	mandatory	mandatory

Input Signal Type	Sine	Ramp
Precision	mandatory	not required
Decimation	mandatory	not required
Sample Points	mandatory	mandatory
Fclk User	mandatory	mandatory
Fin User	mandatory	not required
Fin #	optional	not required
Fclk	optional	not required
Fin	optional	not required
Bits	mandatory	mandatory
THD	mandatory	not required
SNR	mandatory	not required

- Start Time: The time at which the ADC Toolbox starts sampling the input signal.
- Precision: number of digits after the decimal point for the internal Fclk, Fin and Fin# calculation. For the sine wave coherent sampling method, small error in Fclk and Fin can result in inaccurate analysis result. If the **Use user Fclk/Fin** option is not selected, the ADC Toolbox re-calculates the precise values internally for Fclk, Fin and Fin#.
- Decimation: Integer decimation-in-time. Default is 1. The decimation is used to mimic the sampling speed limitation of real measurement equipment by slowing down the sampling clock by the integer decimation factor. The actual sampling clock frequency is Fclk/decimation. When the ADC Toolbox is used on simulation data, the value should be set to 1.
- Sample Points: Number of sample point. Since the ADC Toolbox uses FFT for noise analysis, the number of sample points must be power of 2.
- Fclk user: The frequency of the sampling clock.
- Fin user: The frequency of the input sine wave. Ignored for ramp input.

- **FinNUM:** The total integer number of cycles of input sine signal for coherent sampling. Required only when the **Use user Fclk/Fin** option is selected. It is otherwise calculated internally based on other input parameters. Ignored for ramp input.

Note: If the **Use user Fclk/Fin** option is selected, the Fclk-user value is used directly as the sampling frequency for acquiring data from the input signal. The input data is sampled for a total span of Sample-points / Fclk-user. If the **Use user Fclk/Fin** option is not selected, the ADC Toolbox uses Precision, Fin-User, Fclk-User, Sample Points, and Decimation to calculate the precise internal Fclk, Fin, and FinNUM. In this case, you only need to provide approximate Fclk and Fin values. The final internally calculated Fclk, Fin, and FinNUM values are displayed in corresponding fields.

- **Bits/Min/Max:** Number of bits of the AD converter design, and the minimal and maximal code value (MIN/MAX). The MIN/MAX values, instead of the Bits value, are used if the **Use Code Value Range** option is selected. If the **Use Code Value Range** option is not selected, the Bits value is used and the code value is assumed to range from 0 to $2^{\text{Bits}} - 1$. Any sampled code values that are outside this range are clipped at the MIN/MAX values.
- **THD:** The highest harmonic order that is included as harmonic for the total harmonic distortion calculation.
- **SNR:** The highest harmonic order that is excluded from noise for the signal to noise ratio calculation.
- **Indexed Data:** If the input data has been sampled at a fixed rate without the x-axis time information for each of the data points (for example, measurement data), select this option and the ADC Toolbox assumes that the data is sampled at Fclk.

After entering all the required input parameters and the options, click **Evaluate** to complete the analysis.

Selecting Sampling Parameters

The following sampling parameters are available:

- [Sine Input](#)
- [Ramp Input](#)

Sine Input

To select a sine input sampling parameter:

1. Select the Sine option.
2. Enter a Sample Pts value.
3. If the **Use user Fclk/Fin** option is selected, enter proper Fclk, Fin and FinNUM values. These values are used directly by the waveform sampling process.
4. If the **Use user Fclk/Fin** option is selected, enter proper Fclk, Fin and FinNUM values. These values are used directly by the waveform sampling process.
5. If the **Use user Fclk/Fin** option is not selected, enter the preferred Precision value and estimated Fclk, Fin values. The FinNUM value and the exact Fclk and Fin values are calculated automatically.
6. Select the **Sort Sampled Points** option to view the unfolded power spectrum of the sorted sampled waveform, or de-select the **Sort Sampled Points** option to view the folded power spectrum of the unsorted sampled waveform. You need to click **Evaluate** every time the **Sort Sampled Points** option is changed.

Ramp Input

Select the **Ramp** option and enter the Start, Sample-Pts, and Fclk values.

Exporting DNL/INL/FFT Results as Waveform Data

The ADC Toolbox result, including the sampled waveform data, histogram, INL/DNL and the FFT power spectrum, can be exported to a WaveView window for further viewing purpose. Select the preferred data type switches in the ADC Toolbox and click **Waveform** to display the data into a new WaveView window.

Saving or Loading an Analysis Setup

The ADC Toolbox setup, including the input parameters, sampled data and the analysis result can be saved into data files. To restore a previously saved setup, load from the .INI (Input parameter) file.

ADC Toolbox Display Controls

The following ADC toolbox display controls are available:

- [Sampled Signal Window](#)
 - [Histogram, DNL, and INL Windows](#)
 - [Power Spectrum \(Sine Input Only\)](#)
-

Sampled Signal Window

The Sampled Signal window displays the sampled data waveform based on the input parameters. The Y-axis is in code value, with min-code value at the bottom and max-code value at the top.

Ideal/Acquired/Error/All switch:

- Ideal: display the ideal signal used for INL/DNL calculation.
- Acquired: display the sampled waveform data.
- Error: display the error between ideal signal and the sampled data.
- All: display all of the above.

Sin/Cos/Original (sine input only)

- Sin: adjust the phase of the displayed waveform into Sin phase, i.e. starts from zero.
- Cos: adjust the phase of the displayed waveform into Cos phase, i.e. starts from the maximum value.
- Original: no phase adjust for sampled waveform display.

Exp/Integer

- Exp: display the Y-axis value ranges using the engineering format
- Integer: display the Y-axis value ranges using the integer code values

Histogram, DNL, and INL Windows

These windows display the histogram, DNL, and INL plots of the sampled signal. Aligned with the Y-axis of the Sampled Signal plot, the Y-axes of all three plots correspond to the code value. The X-axis is the histogram / DNL / INL value in LSB.

Power Spectrum (Sine Input Only)

The power spectrum window displays the noise spectrum of the sampled signal.

Line/Bar/Both

- Line: plot the power spectrum using line chart.
- Bar: plot the power spectrum using bar chart.
- Both: plot the power spectrum using both line and bar chart.

Index/Frequency

- Index: display the spectrum X-Axis value range using harmonic index
- Frequency: display the spectrum X-axis value range using frequency.

AC Dynamic Characteristics

The AC Characteristics window displays the spectrum harmonic strength and the following values:

- SNR: the signal-to-noise ratio
- THD: the total harmonic distortion
- ENOB: the effective number of bits
- SNDR: the signal to noise and distortion ratio
- SFDR: the spurious free dynamic range. The harmonic index of the second strongest harmonic component is also displayed together with the SFDR value (for example, SFDR index_after_sorting (index_before_sorting)).

The strength of the power spectrum is in db relative to the strongest harmonic component (for example, 0 db for the strongest harmonic component). The AC characteristic window lists the value of each of the harmonic component. Use the **up** or **down** buttons to scroll up/down to view the spectrum values at different harmonic range. Select the toggle check box next to a harmonic component to exclude the harmonic for the THD calculation or include the harmonic for the SNR calculation.

Click **Evaluate** to update the AC noise analysis result (SNR/THD/ENOB/SNDR/SFDR) based on the new harmonic selection.

DC static Characteristics

The DC Characteristics window displays the min/max values and the standard deviation of the INL/DNL distribution. The value is in LSB units.

Analysis Command Environment (ACE)

This chapter contains information on you can use ACE commands in Custom WaveView.

This chapter contains the following major sections:

- [Using ACE Commands in Custom WaveView](#)

Using ACE Commands in Custom WaveView

Analysis Command Environment (ACE) is a Tcl-based programming environment comprised of a set of high-level waveform data operating commands evolved from the old Synopsys APX (Application Programming Extension) API functions. While the old APX API functions are still supported in ACE, the new high-level commands in ACE significantly increase the ease of use to construct scripts for complex analysis needs.

The ACE commands support:

- Tcl list and Perl array variables for handling a collection of objects.
- Wild card name pattern for referencing multiple objects.
- Direct use of Tcl/Perl variables in waveform equations. All calculator functions are available for the `sx_equation` command.
- Execution in both GUI mode and non-GUI batch mode.

For more information on how to set up and use ACE and ACE commands, see the *Analysis Command Environment (ACE) Reference Manual*.

Chapter 17: Analysis Command Environment (ACE)
Using ACE Commands in Custom WaveView

Printing Waveforms

This chapter contains information on how to print waveforms on different platforms.

On UNIX platforms, Custom WaveView supports printout in the PostScript format only. To submit a print job, click toolbar button or choose **File > Print** from the main menu to open the Print Setup window.

The print target is defaulted to the current active waveview, which can be changed by clicking **Change**. Select your preferred settings and click **Print** to submit the print job.

PostScript Print Layout

Multiple print options are supported for the PostScript printout:

- Print only the active Waveview to a single page as shown on the screen.
- Print all signals in the active Waveview using the display height. Multiple pages might be needed if the Waveview has signals that are scrolled out of the view.
- Print all Waveview's in a single page, multi-column layout. The user can choose the number of columns preferred.
- Print all Waveview's, each in a single page, as shown on the screen display.

Select the **Color PostScript** option if your printer supports color PostScript.

The default print setup is black/white in landscape orientation. The default printer device and user-defined print command can be predefined in the .spxrc file.

Printing on UNIX Platforms

On UNIX platforms, the Print Setup dialog window supports print out to different paper sizes and printers. Printer names can be predefined in the Printer Devices field of the Preference Settings dialog. Multiple printer names are delimited by semicolon (;). Selected paper size and printer device are saved in `$HOME/.spxlast` when the application is closed. The stored values are automatically used as the default when the application starts again. If the `PRINTER` environment variable is defined in your UNIX shell, it is always used as the default printer.

Printing on Windows Platforms

On MS Windows platforms, in addition to the PostScript print-to-file option, Custom WaveView also supports printout to all installed printers except line printers. PostScript format is supported as a file output option only. Click toolbar button or choose **File > Print** from the main menu to open the MS Windows version of Print Setup dialog. Select preferred options and click **Continue** to select a printer device, or select the path for the PostScript output file.

Advanced Controls

This chapter contains information on how to use Custom Waveview advanced controls.

This chapter contains the following major sections:

- [Saving and Restoring Job Sessions](#)
- [Customizing Bind Keys](#)
- [Bindkey Functions](#)
- [Preference Settings](#)
- [Configuring Custom WaveView Manually](#)
- [Customizing File Browser Filters](#)
- [Configuring "Send To" in the Windows Environment](#)

Saving and Restoring Job Sessions

Custom WaveView provides save/restore functions for users to save/retrieve a job session to/from a session file. The session file has a default file extension of .sx.

Saving a Job Session

To save your current session, click the **Save Session** toolbar button or choose **Setup > Save Session** from the main menu.

The Save Session dialog box appears to accept the session file path. Select or enter the file in which to save your current job session.

Restoring a Job Session

To load from a session file, click the **Load Session** toolbar button or choose **Setup > Load Session** from the main menu.

The Load Session dialog appears. Accept the session file path, and select or enter the file from which to restore your job session.

A session file can be also loaded from the command line with the `-x` option. For example:

```
wv -x setup_file
```

If the **Apply to existing waveform files** option is not enabled, the session loader restores signal selection/layout using the waveform data files specified in the session file. If you prefer to apply the saved signal selection/layout to other loaded waveform data files in the application, enable the **Apply to existing waveform files** option. Select the preferred waveform data file for each restore target using the Waveform Source Dialog.

Use the `-y` option to apply session setup on different waveform data files from the command line. Usage of the `-y` option is:

```
wv -y setup_file file1 file2 ... filen
```

Select the **Suppress popup warning messages** option to disable session loading warning messages (missing signals, for example).

Loading Setup from Other Viewer Tools

Custom WaveView supports loading setup files from nWave (rc files) and Xelga (swd files). To load a setup file, choose **File > Load RC Files** from the main menu.

Customizing Bind Keys

Bind key settings can be customized for key action in the waveview windows. Custom WaveView allows key bindings on keys: 'A' to 'Z', '0' - '9', CTRL-A to CTRL-Z, CTRL-0 to CTRL-9, ESC, Delete, Backspace, Up-Arrow and Down-Arrow. To customize the bind key settings, choose **Setup > Key Bindings** from the main menu to open the BindKey Setting dialog.

Except for the five function keys (**ESC**, **Delete**, **Backspace**, **UP**, and **DOWN**), a key-down action and a key-up action can be associated with each key.

The available actions can be categorized into the following types:

- `menuFunctionName`: Equivalent to the top menu actions.
- `wctrlFunctionName`: Equivalent to the waveview control button actions.
- `wcmdFunctionName`: Special waveview command actions.

The Bind-Key dialog automatically flags warnings if the selected action is not allowed for a key event. Select your auto-repeat and action preferences and click **Apply** to apply the change or click **Save** to apply and save the change. Key binding settings are saved in `$HOME/.spxkey` on UNIX platforms, or the Windows Registry on Windows platforms.

Bindkey Functions

The following bind key functions are available:

- [Top Menu-operated Bind Key Functions](#)
- [Waveview Toolbar Bind Key Functions](#)
- [Other Bind Key Functions](#)

Top Menu-operated Bind Key Functions

These functions can be also invoked from the top menu. The current bind key setting is indicated at the right end in the associated menu box.

`menuLoadWaveformFiles`

Open the Open: Waveform Files dialog.

`menuUpdateAll`

Update all loaded waveform files.

`menuPrintWV`

Open the Print Setup dialog.

`menuExportWV`

Open the Waveform Export Parameters dialog.

Chapter 19: Advanced Controls

Bindkey Functions

`menuAbortLoading`

Abort the current waveform file loading process.

`menuShowDirTable`

Open the Directory/File Table dialog.

`menuQuitApp`

Terminate the current Custom WaveView process.

`menuLoadSession`

Open the Load Session dialog.

`menuSaveSession`

Open the Save Session dialog.

`menuNewWaveView`

Add a new waveview window.

`menuUndoWaveView`

Undo the previous waveview operation.

`menuDeleteWaveView`

Delete the active waveview window.

`menuDeleteAllWaveView`

Delete all waveview windows.

`menuRenameWaveView`

Rename the active waveview window.

`menuRefreshWaveView`

Refresh the content of the active waveview.

`menuToggleWVDocking`

Toggle waveview between dock/undock modes.

`menuToggleBrowser`

Show/hide the signal browser.

`menuAddPanelLinear`

`menuAddPanelSmith`

`menuAddPanelPolar`

`menuAddPanelEyeDiagram`

menuAddPanel2Dsweep
menuAddPanel3Dsweep
menuAddPanelHistogram

Add an empty panel in various types.

menuDeletePanels

Delete all selected panels.

menuUngroupPanels
menuGroupPanels

Ungroup/group all selected panels.

menuSelectAllPanels
menuUnselectAllPanels

Select/unselect all panels in the active waveview.

menuFitAllPanels

Fit all selected panels to waveview height.

menuDefHAllPanels

Reset all selected panels to default height.

menuSetRadixBinary
menuSetRadixOctal
menuSetRadixHex
menuSetRadixDecimal
menuSetRadixASCII

Set radix of all selected panels to various mode.

menuShowShortVector
menuShowFullVector

Set logic values of all selected panels to the shortest mode or the full bus width mode.

MenuShowAlias
menuShowOrgName

Set signal names in all selected panels to using alias or original signal name.

Chapter 19: Advanced Controls

Bindkey Functions

menuSetStyleVCD

menuSetStyleRTF

Set logic value style to the standard VCD logic or the Synopsys/Nassda HANEX RTF-style logic.

menuUndoZoom

menuRedoZoom

Undo/redo the previous zoom/unzoom operation.

menuSetLinearXAxis

menuSetLogXAxis

menuSetDBXAxis (db20)

menuSetLinearYAxis

menuSetLogYAxis

menuSetDBYAxis (db20)

Set the X/Y axis type of selected panels in the active waveview.

menuSetZoomRange

Open the Zoom Settings dialog for manual zoom.

menuResetZoom

Fully unzoom selected panels in the active waveview.

menuConfigSelectedYAxis

Open the Setting Y Axis Full Range dialog.

menuConfigYAxisDefault

Open the Default Y Axis Range dialog.

menuConfigXAxisVariable

Open the Setting X Variable dialog.

menuJumpCursorForward

menuJumpCursorBackward

Jump the main cursor forward/backward.

menuCallSignalFinder

menuCallFFT

menuCallD2A

menuCallA2D

menuCallDataReduction

menuCallCalculator
menuCallDynamicMeter
menuCallPWLEditor

Open various analysis tools.

menuShowSelectedSignals
menuHideSelectedSignals

Show/hide all highlighted signals in selected panels of the active waveview.

Waveview Toolbar Bind Key Functions

These functions can be also invoked from the mini toolbar in each waveview window.

wbtnScanNext
wbtnScanPrevious

Scan signals in selected panels of the active waveview to the next/previous signal in the same waveform file.

wbtnToggleDataPoints

Toggle on/off the data point markers.

wbtnToggleGrids

Toggle on/off the X/Y grid lines.

wbtnAddCursor

Add a new cursor in selected panels.

wbtnAddCursorL

Move a left waveform cursor to the closest point on the waveform to the mouse cursor.

wbtnAddCursorR

Move a right waveform cursor to the closest point on the waveform to the mouse cursor.

wbtnDelete

Delete the selected panels.

wbtnSwitchMainCursor

Switch the main cursor.

wbtnAddMonitor

Add a new monitor.

wbtnAddTextLabel

Add a text label.

Other Bind Key Functions

These functions can be invoked only via bind keys.

wcmdCopyLastDMeter

Make a copy of the last dynamic meter added in a waveview.

wcmdRepeatScript

Repeat the last ACE script executed.

wcmdTogglePanelFit

Toggle all selected panels in the active waveview between fit/default panel height.

wcmdToggleSyncMode

Toggle the active waveview between sync/unsync modes.

wcmdArmBoxZoom

wcmdUnarmBoxZoom

Key-activated box-zoom operations. The Arm and the Unarm functions must be assigned to the key-down and the key/-up actions respectively of the same bind key.

wcmdArmVertZoom

wcmdUnarmVertZoom

Key-activated vertical zoom operations. The Arm and the Unarm functions must be assigned to the key-down and the key/-up actions respectively of the same bind key.

wcmdArmHorzZoom

wcmdUnarmHorzZoom

Key-activated horizontal zoom operations. The Arm and the Unarm functions must be assigned to the key-down and the key/-up actions respectively of the same bind key.

wcmdArmSignalMode
wcmdUnarmSignalMode

Key-activated signal mode operations. The Arm and the Unarm functions must be assigned to the key-down and the key/-up actions respectively of the same bind key.

wcmdCopyPanels
wcmdCutPanels
wcmdPastePanels

Copy, cut or paste panels in the active waveview.

wcmdScrollWVUp
wcmdScrollWVDown

Scroll the panel stack in the active waveview (stack-mode waveview only) up and down.

wcmdXPanRight
wcmdXPanLeft

Pan the x-range in the active waveview (stack-mode waveview only) right and left.

wcmdYPanUp
wcmdYPanDown

Pan the y-range of all selected panels in the active waveview up and down.

wcmdReloadSession

Reload the last session file used.

wcmdQuitZoom

Abort a zoom operation during mouse drag.

wcmdSortSignals

Sort signals order (by their names) in all selected panels.

wcmdDumpScreen

Dump the content of the active waveview. Invoke the Save Screen Dump dialog.

```
wcmdJumpCursorBackward  
wcmdJumpCursorForward  
wcmdResetZoom  
wcmdUndoZoom  
wcmdRedoZoom
```

These functions are duplicates of the same 'menu' bind key functions. They are kept only for backward compatibility.

Preference Settings

You can configure Custom WaveView with the Preferences. Click the **Preferences** toolbar button or choose **Config > Preferences** from the main menu to open the Preference Settings.

The configuration entries are organized into five groups: General, Waveview, Panel, Colors, and Threshold. Configurable items of each group are placed inside a separated dialog tab.

Click **Apply** to apply your changes, or **Save** to apply and save the changes.

A detailed description of each configurable option is described in [Custom WaveView Preference Settings](#).

Configuring Custom WaveView Manually

You can configure Custom WaveView by modifying:

- The .spxrc configuration file for UNIX platforms.
- The Windows Registry for MS-Windows platforms.

The configuration settings are used to initialize Custom WaveView.

The configuration file must be named .spxrc. Custom WaveView reads the configuration file from three different locations in the following order:

- `$(SX_HOME)/.spxrc` (if `SX_HOME` is defined)
- `$(HOME)/.spxrc` (if `HOME` is defined)
- `current_working_directory/.spxrc`

`SX_HOME` is a user-defined environment variable; `HOME` is a shell variable which defaults to a user's home directory.

Configuration settings from `current_working_directory/.spxrc` have the highest priority. Settings read first are overridden by those read later in the sequence.

On a Windows platforms, preference settings are automatically updated into Windows Registry when you click **Save** in the Preference Settings dialog (Preferences settings). If manual editing is necessary, run `regedit` from a MS-DOS prompt and modify settings in the following location:

```
HKEY_CURRENT_USER\Software\Sandwork Design\Custom WaveView
```

Please see [Appendix A on page 221](#) for the list of setting options.

Customizing File Browser Filters

The file filter option menu in the file loading dialog window can be customized to add your own filter patterns. To customize the menu:

1. Choose **Config > Preferences** from the main menu bar.
The Preference Settings window opens.
2. Click the **General** tab.
3. Specify a waveform filter from the Waveform File Filter preference menu.
You can choose to filter **All Files** or **Waveform Files**.
4. (Optional) Click **New** to create a new filter pattern, then enter your own filter pattern using the following format:

```
pattern_label:filter_pattern
```

The `pattern_label` is a character string, which is displayed in the filter option menu, and `filter_pattern` is the actual string pattern used for name filtering. Multiple filter patterns are delimited by vertical bar (`|`). For example:

```
Spice3 output:*.raw|*.out
```

Multiple filter option menu pattern entries are delimited by a semicolon (`;`). For example:

```
Spice3 output:*.raw ; Spice listing:*.out
```

Chapter 19: Advanced Controls

Configuring "Send To" in the Windows Environment

If the `filter_label` field is omitted in an entry, the `filter_pattern` is used as the display string in the filter option menu.

5. Click **OK** or **Apply-save** to save your changes.

To delete a custom filter, select the filter from the Waveform File Filter menu and click **Delete**.

Configuring "Send To" in the Windows Environment

In the Windows O/S environment, Custom WaveView can be added to the Send To application list to support direct import of waveform files or the Custom WaveView session files using the **Send To** context menu.

To add Custom WaveView to the Send To application list, choose **Start > Run** from the main desktop screen and enter `sendto` to open the SendTo folder.

To support reading waveform files using the **Send To** menu, add a short cut in the `SendTo` folder to the Custom WaveView executable. The executable can be found at `C:/Program Files/Sandwork Design/CustomWaveView version/wv.exe`.

To support reading session files using the **Send To** menu, add a short cut in the `SendTo` folder to the Custom WaveView executable. Make sure that the `-x` option is appended to the end in the Target field in the shortcut property. The shortcut should be renamed to reflect the purpose of the Send To shortcut ("WV Session", for example).

Troubleshooting

This chapter contains information on troubleshooting topics.

This chapter contains the following major sections:

- [Linux Platforms](#)
- [X-Window Font Warnings](#)
- [XmTextField Font Warning](#)
- [Cannot Change Flexlm License File](#)

Linux Platforms

The following troubleshooting categories are available for Linux platforms:

- [Screen Refresh](#)
- [Alternative Methods for Backing-store Setup](#)
- [With GNOME](#)
- [Program Crashes During Startup on Linux Platforms](#)

Screen Refresh

When running in Linux 7.0 or higher, waveview screen content is not refreshed after being blocked by other windows.

The problem is related to the backing store setting of your X server. Waveview windows in Custom WaveView rely on the backing store function of X server to refresh screen content.

You have two options to solve this problem: Turn on the backing store setting of your X-window server, or turn on the **internal screen refresh** option in Custom WaveView Preference Settings.

To check the backing store setting of your X server, run the following:

```
xdpyinfo
```

If the following output appears, the backing store function of your X server is turned off:

```
options: backing-store NO, save-unders NO
```

Enable backing store of your X server by inserting the following line in the Screen section of your X server configuration file (normally `/etc/X11/XF86Config` or `/etc/X11/XF86Config-4`, but `backing_store` also works):

```
Option "backingstore"
```

Alternatively, you can run your X server with the option `+bs` to obtain the same result without editing your configuration file. Restart your X server, then run the `xdpyinfo` command again to verify that backing store is enabled. Recent Red Hat Linux distributions (7.0 and 7.1) include XFree86 4.x binaries with backing store disabled by default.

Backingstore might not work properly if overlay mode is enabled.

Alternative Methods for Backing-store Setup

To change the backing-store attribute, you must have root privileges.

Locate the XServers File

This file can be in a variety of locations. Most Linux distributions place the file in `/etc/X11/xdm/Xservers`. You might have to look around for your Xserver configuration files.

Enable Backing-store for Your Xserver

The following example is of a `/var/X11/xdm/Xservers` file:

```
:0 /usr/bin/X11/X +bs
```

The `+bs` server command-line option turns on the backing store.

Restart Your Xserver to Enable the Changes

This varies system to system, but usually logging out and back in again makes the program that starts the Xserver read in the Xservers file again. On Linux you can also restart the Xserver by pressing **Control + Alt + Backspace**.

With GNOME

If you are using GNOME, modify `/etc/X11/gdm/gdm.conf` and change the following lines from:

```
[servers]
0=/usr/bin/X11/X
```

to

```
[servers]
0=/usr/bin/X11/X +bs
```

Then, restart your Xserver.

Program Crashes During Startup on Linux Platforms

This problem might happen if the executable and Linux O/S version are not compatible. The crash occurs in the license initialization code used by the Flexlm license manager. Linux is known to have a wide range of kernel variations; crashes might occur if the system calls in the kernel is not compatible with the system calls required by the license manager code.

Our current release includes binary for Linux6, 7 and 8 O/S. Lower O/S executable might crash on a higher O/S. For example, the Linux 6 binary might crash on Linux 7/8. Make sure that you select a proper executable for your specific Linux O/S.

X-Window Font Warnings

When Custom WaveView is started on a remote host and displayed on a local X-Windows server. The application might start with some Motif Font warning

Chapter 20: Troubleshooting

XmTextField Font Warning

messages if the default character set cannot be found on the local display. The following warning messages are typical:

- Warning: Missing charsets in String to FontSet conversion
- Warning: Cannot convert string "-dt-interface system-medium-r-normal-l*-*-_*_*_*_*_*_*" to type FontSet
- Warning: Missing charsets in String to FontSet conversion
- Warning: Unable to load any usable fontset
- Warning:
Name: FONTLIST_DEFAULT_TAG_STRING
Class: XmRendition
Conversion failed. Cannot load font.
- Warning:
Name: FONTLIST_DEFAULT_TAG_STRING
Class: XmRendition
Conversion failed. Cannot load font.

As a result, text messages in some of the dialog windows might disappear. To solve this problem, follow the steps below to modify the X font resource settings.

1. Save the X setting by running:

```
xrdb -query > xrdb_org
```
2. Edit file "xrdb_org" to change the values of the following resources to use "fixed" (or 9x15) as the default font:

```
*FontList: fixed  
*buttonFontList: fixed  
*labelFontList: fixed  
*textFontList: fixed
```
3. After editing, run the following line to apply the change to your local X-
Windows server:

```
xrdb -load xrdb_org
```

XmTextField Font Warning

Symptom: Cannot type text in "text field" entry in dialog windows.

This problem is a Motif X-Server problem. The following warning message is issued in a non-English X-Windows environment.

Warning:

```
Name: td_text
Class: XmTextField
Character '\123' not supported in font. Discarded.
```

This warning message is usually issued multiple times when the file loading dialog window (or any other dialog window with a text field) is open. In the case of the file loading dialog window, file name text string is not automatically filled into the File Name field when a file entry is selected.

To solve this problem, the following UNIX environment variables need to be set:

```
setenv LANG C (or setenv LANG en_US.iso88591)
setenv LC_CTYPE C
```

Cannot Change FlexIm License File

The FlexIm license manager stores the location of the license file after the application successfully starts. The stored license file is used as the default license file the next time the application starts.

The stored setting needs to be removed when installing a new license file to a different location.

To remove the default setting on UNIX, edit the file `.flexImrc` in your home directory to remove the line starting with `SANDWORK_LICENSE_FILE`.

To remove the default setting on Windows, click the **Start** button, choose **Run ...**, and enter `regedit` to edit the Windows Registry. Browse to **HKEY_LOCAL_MACHINE > SOFTWARE > FLEXIm License Manager** and delete the `SANDWORK_LICENSE_FILE` entry.

Chapter 20: Troubleshooting
Cannot Change FlexIm License File

Preference Settings

This appendix contains information on the Custom WaveView preference settings.

Custom WaveView Preference Settings

The following preference settings are available for Custom WaveView:

- [General Settings](#)
- [Waveview Settings](#)
- [Panel Settings](#)
- [Color Settings](#)
- [Threshold Settings](#)

General Settings

The following general settings are available:

Option Name in GUI	Option Name	Value (Default)	Description
GUI Font	gui_font	(small)/large	Sets preferred GUI font size.
GUI Colors	gui_color	(bright)/dark	Select default GUI color tone.
Show Console Window	show_console	true/(false)	Displays the Console window.

Appendix A: Preference Settings

Custom WaveView Preference Settings

Option Name in GUI	Option Name	Value (Default)	Description
Automatic OK- button Pointer Centering	okbtn_autocenter	true/(false)	Set to true to enable mouse pointer auto-centering on OK button in confirmation dialog.
Suppress WaveView/Panel Delete Confirmation	delete_confirm	(true)/false	Set to false to disable confirm dialog for waveview/panel delete action.
Disable Waveform Marching Reloading Confirmation	reload_confirm	true/(false)	Disables the waveform marching reloading confirmation dialog box.
Number of Valid Digits	precision_digits	integer_value (3)	Sets the number of valid digits for all numeric values. ([3,10]).
Default Browser Width	browser_width	integer_value (250)	Sets window width for the browsers. (All five left browsers).
Replay Command Delay (ms)	replay_delay	integer_value (1)	Controls how fast the log is replayed.
Default Printout Title	print_title	string	Specifies the title displayed at the top of printouts.
Printer Devices	printer_device	printer_name (null)	Sets the default printer device in the Print Setup dialog.
UNIX Print Command	print_command	print command	Sets the user-defined print command (UNIX only).

Option Name in GUI	Option Name	Value (Default)	Description
Waveform File Filter	wdf_fsb_filter	"label:pattern"	Adds a user-defined filter pattern to the WDF loading dialog. This option can be used multiple times to add multiple filter patterns.

Waveview Settings

The following waveview settings are available:

Option Name in GUI	Option Name	Value (Default)	Description
WaveView Background	waveview_background	(black)/white	Sets the waveview background color.
Grid Brightness	grid_brightness	(normal)/low	Sets the background grid brightness for waveviews.
Cycle Color Per	cycle_color_by	panel/waveview/ (panelwaveview)	Selects color cycle mode. In the panel mode, the default line color restarts at color 0 for each panel.

Appendix A: Preference Settings

Custom WaveView Preference Settings

Option Name in GUI	Option Name	Value (Default)	Description
Left Button Default	left_button_action	(zoom)/cursor	Sets default action for left mouse button (LMB). In zoom mode, box-zoom operation is the default action when LMB is pressed and dragged. If LMB is released without any drag action, the main cursor (if it exists) is moved to the mouse pointer location. In cursor mode, pressing LMB moves the main cursor to the pointer location. In both modes, if LMB is pressed near a cursor, the cursor is grabbed and becomes the main cursor.
XY-Panel Drop Mode	init_xy_mode	(hvsel)/vonly/honly	Selects the default orientation for XY-panels.
Always Preload Waveforms to RAM	load_data_at_open	true/(false)	Sets WDF data loading schedule. If set to true, all waveform data are loaded when a file is initially open.
Always Remove Duplicated Signals in tr0 Files	remove_dupsig	true/(false)	Removes duplicated signal names in the signal browser.

Appendix A: Preference Settings
Custom WaveView Preference Settings

Option Name in GUI	Option Name	Value (Default)	Description
Case Sensitive HSPICE Waveform Files	case_sens_tro	(false)/true	Specifies case sensitivity for signal names in HSPICE tr0 files.
Flatten ai_pl File data segments when each segment has only one point	flatten_flags	(true)/false	Flattens the sweep signal in ai_pl files when each signal trace has only 1 point.
Add a point to extend waveform data to simulation max time for EPIC fsdb files	extend_waveform	(false)/true	Extends the EPIC-type waveforms in fsdb file to the maximum simulation time.
Convert S to Y/Z parameters in sc0 and TouchStone Files	convert_s_to_yz	(true)/false	Converts S parameters to Y/Z parameters in sc0 and TouchStone files.
Sort Hierarchy Names by Length in OutputView	smart_hsort	true/(false)	Sorts the hierarchy names by length in the OutputView.
Realtime Waveform Window Panning	real_time_scroll	(true)/false	Enables real-time scrolling of a zoomed panel if set to true.
Limit Side-Bar Grip to Bar Region	bar_grip_scroll	true/(false)	Limits slide-bar grip to the bar region if set to true.
Limit Phase of Complex Value Between (-180, 180)	clamp_ac_phase	(true)/false	Controls phase range of complex values. Phase is limited between -180/180 if set to true.

Appendix A: Preference Settings

Custom WaveView Preference Settings

Option Name in GUI	Option Name	Value (Default)	Description
Extend Signal Waveform to Fill X Range	auto_x_extend	true/(false)	Extends waveforms to fill the x-axis range.
Show Waveform X-Y Value Near Mouse Pointer	snap_marker	true/(false)	Enables waveform values mouse tracing cursor.
Display Logic Glitch (time-overlapping changes)	logic_glitch_highlight	(true)/false	Enables glitch highlight in logic panels if set to true.
Add H-Cursor with Add-Cursor Control Button	btn_add_cursor	true/(false)	Adds an H-cursor with the Add Cursor Control button
Enable Cursor Snap to Logic Value Change	logic_cursor_snap	(true)/false	Enables cursor snap function in logic panels if set to true.

Panel Settings

The following panel settings are available:

Option Name in GUI	Option Name	Value (Default)	Description
Set Grid Default to Off	grid_default	(on)/off	Sets default grid on/off mode.
Automatic Dual Y-Axes (X-Y Panels)	auto_y_axes	on/(off)	Sets automatic dual Y-axes for mixed I/V signals.
Automatic Y-Axis Label Width	auto_y_width	(off)/on	Automatically adjusts the Y-axis width based on the length of labels.

Appendix A: Preference Settings
Custom WaveView Preference Settings

Option Name in GUI	Option Name	Value (Default)	Description
Display Y-Axis Unit Label		(false)/true	Displays the Y-axis unit labels on a waveview.
Automatically Fit Analog Panels to Waveview Height	stack_auto_fit	(on)/off	Enables panel height auto-adjustment for non-logic panels in vertical waveviews.
Hide Dividers Between Stacked Panels	hide_panel_div	(false)/true	Hides the dividing lines between panels in stack mode.
Max. # of Visible Panels	max_visible_panels	integer_value (0)	Sets the maximum number of visible XY panels of vertical stack waveviews.
Minimum Analog Panel Height	min_panel_height	integer_value (20)	Sets minimum height for non-logic panels (in screen pixels) in vertical waveviews. [20,1000].
Analog Panel Height	analog_panel_height	integer_value (120)	Sets analog panel height for non-auto-height-fit mode.
Logic Panel Height	logic_panel_height	integer_value (24)	Sets logic panel height.
Row/Column Mode Default Panels Per Row	default_panels_perrow	integer_value (4)	Specifies the default number of panels per row in row/column mode.

Appendix A: Preference Settings

Custom WaveView Preference Settings

Option Name in GUI	Option Name	Value (Default)	Description
Row/Column Mode Minimum Panel Height	horz_panel_height	integer_value (80)	Specifies the minimum panel height in row/column mode.
Default Histogram Bin Size	default_hist_binsize	integer_value 1(0)	Sets the default bin size of histograms.
Signals Per Panel (d-n-d)	lines_per_panel	integer_value (0)	Sets number of lines per panel for signal allocation after the initial signal drag-and-drop operations. The default setting 0 causes all signals to be placed in one new panel.
Maximum Log Scale Span in Decades	max_log_span	(12)	Defines maximum log scale span in decades.
Smith Chart Characteristic Impedance	smith_char_impedance	real_value (50.0)	Sets the default characteristic impedance of Smith charts.

Signal Settings

The following signal settings are available:

Option Name in GUI	Option Name	Value (Default)	Description
Synchronize Signal Alias Between Browser and Display	sync_alias	(true)/false	Synchronizes the signal name alias between the signal browser and the name column in the canvas.
Add Brackets [] for Signal Alias Names	alias_bracket	(true)/false	Adds bracket to user-defined signal alias name.
Always Name Sweep Family Signals as Individual Traces	sweep_expand	(user)/always	Treats the sweep signal lines as individual or a family of lines.
Flatten Single Point Sweep Signals on 2D Panel	flatten_single_point_sweep	(true)/false	Flattens sweep signals that have only 1 point in each trace when plotting on a 2D panel.
Display Signal Name in Popup	signame_popup	true/(false)	Enables signal name popup tooltip.
Signal Name Width/Adjustment	signame_align	(left)/right/maxlen	Specifies how the width of a name column is displayed in a waveview.
Signal Name Content	signal_name	nameonly/(name+file)/name+path	Sets signal name mode in signal name column.

Appendix A: Preference Settings

Custom WaveView Preference Settings

Option Name in GUI	Option Name	Value (Default)	Description
Signal Hierarchy/ Name Order	signal_path	name+path/ (path+name)	Sets signal hierarchy path style.
Order Signals from Grouped Files	group_display_order	signal/(file)	Sets the signals (from grouped files) order during the drag-and-drop display operations.
Signal Name Font	signal_font	(normal)/large	Controls the font size of signal names.
Signal Mode Drag-n-Drop	signal_dnd_mode	(move)/copy	Moves or copies a signal when dragged and dropped.
Default Logic Value Type	logic_style_default	(vcd)/rtf	Specifies the text style for logic signal values.
Default AC Signal Display	def_ac_stack	(complex)/ magphase/ realimag/ mag+phase	Sets the default display mode for AC signals.
Default AC Signal	def_acx_type	(linear)/log/db/ db10	Sets the default X-axis type for AC signals.
Default AC Signal	def_acy_type	(linear)/log/db/ db10	Sets the default Y-axis type for AC signals.
Default TR Signal	def_trx_type	(linear)/log/db/ db10	Sets the default X-axis type for real type signals.

Appendix A: Preference Settings
Custom WaveView Preference Settings

Option Name in GUI	Option Name	Value (Default)	Description
Default TR Signal	det_try_type	(linear)/log/db/db10	Sets the default Y-axis type for real type signals.
Default FFT Signal	def_fft_xscale	linear/(log)/db	Sets the default X-axis type for FFT signals.
Default FFT Signal	def_fft_yscale	linear/log/(db)/db10	Sets the default Y-axis type for FFT signals.

Color Settings

The following color settings are available:

Option Name in GUI	Option Name	Value (Default)	Description
Use User-Defined Waveform Colors	user_colors	true/(false)	Selects the user-defined colors.
Use Thick Lines as Default Waveform Line Thickness	thick_line	true/(false)	Selects thick line as the default waveform line width.
Waveform Colors	user_rgb	R:G:B	A user-defined color.

Threshold Settings

The following threshold settings are available:

Option Name in GUI	Option Name	Value (Default)	Description
D2A Convert X State	d2a_xtol	(true)/false	Selects D/A conversion method for the X/Z logic states. X/Z is converted to low if set to true.
D2A X-Axis Range	d2a_fullxt	(true)/false	Selects the converted signals' x-axis range for D/A conversion. Current panel range is used if set to true.
D2A Threshold Levels	d2a_high_value	real_value (5)	Defines the analog level of the high logic state for D/A conversion.
D2A Threshold Levels	d2a_low_value	real_value (0)	Defines the analog level of the low logic state for D/A conversion.
D2A Rise/Fall Time	d2a_rise_slew	real_value (10ps)	Defines the rise slew for the D/A conversion process.
D2A Rise/Fall Time	d2a_fall_slew	real_value (10ps)	Defines the fall slew for the D/A conversion process.
A2D Threshold	a2d_single_threshold	(true)/false	Selects default A/D conversion method.
A2D Center Threshold	a2d_center_threshold	real_value (2.5)	Defines center threshold for the A/D conversion process.

Appendix A: Preference Settings
Custom WaveView Preference Settings

Option Name in GUI	Option Name	Value (Default)	Description
A2D Threshold Levels	a2d_high_threshold	Real_value (4.0)	Defines high threshold for the A/D conversion process.
A2D Threshold Levels	a2d_low_threshold	real_value (1.0)	Defines low threshold for the A/D conversion process.
Meter Default Levels	dm_high_logic	real_value (3.3)	Sets the default high logic level for dynamic meters.
Meter Default Levels	dm_low_logic	real_value (0.0)	Sets the default low logic level for dynamic meters
Meter Default Margins (%)	dm_high_margin	real_value (90.0)	Sets the default high slew margin for dynamic meters.
Meter Default Margins (%)	dm_low_margin	real_value (10.0)	Sets the default low slew margin for dynamic meters.
Meter level/ margin scale changes according to panel scale	SX_DM_DMScale	(false)/true	Specifies if the level and margin values for dynamic meters depend on the axis scale (for example, dB, log, linear).
Count floor noise components in SNR/SNDR calculation	SNR_inc_floor_noise	(false)/true	Counts the floor noise components in SNR and SNDR calculations.

Appendix A: Preference Settings
Custom WaveView Preference Settings

Numerics

2-D sweep panel 52

3-D sweep panel 52

A

AC analysis, in the ADC toolbox 181

AC coupled RMS measurement 103

ACE commands

using 199

ADC toolbox

AC analysis 181

coherent sampling 181

window sampling 183

AC dynamic characteristics 186, 198

analysis setup

loading 196

saving 196

batch-mode analyses, running 187

coherent sample only, invoking 189

DC static characteristics 186, 198

display controls 196

DNL 197

histogram 197

INL 197

power spectrum 197

sampled signal window 196

displays

DNL windows 185

histogram windows 185

INL windows 185

power spectrum 185

sampled signal window 184

DNL analysis

frequency sampling in 181

performing 179

results, exporting 196

sample points in 180

sine input 180

dynamic characteristics, AC 198

FFT results, exporting 196

generic versus coherent sampling 177

INL analysis

frequency sampling in 181

performing 179

results, exporting 196

sample points in 180

sine input 180

input signals, accepted 178

invoking 177

overview 178

ramp input 180

results, exploring as waveform data 184

sampling parameters

ramp input 195

selecting 195

sine input 195

setup 184

static characteristics, DC 198

ADMS file format 46

aliases, assigning to equations 124

amplitude measurement 103

analog to digital

multi-bit waveforms, converting 148

single-bit waveforms, converting 148

waveforms, converting 147

aperture, measuring in eye diagrams 117

attributes, modifying waveform 73

B

baseline measurement 103

batch mode waveform compare 157

bind keys

customizing 204

functions 205

other 210

top-menu operated 205

waveview toolbar 209

bitmap graphic file, saving from waveviews 18

bookmarks, adding 30

browser items, selecting 8

bus signals, mnemonic mapping for 50

Index

C

C

- color maps, private 2
- color schemes, for waveforms 72
- commands
 - ACE, using in SpiceExplorer 199
 - .MEASURE, applying 150
- complex signals
 - FFT of 147
 - setting plot mode for 67
- cpk measurement 99
- CSO ADC toolbox
 - input parameters 192
 - input signal requirements 189
 - input waveforms
 - preparing 189
 - sampling 191
 - invoking 189
 - test benches
 - input signal strength 192
 - input sine wave frequency 192
 - preparing 191
 - user interface 192
- cursors
 - active, definition of 76
 - adding 75
 - deleting 78
 - horizontal 77
 - in 2-D sweep panels 78
 - in 3-D sweep panels 78
 - in polar charts 78
 - in smith charts 78
 - jumping 76
 - linking from monitors 80
 - locking pairs of 77
 - moving 76

D

- damping ratio measurement 104
- data points
 - displaying in panels 63
 - reducing 152
- data, reading multi-trace 109
- data(x,y) measurement 84
- default log file directory, changing 10
- delay measurement 88
- DFT calculation, special note for 126
- DFT conversion 143

- difference measurement 85
- digital to analog waveforms, converting 150
- display preferences, setting for panels 67
- dpu measurement 100
- drag-n-drop, basic operation 9
- dual y-axes, using in panels 65
- duty cycle measurement 89
- dynamic meters
 - exporting measurements from 106
 - precision, setting 106

E

- ELDO COU file format 45
- ELDO WDB file format 46
- EMF files, saving from waveviews 18
- environment variables
 - setting 3
 - SW_QUEUE_LIC 5
 - SW_SX_FAST_COU 5
 - SW_SX_FAST_JWDB 5
 - SW_SX_HELP 5
 - SW_SX_INIT 5
 - SW_SX_INIT_DIR 5
 - SW_SX_LOG_DIR 5, 10
 - SW_SX_MASKFILE 5
 - SW_SX_ORG_ADC 5
 - SW_SX_TIMEOUT 5
 - SW_SX_TK_LIB 5
 - SW_SX_TMP_DIR 6
 - SW_SX_USE_AMAP 6
 - SW_WLF_READER 6
 - SX_HOME 6
- equation builder
 - aliases, assigning to equations 124
 - DFT, special note for 126
 - equations, modifying 126
 - FFT, special note for 126
 - functions, supported 127
 - logic operations, supported 130
 - macros, defining 125
 - measurement functions, supported 135
 - multi-trace waveforms, calculating 126
 - opening 123
 - operators, supported 127
 - result stack, viewing 124
 - RF functions, supported 129
 - signals, adding 123

- waveform functions, supported 131
- waveforms, calculating multi-trace 126
- equations
 - assigning aliases to 124
 - modifying 126
- exporting waveform data 156
- eye diagrams
 - configuring 116
 - creating 115
 - jitter histograms, generating from 117
 - measuring 117
 - panel 54
 - unfolding 115
 - waveform points, tracing in 116

F

- FFT
 - calculating 126
 - converting 143
- file browser filters, customizing 213
- file formats
 - ADMS 46
 - ELDO COU 45
 - ELDO WDB 46
 - fsdb 47
 - PSF 46
 - supported 34
 - WDF 47
- file grouping 28
- file sets
 - creating from multiple-file sweep analyses 110
 - creating general 29
- fixed x-axis full scale, using in panels 64
- FlexIm license file, cannot change 219
- formats, supported 34
- frequency domain measurements 97
- frequency measurement 91
- frequency value measurement 104
- frequency versus time measurement 90
- fsdb file format 47
- functions
 - measurement, supported 135
 - supported in equation builder 127
 - waveform, supported 131

H

- height

- adjusting in panels 66
 - fitting to full in panels 66
- highpass measurement 97
- histogram panel 54
- horizontal cursors, switching to 77
- horizontal row and column mode 14

I

- importing waveforms 19
- input signal strength, in CSO ADC toolbox 192
- input sine wave frequency, in CSO ADC toolbox 192
- inputting textual data 40
- installing SpiceExplorer 1
- installing WaveView Analyzer 1
- IP2 measurement 105
- IP3/SFDR measurement 105

J

- jitter histograms, generating from eye diagrams 117
- jitter measurement 92
- jitter versus time tool
 - invoking 153
 - output options 155
 - reference edges, selecting 154
 - reference signals, selecting 154
 - target signal, specifying 154
 - types of evaluations 155
- job sessions
 - loading setup from other viewer tools 204
 - restoring 204
 - saving 203

L

- length measurement 86
- level measurements 102
- log file directory, changing default 10
- logarithmic scales, controlling in panels 64
- logic operations, supported in equation builder 130
- logic panel 50
- lowpass measurement 98

M

- macros, defining in equation builder 125

Index

N

- mask files
 - example 119
 - incorporating 118
 - syntax 118
 - user-defined, adding 118
 - mean measurement 101
 - mean+3std_dev measurement 101
 - mean-3std_dev measurement 101
 - .MEASURE commands
 - applying 150
 - measurements
 - AC coupled RMS 103
 - amplitude 103
 - baseline 103
 - cpk 99
 - damping ratio 104
 - data(x,y) 84
 - delay 88
 - difference 85
 - dpu 100
 - duty cycle 89
 - favorites
 - adding 105
 - removing 105
 - frequency 91
 - frequency domain 97
 - frequency value 104
 - frequency versus time 90
 - functions, supported in equation builder 135
 - general 84
 - highpass 97
 - IP2 105
 - IP3/SFDR 105
 - jitter 92
 - length 86
 - level 102
 - list of supported 81
 - lowpass 98
 - mean 101
 - mean+3std_dev 101
 - mean-3std_dev 101
 - natural frequency 104
 - overshoot 92
 - P1dB 104
 - quality factor 104
 - rise/fall time 93
 - RMS 103
 - S domain 104
 - settle time 94
 - slew rate 95
 - statistical 99
 - std_dev 102
 - stopband 98
 - time domain 87
 - topline 103
 - undershoot 96
 - y diff 87
 - y range 87
 - yield 102
 - mnemonic mapping for bus signals 50
 - monitors
 - adding 80
 - deleting 80
 - linking to cursors 80
 - list of supported 79
 - reconfiguring 80
 - mouse buttons, using in SpiceExplorer 8
 - multi-file PSF sweep analyses, loading 110
 - multi-trace data, reading 109
 - multi-trace signals
 - breaking 111
 - displaying 110
 - sweeping parameter, selecting 112
 - waveforms, calculating for 111
 - waveforms, filtering 112
 - x-axis, using as 113
 - multi-trace waveforms
 - calculating 126
 - displaying 53
- ### N
- natural frequency measurement 104
 - numerical values, supported scale units 9
- ### O
- operators, supported in equation builder 127
 - output files, loading into Virtuoso 45
 - output view browser
 - 2nd sweeping variable, defining 23
 - bookmarks, adding 23
 - dragging and dropping items from 9
 - extracting display layout information 23
 - file paths, showing full 21
 - files
 - closing all in 22

- closing selected in 22
 - grouping 22
- HSPICE measure tool, starting 23
- introduction 21
- .MEASURE commands, applying 23
- multi-member file set, creating 22
- opening new 22
- signals
 - displaying 27
 - filtering 24
 - name sorting method 24
 - switching name display 24
 - viewing all or filtered 24
- sweep display filter 23
- title
 - editing 23
 - hiding 23
 - showing 23
- waveforms, reloading 22
- WDF properties, displaying 23
- overshoot measurement 92

P

- P1dB measurement 104
- panels
 - 2-D sweep 52
 - 3-D sweep 52
 - basic operations 57
 - copying 59
 - data points, displaying 63
 - deleted panels, pasting 59
 - deleting 59
 - dual y-axes, using 65
 - eye diagram 54
 - fixed x-axis full scale, using 64
 - grid, controlling 64
 - grouping 59
 - height
 - adjusting 66
 - fitting to full 66
 - histogram 54
 - introduction to 49
 - logarithmic scales, controlling 64
 - logic 50
 - moving 59
 - plot mode, setting for complex signals 67
 - polar plot 52
 - selecting 58
 - separator 54
 - settings 63
 - smith chart 51
 - ungrouping 60
 - un-zooming 62
 - vector length, setting 67
 - vector radix, setting 67
 - waveform display preferences, setting 67
 - x zoom 61
 - x-y 49
 - x-axis variable, changing 55
 - y zoom 61
 - zooming
 - in or out 60
 - in x/y mode 61
 - ranges, setting manually 62
 - redoing 62
 - undoing 62
 - using sliders for 62
- parameters
 - sweeping, selecting 112
- parametric plots
 - for HSPICE .ALTER simulations 153
 - generating 153
- piecewise-linear waveforms, reducing data
 - points in 152
- platforms, supported 1
- plots
 - generating parametric 153
 - parametric for HSPICE .ALTER simulations 153
- polar plot panel 52
- PostScript layout, printing in 201
- preferences
 - for WaveView Analyzer 221
 - color 231
 - general 221
 - panel 226
 - signal 229
 - threshold 232
 - waveview 223
 - setting 212
 - vector length 67
 - waveform display 67
- printing waveforms 201
- private color maps, using 2
- PSF file format 46
- PSF sweep analyses, loading multi-file 110
- PWL source editor

Index

Q

- files
 - checking for errors 173
 - closing 173
 - exporting 173
 - opening 173
- patterns
 - inserting 174
 - shifting 175
- points
 - deleting 175
 - inserting 174
- sources
 - adding new 174
 - deleting 174
 - displaying 174
 - modifying 174
- using 173
- filtering in output view 24
- finding 30
- input, accepted in ADC toolbox 178
- multi-trace
 - breaking 111
 - displaying 110
 - filtering 112
 - sweeping parameter, selecting 112
 - waveforms, calculating for 111
 - x-axis, using as 113
- reference, selecting for jitter versus time 154
- target edges, specifying for jitter versus time 154
- target, specifying for jitter versus time 154
- time domain, converting to 170
- updating
 - automatically 28
 - manually 27

Q

quality factor measurement 104

R

- ramp input parameters, selecting in ADC toolbox 195
- reference edges, specifying for jitter versus time 154
- result stack, viewing 124
- RF functions, supported in equation builder 129
- rise/fall time measurement 93
- RMS measurement 103

S

- S domain measurements 104
- sampling parameters, selecting in ADC toolbox 195
- scale units, supported 9
- screen bitmap, saving from waveviews 18
- separator panel 54
- settle time measurement 94
- signal finder, invoking 30
- signals
 - adding to equation builder 123
 - aliases, adding 71
 - bus, mnemonic mapping for 50
 - complex, FFT of 147
 - displaying 27
 - filtering 26
- sine input parameters, selecting in ADC toolbox 195
- slew rate measurement 95
- smith chart panel 51
- SNR, calculating using FFT 146
- source, finding for waveform 70
- spectrum panel, viewing 146
- SpiceExplorer
 - closing 9
 - installing 1
 - invoking 3
 - supported platforms 1
- statistical measurements 99
- std_dev measurement 102
- stopband measurement 98
- SW_QUEUE_LIC 5
- SW_SX_FAST_COU 5
- SW_SX_FAST_JWDB 5
- SW_SX_HELP 5
- SW_SX_INIT 5
- SW_SX_INIT_DIR 5
- SW_SX_LOG_DIR 5, 10
- SW_SX_MASKFILE 5
- SW_SX_ORG_ADC 5
- SW_SX_TIMEOUT 5
- SW_SX_TK_LIB 5
- SW_SX_TMP_DIR 6
- SW_SX_USE_AMAP 6
- SW_WLF_READER 6

sweep analyses, creating a file set from multiple
110

SX_HOME 6

syntax

for mask files 118

T

text labels, adding to waveforms 73

textual data, reading 40

THD, calculating using FFT 146

time domain

converting signals to 170

measurements 87

topline measurement 103

troubleshooting

cannot change license file 219

on Linux platforms 215

backing-store setup 216

crashes at startup 217

GNOME 217

screen refresh 215

on x windows platforms

font warnings 217

XmTextField font warning 218

U

undershoot measurement 96

UNIX platforms, printing on 202

un-zooming 62

V

vector length, setting in panels 67

vector radix, setting in panels 67

vector-based graphic file, saving from waveviews
18

vertical row and column mode 14

vertical stack mode 12

Virtuoso, loading multiple output files into 45

W

waveform files

compressed, reading 34

WDF 35

converting files to 35

converting with lossless compression 36

converting with lossy compression 36

data reduction 36

from NC-Verilog 39

from Spectre 39

from UltraSim 39

from Verilog-XL 39

generating from HSIM 37

generating from NanoSim 37

waveform marching 28

waveforms

adding to bookmarks 30

analog to digital

converting 147

multi-bit, converting 148

single bit, converting 148

attributes, modifying 73

clearing 28

color schemes 72

global mode 72

local mode 72

colors, custom 72

comparing

in batch mode 157

data, exporting 156

deleting highlighted 70

digital to analog, converting 150

display preferences, setting for panels 67

DNL/INL/FFT results, exporting data from ADC
toolbox 184

functions, supported in equation builder 131

grouping 28

grouping highlighted 70

highlighted 69

deleting 70

grouping 70

ungrouping 70

importing 19

on Windows using "send to" 214

loading

connecting split files 20

converting to WDF 20

pre-loading to RAM 20

reading multiple simulation run data 20

within specified x-axis range 20

multi-trace

calculating 126

displaying 53

opening 19

piecewise-linear

Index

X

- reducing data points 152
- post-processing
 - complex signals, FFT of 147
 - DFT conversion 143
 - FFT conversion 143
 - SNR, calculating using FFT 146
 - spectrum panel, viewing 146
 - THD, calculating using FFT 146
- printing 201
 - on UNIX platforms 202
 - on Windows platforms 202
 - PostScript layout 201
- scanning 71
 - configuration 71
- source of, finding 70
- text labels, adding 73
- ungrouping highlighted 70
- updating
 - automatically 28
 - manually 27
- WaveView Analyzer
 - closing 9
 - configuring manually 212
 - installing 1
 - invoking 3
 - supported platforms 1
- waveviews
 - active 16
 - adding new 15
 - alias names, adding to signals in 71
 - changing tabbed order 17
 - changing titles 17
 - contents, clearing 17
 - deleting 16
 - docking 15
 - horizontal row and column mode 14
 - introduction 12
 - refreshing the display 16
 - renaming 16
 - saving screen bitmap from 18
 - selecting 16
 - synchronizing 18
 - text labels, adding 73
 - undocking 15
 - undoing operations in 17
 - updating automatically 28
 - updating manually 27
 - vertical row and column mode 14
 - vertical stack mode 12
- WDF files 35
 - converting to 35
 - converting with lossless compression 36
 - converting with lossy compression 36
 - data reduction 36
 - from NC-Verilog 39
 - from Spectre 39
 - from UltraSim 39
 - from Verilog-XL 39
 - generating from HSIM 37
 - generating from NanoSim 37
 - special note for 47
- Windows platforms
 - configuring "send to" 214
 - printing on 202

X

- x zoom 61
- x-axis variable, changing in x-y panels 55
- x-y mode, zooming in 61
- x-y panel 49
 - x-axis variable, changing 55

Y

- y diff measurement 87
- y range measurement 87
- y zoom 61
- yield measurement 102

Z

- zooming
 - in panels 60
 - in x-y mode 61
 - redoing 62
 - undoing 62
 - un-zooming 62
 - x-zoom 61
 - y-zoom 61
 - zoom ranges, setting manually 62
 - zoomed panels, using sliders in 62